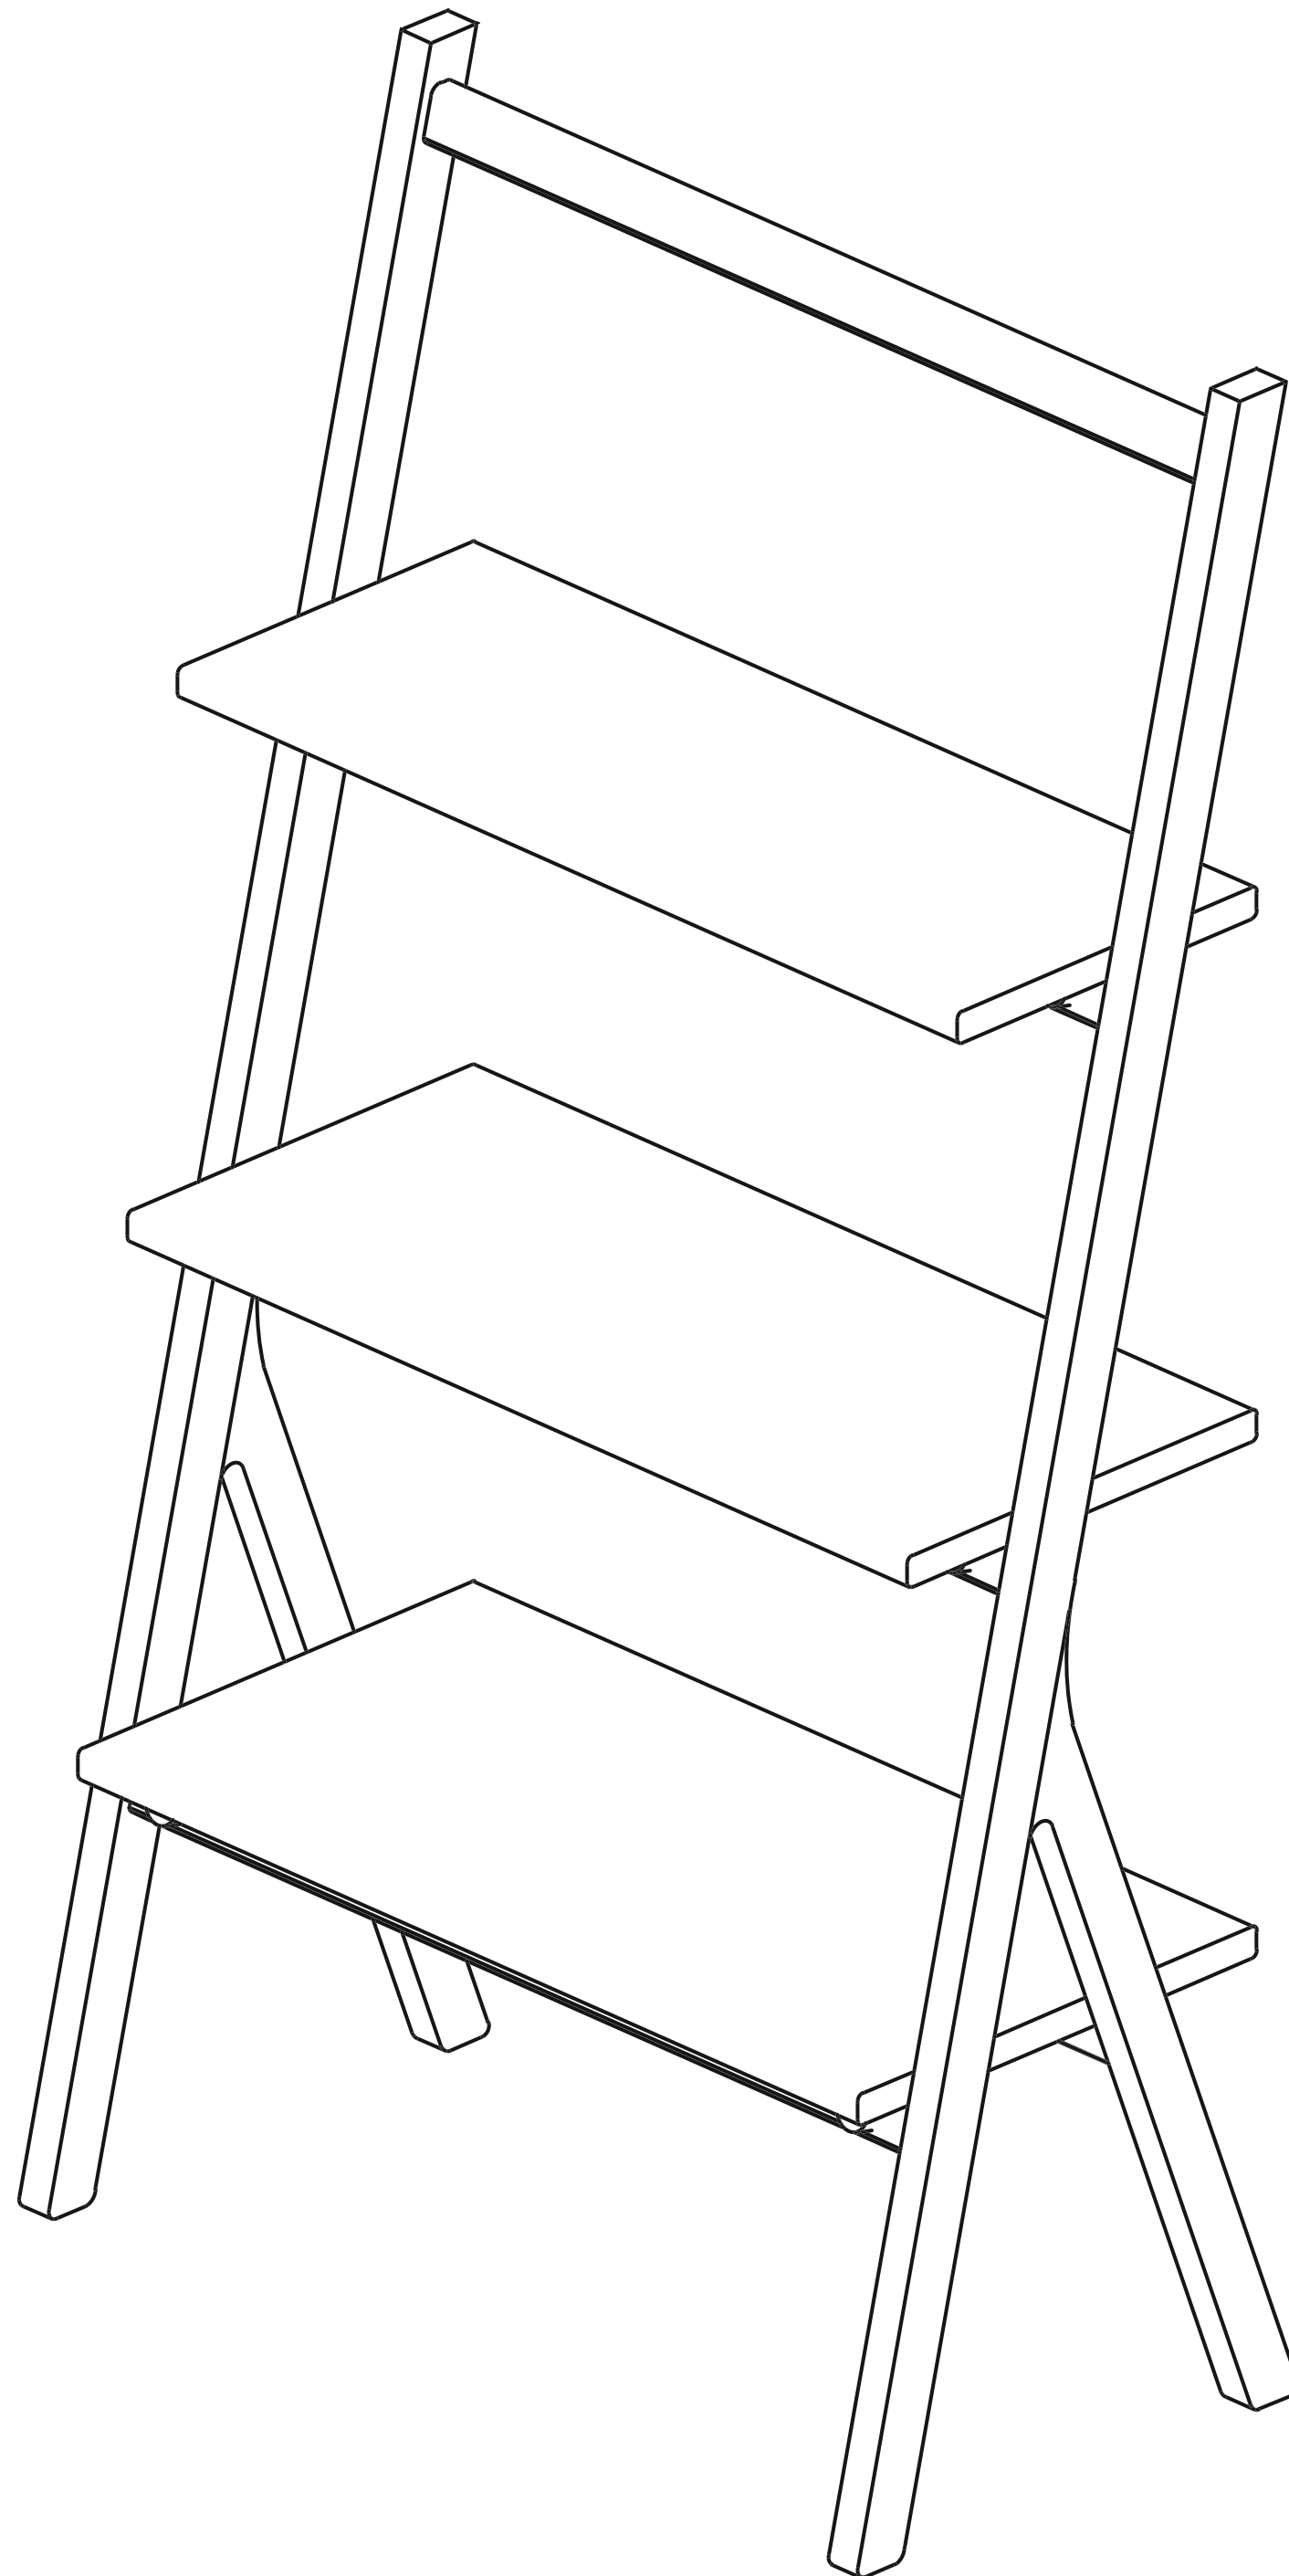 


ASSEMBLY INSTRUCTIONS

SONOMA FURNITURE COLLECTION

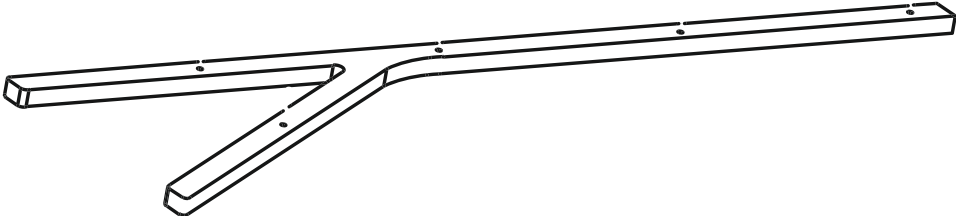 
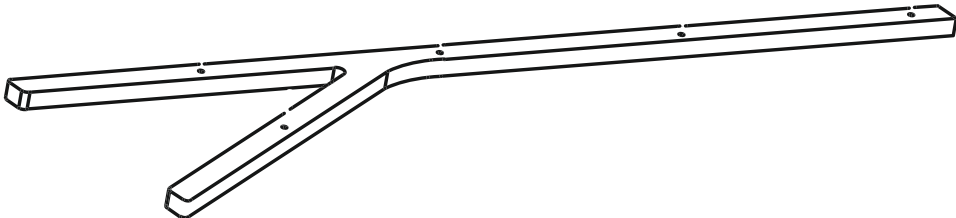 
 
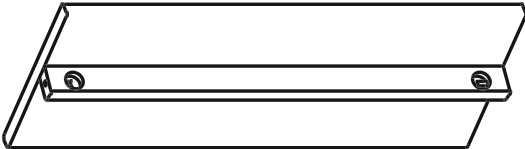 
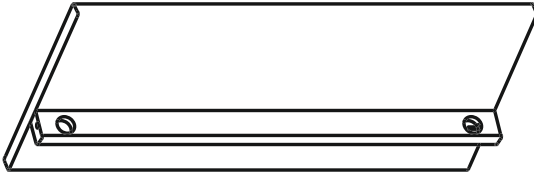 
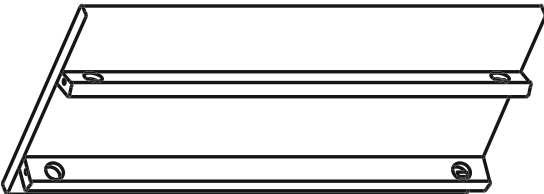 
Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.



ASSEMBLY INSTRUCTIONS

SONOMA FURNITURE COLLECTION

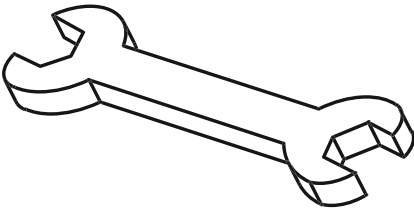 
Component List

Label	Picture	Description	Qty
A1		Leg	1
A2		Leg	1
B		Top Support	1
C		Shelf	1
D		Shelf	1
E		Shelf	1

Hardware List

Label	Picture	Description	Qty
H1		Large Flat Washer M8 x 25 mm	10
H2		Hexa Nut	10
H3		Metal Rod	10

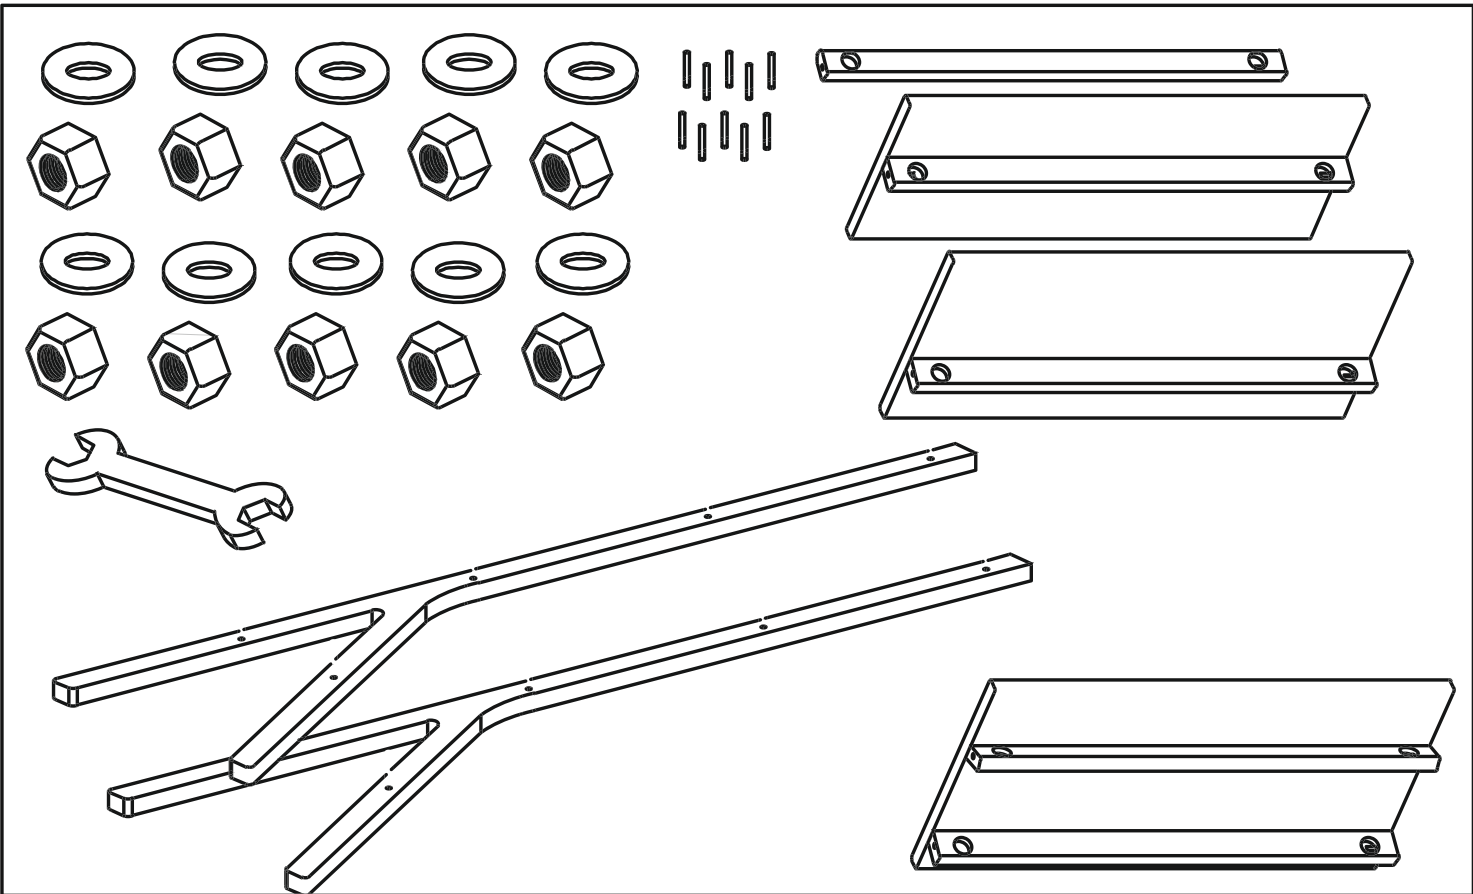 
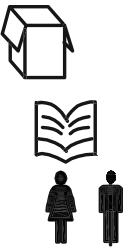 
Tool List

Label	Picture	Description	Qty
T1		Spanner	1

Assembly Prep

Before Beginning:

- * Save all packaging until finished.
- * Read Instructions, cover to cover.
- * Have 2 adults on hand for assembly.

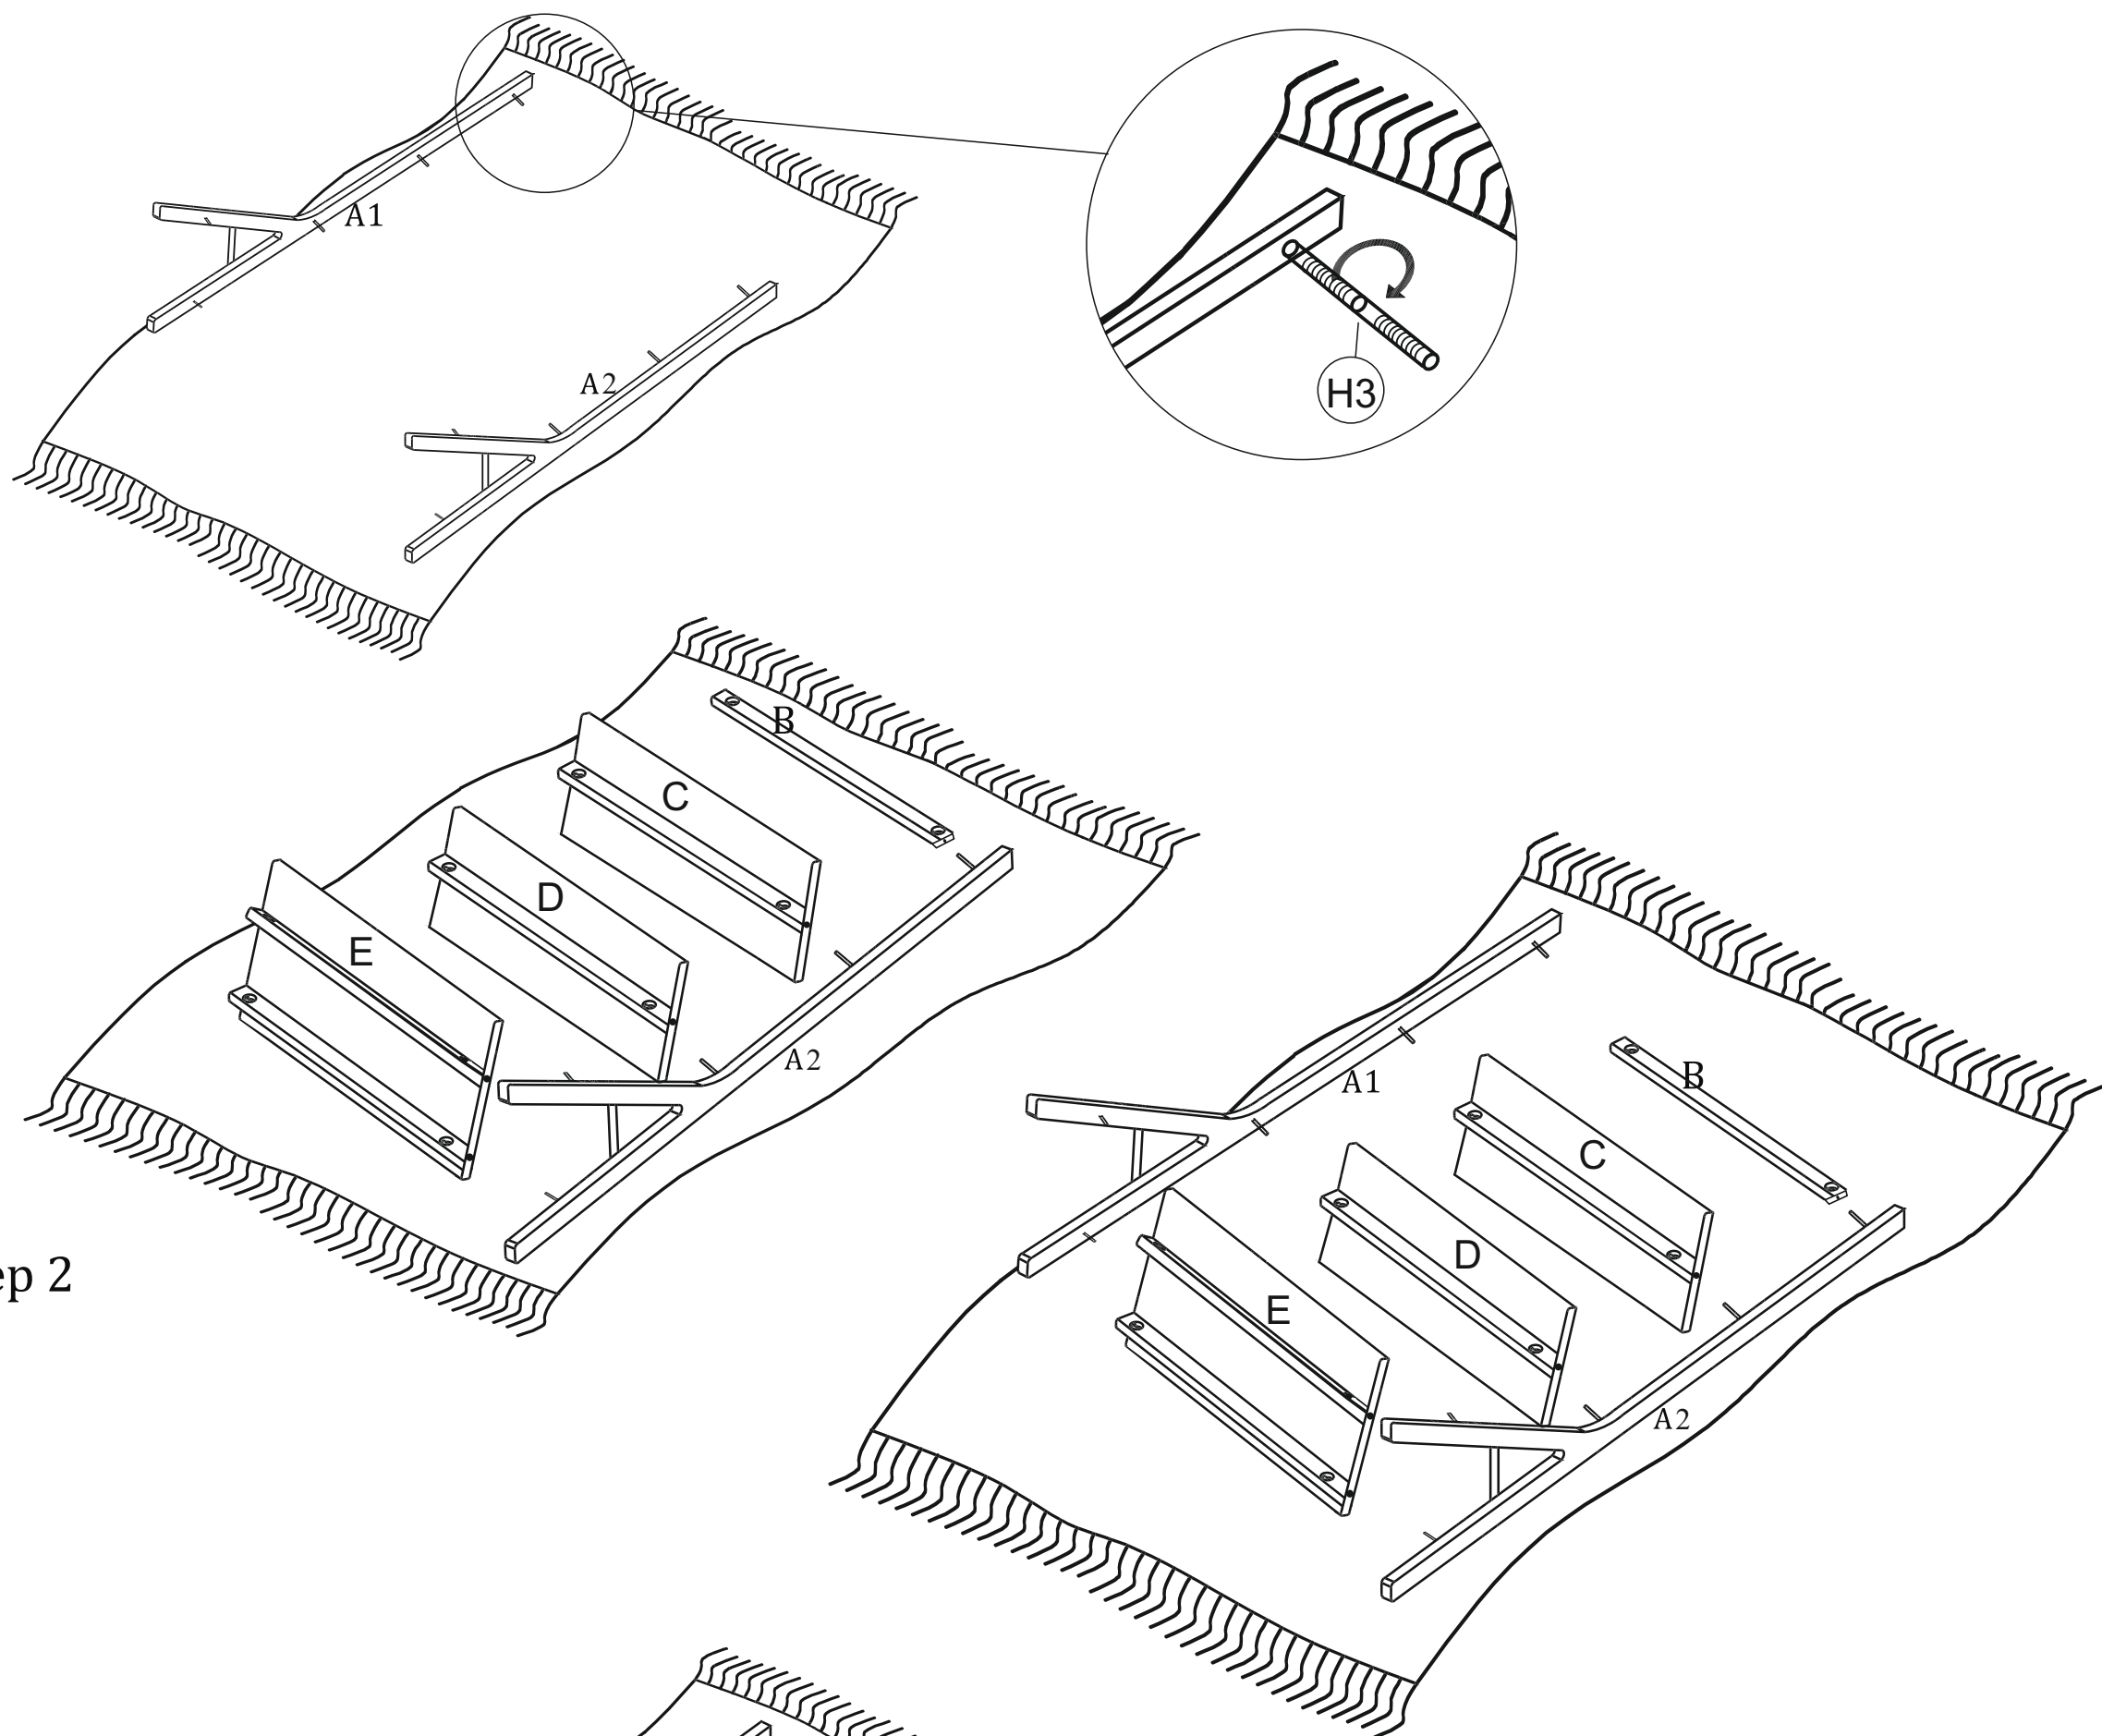 


ASSEMBLY INSTRUCTIONS

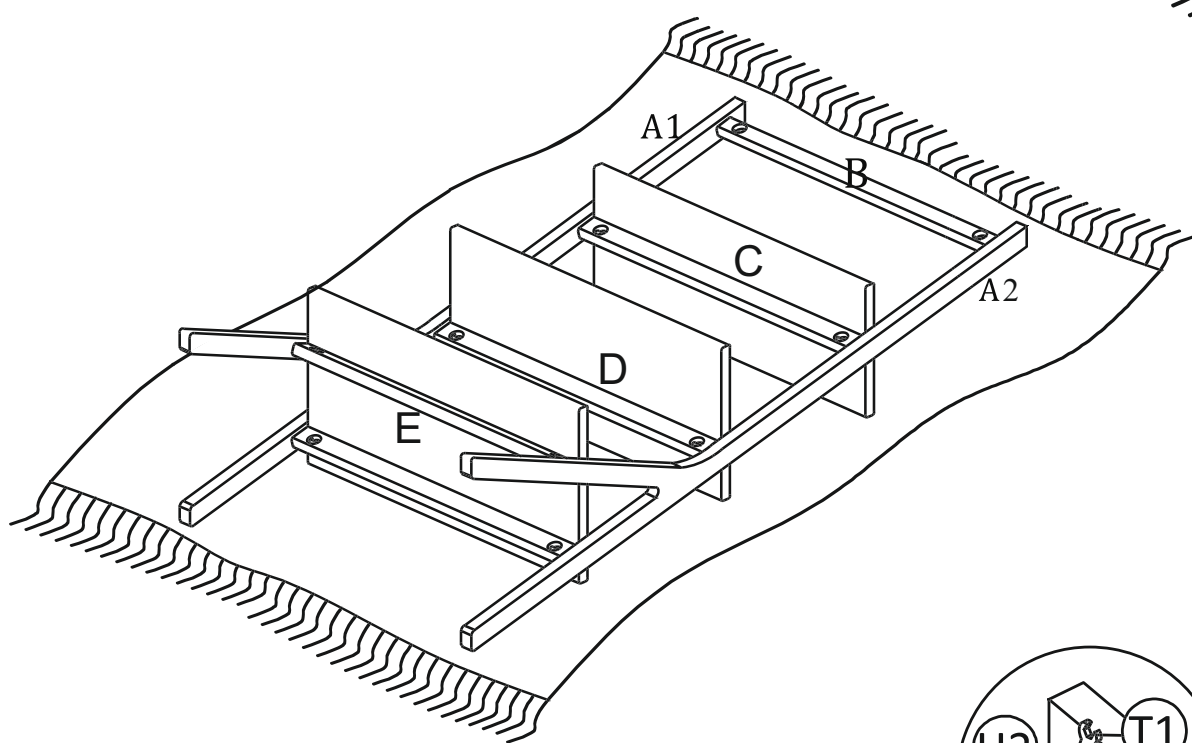 
SONOMA FURNITURE COLLECTION

Assembly Steps

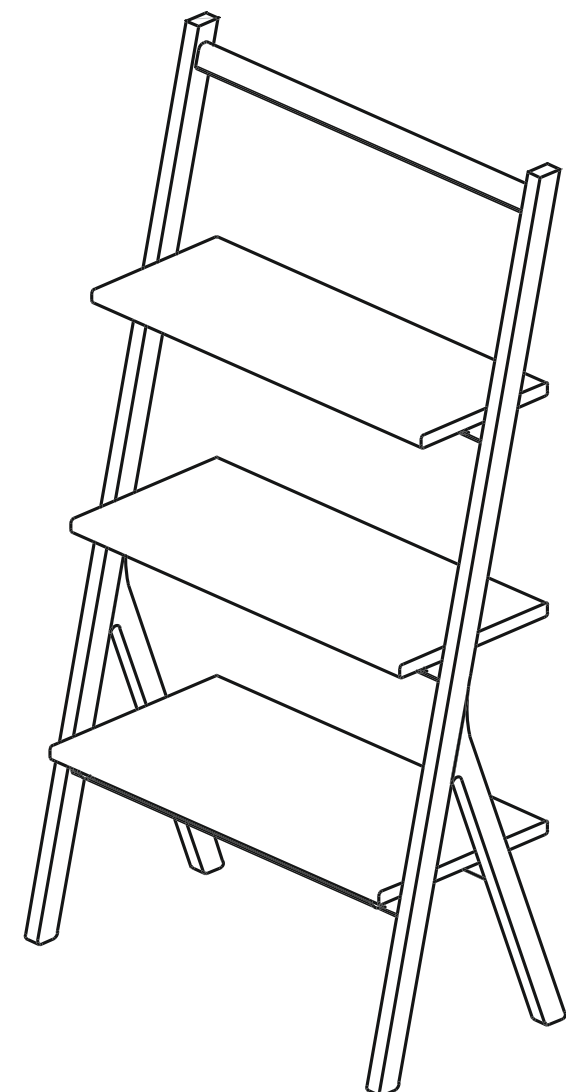 
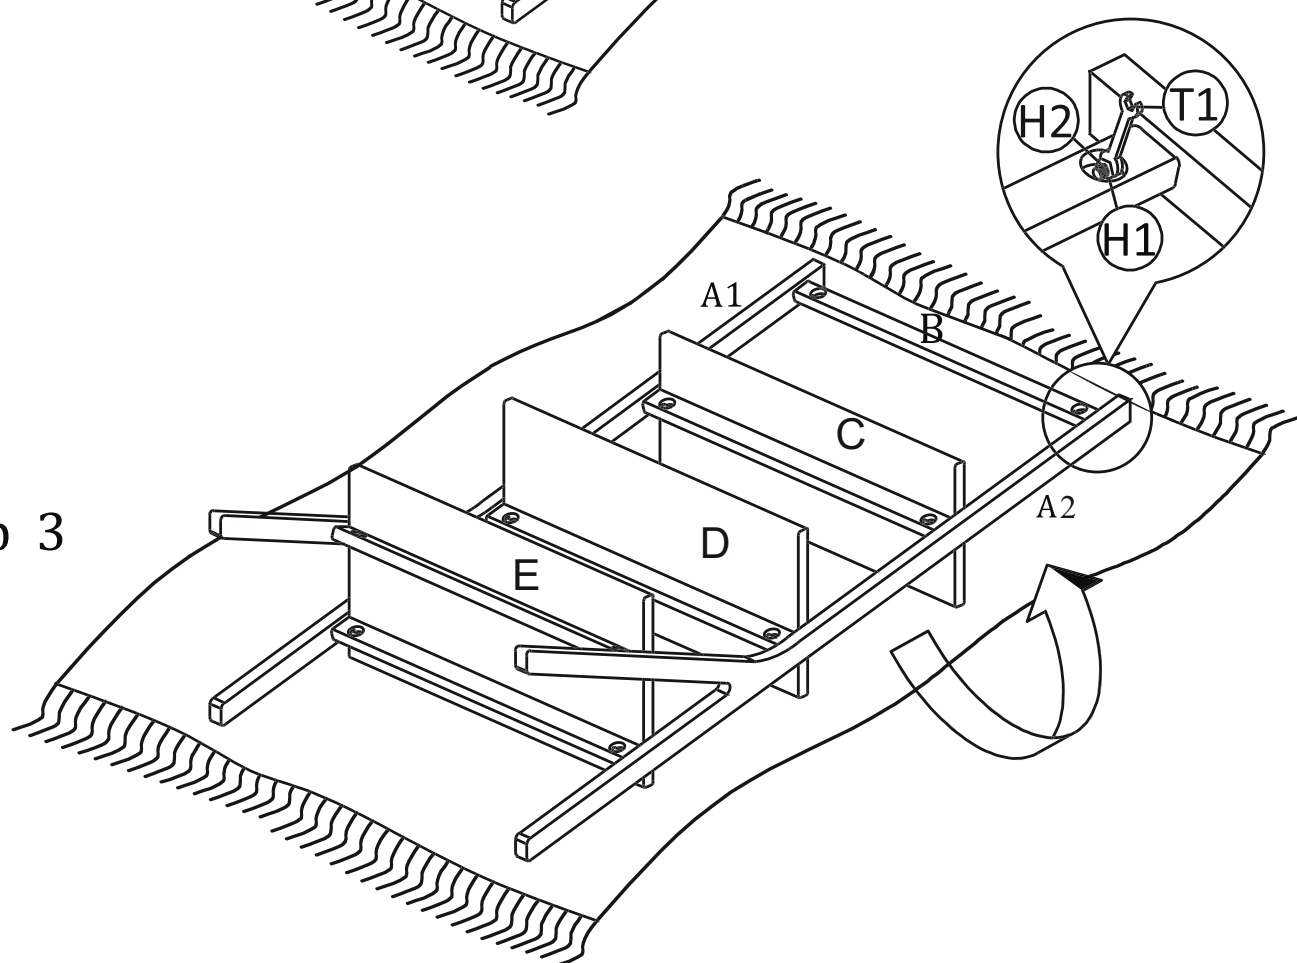 
Step 1: Gently lay each piece on a soft surface such as a rug to avoid scratching the item.



Step 2



Step 3



INSTRUCTIONS FOR SAFETY ANCHOR



WARNING:

It is STRONGLY RECOMMENDED that you ANCHOR this product .

Toppling furniture can cause serious injuries and death.

This product has been fitted with an anchor bracket. To prevent your furniture from tipping forward it is strongly recommended that you **securely attach this product** to a wall or other solid surface, using the anchor straps/brackets provided and appropriate fixings. Screws to fix into the wall are not included. Please purchase suitable screws from your local hardware store taking into consideration the material and thickness of the wall.

IMPORTANT:

Regularly check that anchors are securely maintained.

Use safety **drawer locks** to prevent children climbing.

Stability of tall items may be affected by thick pile carpet or uneven floors.

Do not place unanchored televisions on furniture.

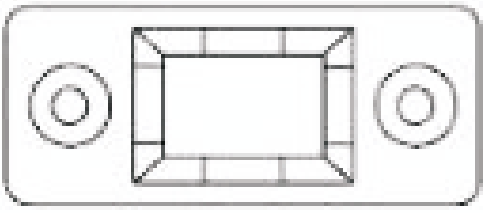 


CAUTION:

For your safety when attaching the anchor fixings, please note the following:

- Check for any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)
- Walls are constructed from different materials, for example, masonry (solid brick) or plasterboard lined cavity walls (hollow). It is important that you use the appropriate wall fixings for your wall type.
- Your local hardware store will have the necessary drills and fixings and can offer advice if needed. If in doubt, engage the services of a qualified tradesperson to install and anchor the product.

SAFETY ANCHOR ATTACHMENT

Hardware List

Part	Picture	Description	Qty
A		Wall Bracket	2 Pcs
B		Strap	2 Pcs
C		Stud Mounting Screws	4 Pcs

Bracket supplied in hardware kit to be fixed to the wall with screw (before attaching, please check with your local hardware store if screws supplied are suitable for the type of wall surface you intend on attaching to.)

Align the pre attached bracket on the furniture with the bracket on the wall. Thread and strap through the bracket shown and tighten.

Example of attachment to wall:

