

ASSEMBLY INSTRUCTIONS


AK RUBY'S OPEN DOLL HOUSE

adairs kids


Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or a rug to prevent from being scratched.

3+

 
Ax1

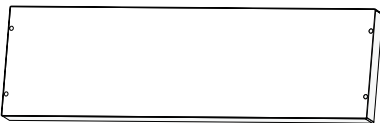


Bx1

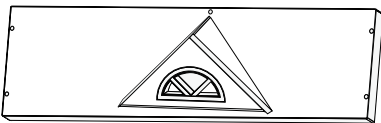 


Cx1

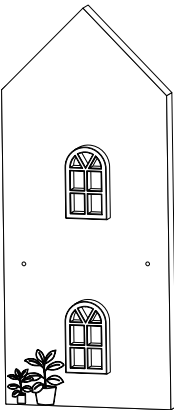 


Dx1

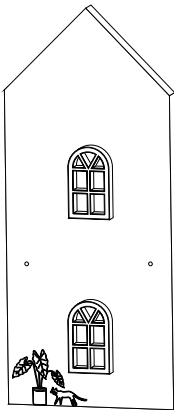 


Ex1

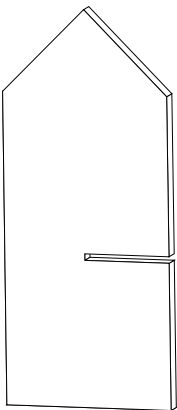 


Fx1

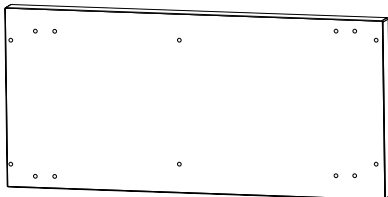 


Gx1

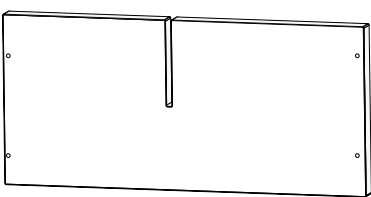 

Hx1

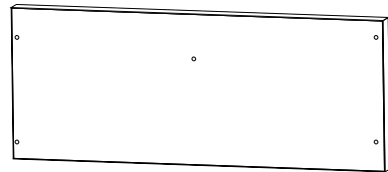 


Ix1

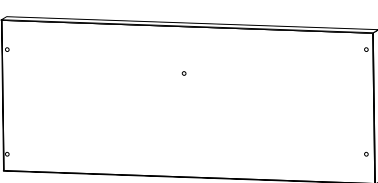 

Jx4



 ax36

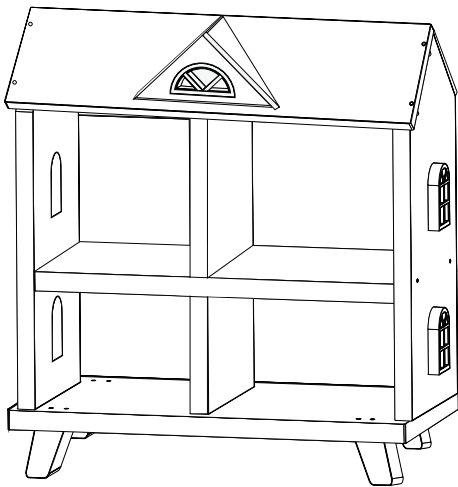

WARNING:

 
Assembly by an adult.
Contains small parts.



ASSEMBLY INSTRUCTIONS


AK RUBY'S OPEN DOLL HOUSE

STEP1

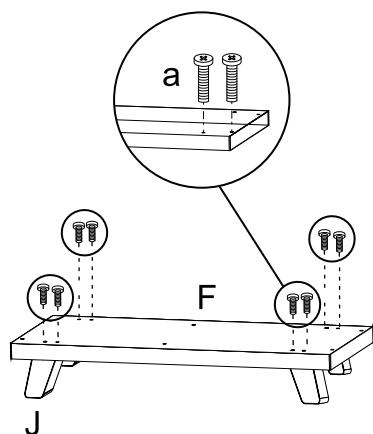


a  x8

 STEP2

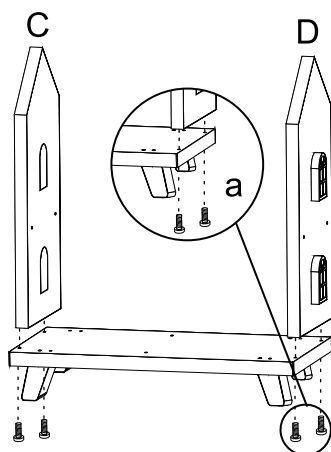


a  x4

 STEP3

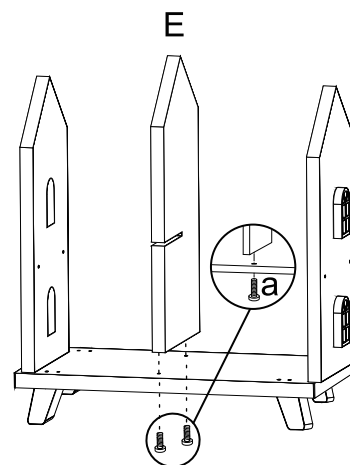


a  x2

 STEP4

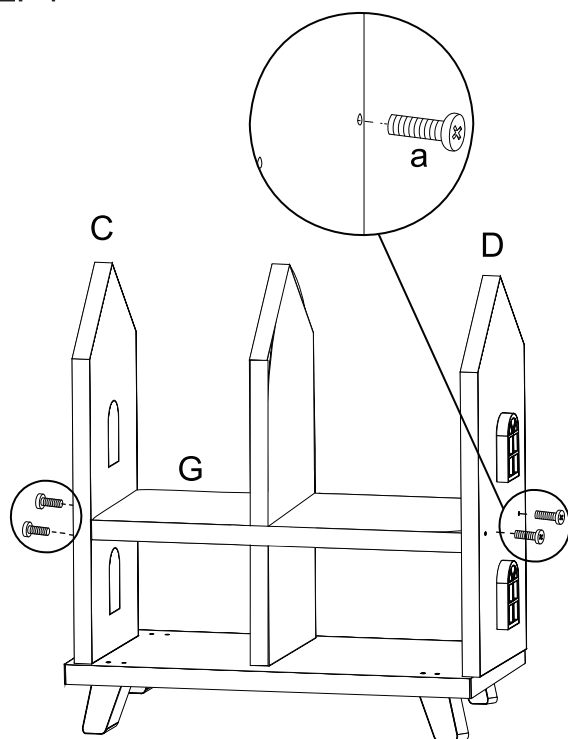

a  x4

 STEP5

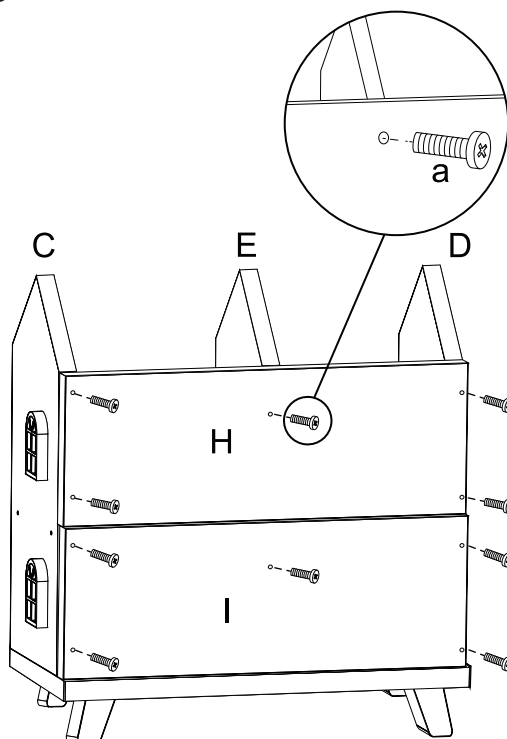



a  x10

ASSEMBLY INSTRUCTIONS


AK RUBY'S OPEN DOLL HOUSE

 STEP6

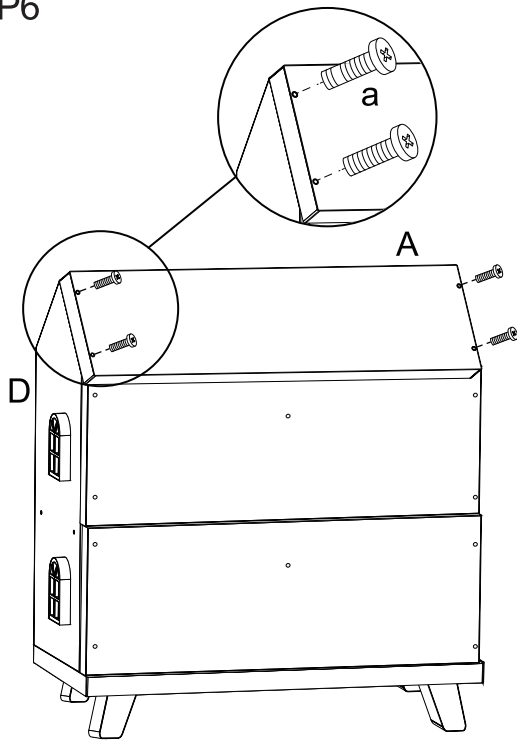

a  x4

 STEP7

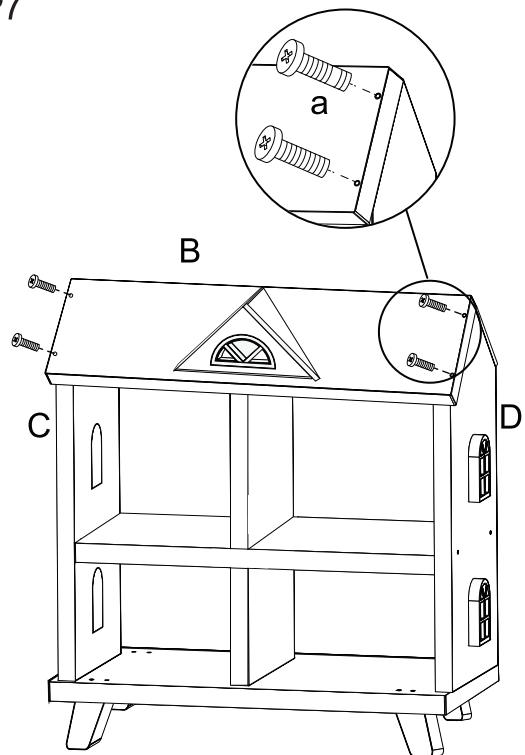

a  x4

