

Deluxe Tree (7ft & 8ft)

CHRISTMAS TREE TROUBLESHOOTING

Take out the tree stand, pull apart the legs of stand so that they are "X" shaped as **Fig.1**
Place it in position on a flat surface.

Take the bottom section of the tree, insert the pole with tapered end into the tree stand, and tighten the 3 screws on the stand.

Take each section of tree and insert the pole in to the section beneath, as shown in **Fig 2**.

The branches are hinged and will fold down easily, as shown **Fig. 3**.

Each tree section has pre-attached string lights with connector plugs labelled A,B,C,D. First connect plug A to A, located in the top section of the tree (**Fig 2**).

Connect plugs B, C, and D, to the corresponding plug leading from the pedal switch.

Connect the pedal switch to the transformer.

Finally shape the tree by arranging the tips on the branches as shown **Fig.4**. to give the desired full and bushy effect.

NOTE - inside each section of the deluxe tree there are additional plugs that are not labelled with letters. These should NEVER be disconnected from each other - it is not necessary for disassemble the tree, and it will be difficult to reconnect the unlabelled plugs in the correct sequence.

