

# Whimsical Pink Tree

## CHRISTMAS TREE TROUBLESHOOTING

Take out the tree stand, pull apart the legs of stand so that they are "X" shaped as **Fig.1**  
Place it in position on a flat surface.

Take the bottom section of the tree, insert the pole with tapered end into the tree stand, and tighten the 3 screws on the stand.

Take each section of tree and insert the pole in to the section beneath, as shown in **Fig 2**.

The branches are hinged and will fold down easily, as shown **Fig. 3**.

Each tree section has pre-attached string lights with connector plugs labelled A,B,C,D.

Connect plug A from the top section, to plug A from the middle section.

Connect plug B from the middle section, to plug B from the bottom section.

Connect plug C from the bottom section, to the plug that leads to the transformer which plugs in to the wall.

Finally shape the tree by arranging the tips on the branches as shown **Fig.4**. to give the desired full and bushy effect.

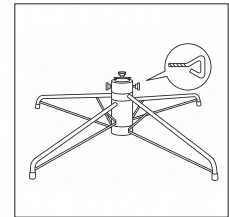
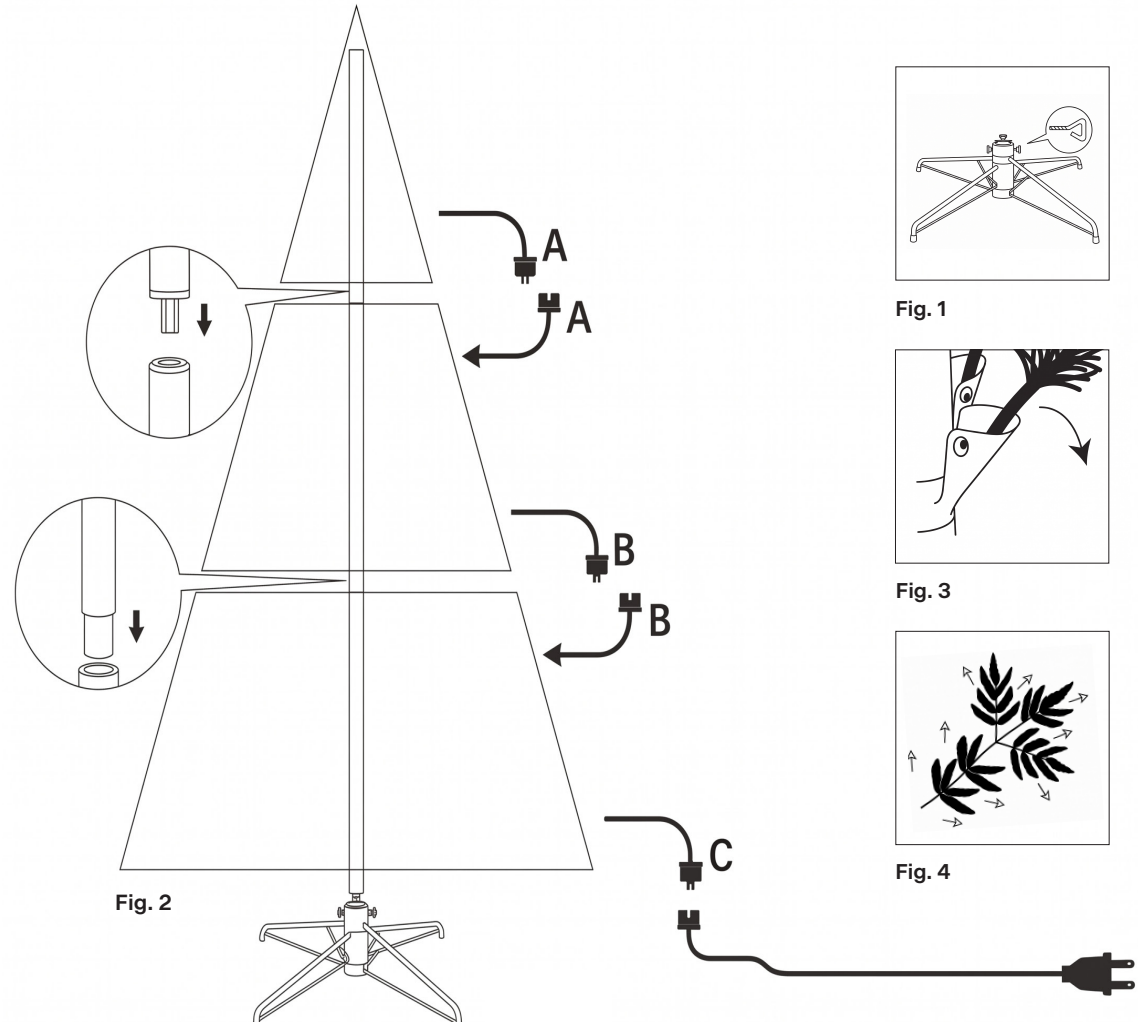


**Fig. 1**

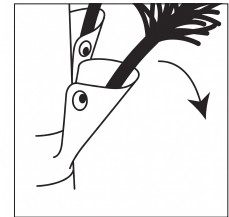


**Fig. 3**

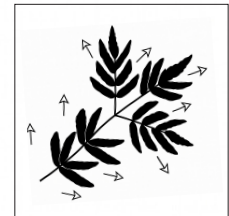


**Fig. 4**