

封底

对折后尺寸145x210mm

封面

GAINSBOROUGH

Love your bed

DELUXE FAUX FUR
HEATED THROW BLANKET
INSTRUCTIONS

**1 - 9 Hour Auto Off
Detachable Controller
KS9GB-NTC-9**

Model Number

(TNCK160x120-NSC)

Approval No.:SAA-172693-EA
Voltage: 220-240V
Wattage: 130W

Note: The specifications and/or components of this product are subject to change without prior notice

Contents

1	IMPORTANT SAFEGUARDS	4
2	Connecting the Controller	7
3	Overheat Protection	7
4	Using Your Heated Throw	8
5	Using the Controller	9
5.1	Auto Off	10
5.2	Preheat	10
5.3	Electrical Field Effect	10
6	Recommended Cleaning Instructions	11
6.1	Treatment for Localised Soiling	11
6.2	Hand Washing (Recommended)	12
6.3	Machine Washing	12
6.4	Drying	12
7	Servicing Your Heated Throw and Controller	13
8	Storage	13
9	Troubleshooting	14

IMPORTANT INSTRUCTIONS:

Retain this manual and receipt for future use.


Thank you for purchasing our Heated Throw. Each unit is manufactured to ensure safety and reliability. Before using for the first time, please read the instruction manual carefully and keep it for future reference.

1 IMPORTANT SAFEGUARDS

- Before connecting and switching on the Heated Throw, ensure that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- Read the instructions carefully, in conjunction with the illustrations, before fitting the Heated Throw and using for the first time.
- If the cord of this Heated Throw is damaged, unplug and discontinue use of the product then contact the manufacturer.
- Check that your Heated Throw is not damaged before switching it on.
- Always unfold or unroll before switching on.

Failure to observe these instructions will result in overheating. This will activate the overheat safeguard system, thus leaving the Heated Throw inoperative.

Misuse of this Heated Throw will invalidate your warranty.

- When storing the Heated Throw, allow it to cool down before folding. Fold neatly but not tightly (or rolled) without sharp bends in the heating elements and store where no other heavy objects will be placed upon it.
- The Heated Throw should not be used on an adjustable bed. However, if the Heated Throw is used on an adjustable bed, check that the Heated Throw and cord do not become trapped or rucked, for example, in hinges.
- The Heated Throw is Not to be used by very young children (0-3 years). 
- The Heated Throw is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- This Heated Throw is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This Heated Throw must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- It is recommended that persons with artificial pacemaker should check with their doctor and the manufacturer of the pacemaker before using this Heated Throw.
- This Heated Throw is not intended for use by young children or infirm persons without adequate supervision.


- Heated Throws are intended for human use only. Not for animals and pets.
- Do not allow pets or animals to lie or chew on this product or on the electrical cords etc.
- Prolonged application at the highest heat setting can result in skin burns.
- Do not use the Heated Throw rucked (creased) or folded.
- Keep the control away from an open window.
- Keep the controller/s away from external heat sources. i.e. a heater, fireplace etc.
- Do not use pins as these may damage the electric wiring.
- Be sure that this Heated Throw is used only on an alternating current supply circuit of the correct voltage. Refer to the rating label for specifications (foot end of the Heated Throw).
- The flexible supply cord and switch must, as far as practicable, be kept outside of the Heated Throw. **Do Not Cover the Controller.**
- Do not switch the power on if the Heated Throw is wet or in a folded state.
- Switch off and remove the plug from the mains when the Heated Throw is not in use.
- Do not leave heavy objects on the bed, e.g. folded Heated Throws, suitcases etc. when the Heated Throw is switched on as this will trigger the over temperature device and render the Heated Throw PERMANENTLY inoperative. This may also invalidate the warranty.
- Do not dry-clean this Heated Throw. Cleaning liquid may have a damaging effect on the insulation covering of the heating element. Follow washing directions located on the Heated Throws rating label and in this Instruction Manual.
- Do Not Use in Bed (note: the Throw is not to be used as an under blanket or over blanket on the bed).
- This Heated Throw is not to be used continuously.
- **This Heated Throw is not to be used in Bed or while Asleep.**
- If any abnormality or defect in operation is observed, discontinue its use immediately and consult the distributor regarding its examination and/or repair.
- The Heated Throw should be examined frequently for signs of wear, either of the Heated Throw, controller or flexible cord. If wear is visible or if any abnormality or defect in operation in the Heated Throw is observed, discontinue use immediately and consult a qualified and registered person for service (i.e. such as an electrician).
- The Heated Throw must not be used over or under a water bed.

- Depending on the controller type, you may notice a blue flash in the switch when moving from one setting to another. This is NOT dangerous and is caused by the copper parts making contact.
- It is recommended that your Heated Throw is inspected by a qualified and registered person after 3 years of use.
- This Heated Throw is for domestic use only. It is **not** intended for use in hospitals or the like.
- Only use the controllers supplied with this Heated Throw.
- For additional protection, it is strongly recommend that the use of a residual current device (RCD) with a tripping current not exceeding 30mA be used on the circuit supplying this product. If you are unsure if your home has this device, please contact your nearest Electrical Contractor.
- Always treat Electrical Appliances with the upmost care. Do not use this product in any other fashion or for any other purpose other than stated in these instructions.

2 Connecting the Controller

Turn off Power and Remove the Plug from Power Source

- To fit the controller plug, simply hold the socket with one hand and push the controller plug all the way until it's firmly in place.
- To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and Do Not try and pull the controller plug out without lifting the locking tab as you will damage the socket.

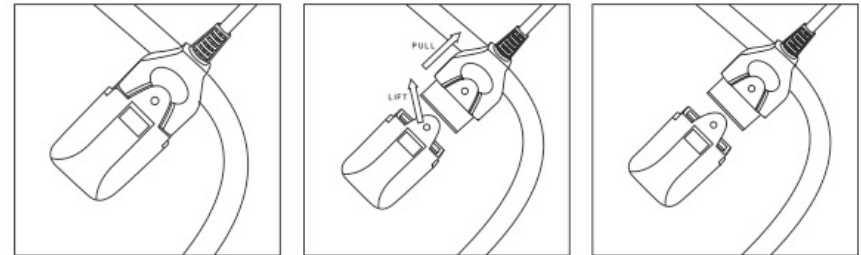

- Do Not fold, roll or kink the cable. Allow the cable to hang freely.
- Ensure the cable is not pulled so tight that it bends hard at the Heated Throw connector end.

3 Overheat Protection

- The Heated Throw is fitted with numerous overheat safeguard systems. This offers protection against overheating or damage to the elements by disengaging the power to the elements before overheating hazards occur.
- Should there ever be a problem with the heating element in the Heated Throw, it will automatically close down the operation and the Heated Throw will turn off.
- **The controller must not be covered.** The controller has built in protection, so that if the controller overheats, or the heating element is damaged, it will automatically close down the operation permanently.

Please refer to the Troubleshooting Guide on page 14 of this manual before calling the service department or before returning the Heated Throw.

4 Using Your Heated Throw

- Read the Important Safeguards section first, then ensuring the Heated Throw is fully folded, not creased and the controller plug is fitted securely, you can then plug in and switch on.
Keep the controller away from external heat sources. i.e. a heater, fireplace, etc.
- Wrap the Heated Throw around your body or drape over your legs.
- The Heated Throw **MUST NOT be used as an Under Blanket** (as per with an ordinary Electric Blanket) instead the Heated Throw must only be used by wrapping around your body and shoulders or draping over your legs etc.
- When wrapping the throw around your body and shoulders, ensure the controller connection is at the bottom and facing on the outside for comfort.
- If using in conjunction with another normal Heated Throw, place the Heated Throw on top of the other Heated Throw. The Heated Throw must always be positioned on the outside to prevent overheating.
- Do not fold, roll, kink or trap the cables. Allow the cables to hang freely. Ensure the cables are not pulled so tight it bends hard at the Heated Throw connector end.

IMPORTANT: DO NOT COVER THE CONTROLLERS AT ANY TIME.
The Heated Throw must NOT be used in bed or while sleeping.
TURN OFF AND UNPLUG WHEN NOT IN USE.
Store in dry place when finished.
Keep the controller away from external heat sources.
i.e. a heater, fireplace etc.

MISUSE AND FAILURE TO FOLLOW THESE INSTRUCTIONS MAY TRIGGER THE OVERHEAT PROTECTION SYSTEM AND RENDER THE HEATED THROW PERMANENTLY INOPERATIVE. THIS MAY INVALIDATE THE WARRANTY.

5 Using the Controller

- Use your Heated Throw with Detachable Controller Model KS9GB-NTC-9 only.
- Do not use any other controller for this heated throw.

Indicator Lights on Display Panel

White display = Heat or temperature setting (from 1 - 9)

1 is the lowest heating, 9 the highest.

Temperature range of about 20 degrees to 50 degrees.

Green display = Number of hours (from 1 - 9)

- To turn the controller on, slide the switch on the side to ON position.
- Digital display for heat and timer setting will light up showing default settings (8,8).
- After approximately one second, " - - " will appear. The controller is in standby mode.
- When pressing any of the buttons, default setting will be set to (7, 3). This indicates that the throw or controller is in good working order. If "P" or "E" appears on the display, there is a problem with the throw or controller. Refer to troubleshooting on page 14.
- Select desired heat setting by pressing "↑" temperature button or "↓" temperature button. To set the number of hours, press "+" timer button or "-" timer button.



DO NOT sleep while using this product.

DO NOT use this product as an electric under or over Heated Throw.

DO NOT use in bed.

Keep the controller away from external heat source
i.e. a heater, fireplace etc.

TURN OFF AND UNPLUG THE THROW WHEN NOT IN USE.
Keep the controller away from external heat sources. i.e. a heater, fireplace etc.

5.1 Auto Off

This controller has a programmable auto-off feature. The timer can be programmed from 1 to 9 hours to automatically turn the heated throw off. If heat setting is greater than 5 and timer setting is greater than 3 hours, the heat setting will automatically change to 4 and time of 3 hours will be reduced from the time setting selected. The throw will continue to heat for the remainder of the time left, and will automatically turn off (no heat).

TURN OFF AND UNPLUG THE THROW WHEN NOT IN USE.

5.2 Preheat

It is recommended that 9 is only used for preheating for no longer than 1 hour (and not to be in contact with a person) and 4 is recommended for comfortable use as a wrap blanket.

NOTE: The Heated Throw may not feel warm to touch unless it is wrapped around your body. Areas of the throw not in contact will stay cool.

5.3 Electrical Field Effect

When using the Heated Throw, some people may be susceptible to a tingling sensation when alone or when touching someone else using the Heated Throw. This "Tingling" feeling is known as an "electric field effect" and is occasionally known to happen across all makes and brands of Heated Throws. It is caused by the current flowing through the element creating an Electromagnetic Field (EMF). Some people are more susceptible to feeling this EMF tingling sensation than others. This is no cause for concern and is in no way an electric shock.

6 Recommended Cleaning Instructions

Ensure all controllers are unplugged from the power point and from the Heated Throw before cleaning.

DO NOT WRING, DO NOT SPIN DRY, DRIP DRY ONLY.

6.1 Treatment for Localised Soiling

CARE INSTRUCTIONS
DO use only as a Throw
DO only clean this Throw as specified in the instruction book
DO have this throw repaired and/or tested by an authorized electrical agent
DO turn off and unplug when not in use
DO NOT use this as an under & over blanket
DO NOT use if folded, rucked, bunched up or creased
DO NOT use if wet
DO NOT insert needles or pins into throw
DO NOT use with damaged element or cables
NOT TO be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating
NOT TO be used by very young children
DO NOT sleep while using this product
DO NOT use this blanket in bed
DO NOT cover controller
Gentle hand wash or machine wash separately on delicate cycle on low, with maximum temperature of 40°C
DO remove controller before washing throw
DO NOT bleach
DO NOT tumble dry
Line dry in shade when excess water has been removed
DO NOT peg wired parts
DO NOT spin dry
DO NOT wring
DO NOT iron
DO NOT dry clean



Never Use Hot Water as the Heated Throw may shrink and will void your warranty.

NOTE: DO NOT pre-soak or use stain removers of any which contain bleach. This includes any of the oxy pre-soakers or stain removers.

Detach and Remove the Controller before cleaning the Throw.

- The area affected should be sponged gently using a natural wool detergent or mild soap flakes dissolved in cold water, followed by two consecutive sponging using clean, soap-free cold water.
- Lightly compress the treated area between two towels to absorb excess water.
- Refer to the section "Drying" for drying instructions.

DO NOT WRING OR SPIN DRY THE HEATED THROW. DRIP DRY ONLY.

- The connections to the Heated Throw must be kept free of moisture.

6.2 Hand Washing (Recommended)

Detach and Remove the Controller before Cleaning the Throw

Never Use Hot Water as the Heated Throw may shrink and will void your warranty.

Do NOT pre-soak or use stain removers of any kind which contain bleach.

This includes any of the oxy pre-soakers or stain removers.

- After removing the controller, place the Heated Throw in cold water (bathtub or large laundry tub is ideal) mixed with either a natural wool detergent or with mild soap flakes.
- Soak the Heated Throw for approximately five minutes, and then gently squeeze the soapy water through the Heated Throw.
- Rinse the Heated Throw thoroughly with clean lukewarm water until no more suds are visible and allow water to drain off the Heated Throw.

Do Not Wring or Spin Dry the Heated Throw. Drip Dry Only.

- Refer to the section "Drying" for drying instructions.

With normal use it is recommended that you hand wash your Heated Throw once a year.

6.3 Machine Washing

- Remove the controller and place the Heated Throw in the washing machine with either a natural wool detergent or with mild soap flakes.
- Set your machine to the Delicate Wool or Gentle cycle (**without Spin Dry**) and set the water temperature to cold. **Do Not Wash With HOT Water.**
- When the cycle has finished, allow water to drain off the Throw (Do not Spin Dry). Gentle squeezing to remove excess water may be applied or Drip Dry.

Do Not Wring or Sping Dry the Heated Throw

- Refer to the section "**Drying**" for drying instructions.

6.4 Drying

- Spread the Heated Throw out on a clean surface (e.g. a large table) to dry in a shady area.
- Your Heated Throw can also be dried on a clothes line provided the majority of water has been drained off, providing the Heated Throw is not creased or folded and as long as pegs are not used on the element areas of the Heated Throw i.e. Hang from the edge of the Throw only.

Note: The Heated Throw must be thoroughly dried (including controller socket) before using.

Do Not Wring or Spin Dry the Heated Throw. Drip Dry Only.

7 Servicing Your Heated Throw and Controller

NOTE: There are no user serviceable parts in this Heated Throw or controller.

- The Heated Throw should be examined frequently for signs of wear, either of the Heated Throw, controller or flexible cord. If wear is visible or if any abnormality or defect in operation in the Heated Throw is observed, discontinue use immediately and consult a qualified and registered person for service.
- It is recommended that your Heated Throw is inspected by a qualified and registered person after 3 years of use.
- If the Heated Throw is not operating correctly, please check the Troubleshooting Guide on page 14 of this manual before contacting our service department.

8 Storage

When storing the Heated Throw, allow it to cool down before folding. Fold neatly (or rolled) but not tightly without sharp bends in the heating elements and store where no other heavy objects will be placed upon it.

Store in a dry place where it cannot be damaged.

9 Troubleshooting

If you have a problem with your Throw and /or controller, please check the Troubleshooting table following to see if the problem can be resolved.

If the troubleshooting table is not able to help solve your problem, please call our service department before returning the product for replacement as they may be to help.

9.1 Troubleshooting Table

Problem	Cause	Remedy
No Power to Controller / No Indicator Lights showing on Front Display. Or "P" appears.	Possible that the controller or coupler is not connected.	Please turn the controller off and re-connect the coupler. if you can not troubleshoot, it means the internal connection of the electric blanket is broken. Need to be overhauled or scrapped.
	The Power Plug may not be plugged in to the power source and switched on.	Ensure the power plug is inserted into the power source correctly and switch on.
	There may be no power to the power point.	Ensure there is power to the power point. Test with another appliance such as a table lamp.
No Indicator Lights showing on Front Display when a heat or time setting is selected. Or "E" appearing on the screen.	Internal connection short circuited.	Please shut down and restart. If you can not troubleshoot, the throw is damaged.
	The controller has overheated and blown the Over-Temp thermal fuse.	The controller has overheated by means of an external heat source, the controller has been covered in the throw or external covering, or the throw element has been damaged.
	The Heated Throw Elements have been damaged.	A new throw with controller must be purchased.
Indicator Lights showing on Front Display but Throw is not heating.	Detachable Plug from Controller to Heated Throw is not fitted correctly or has come loose.	Ensure the detachable plug is fitted correctly into the socket on the Heated Throw.
	The selected heat setting is too low.	Increase the Heat setting.
	Pre-heat time is too short.	Allow the Heated Throw more time to heat up. More time is required depending on the ambient temperature.
	Throw not in contact with body.	The throw may not feel warm to touch unless it is wrapped around your body. Areas of the throw not in contact will stay cool.
The controller is Warm to Touch.	This is normal.	Nothing to do. It is no cause for alarm.