


ASSEMBLY INSTRUCTIONS


European Collection Adana Timber Furniture Bedhead

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble product. Place all furniture parts on a clean flat surface, such as carpet or rug to prevent from being scratched.





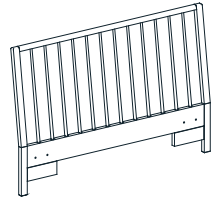

PARTS INCLUDED

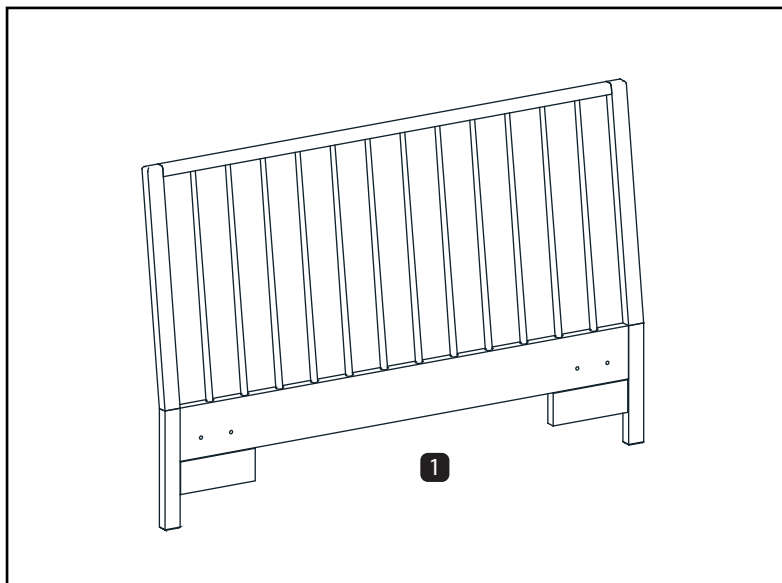
I		1 pc
---	---	------



HARDWARE LIST


A	 8x80mm	4 pcs
B		4 pcs
C		8 pcs
D		1 pc

I

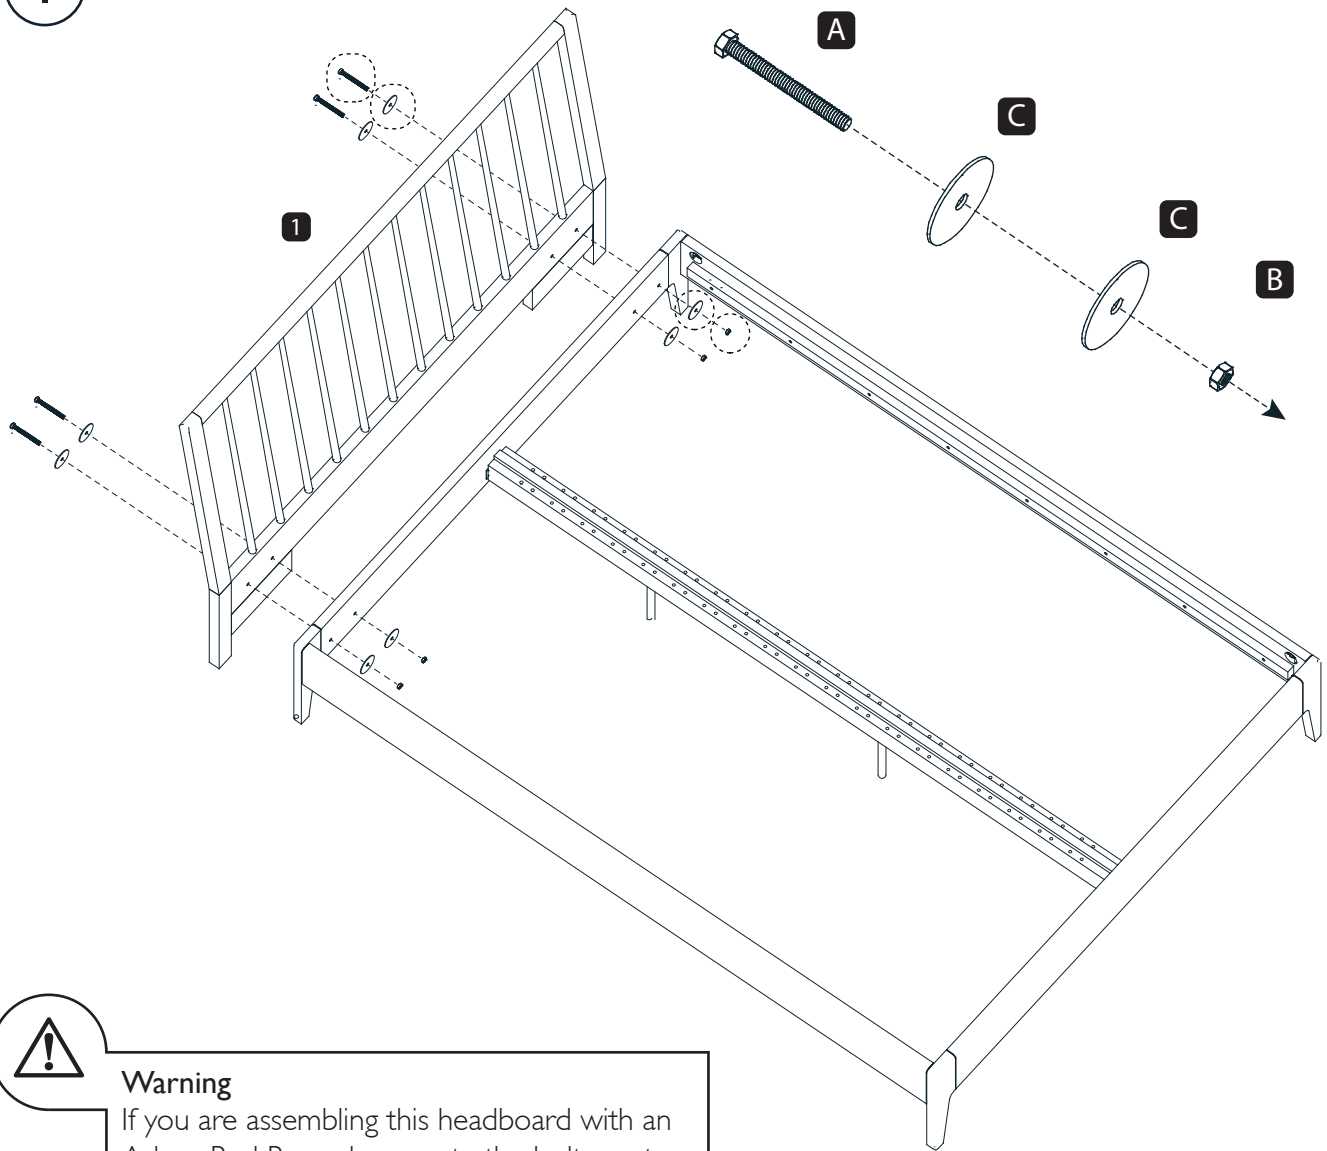

Warning

If you are assembling this headboard with an Adana Bed Base please note the bolts sent with the headboard need to be used to attach to the bed base. The bolts supplied with the bed base are not suitable to fit the Adana Headboard.

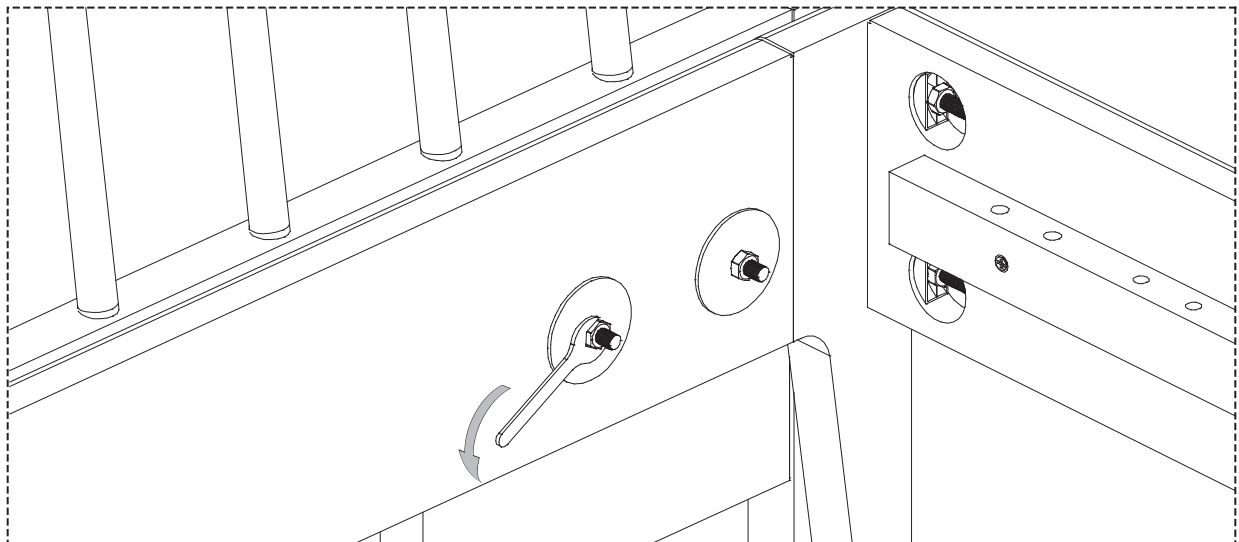

2

