
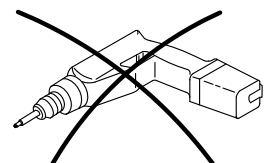
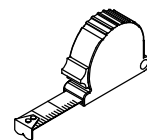
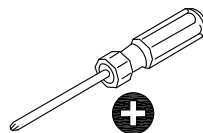
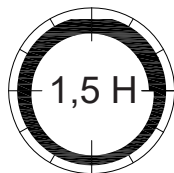
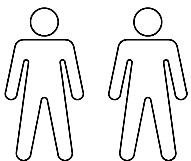


ASSEMBLY INSTRUCTIONS

YORKTON BEDROOM FURNITURE KING FULL BED

Please read instructions carefully. Remove all wrapping material and packing from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble the product. Place all furniture parts on a clean surface, such as carpet or rug to prevent the item from being scratched.

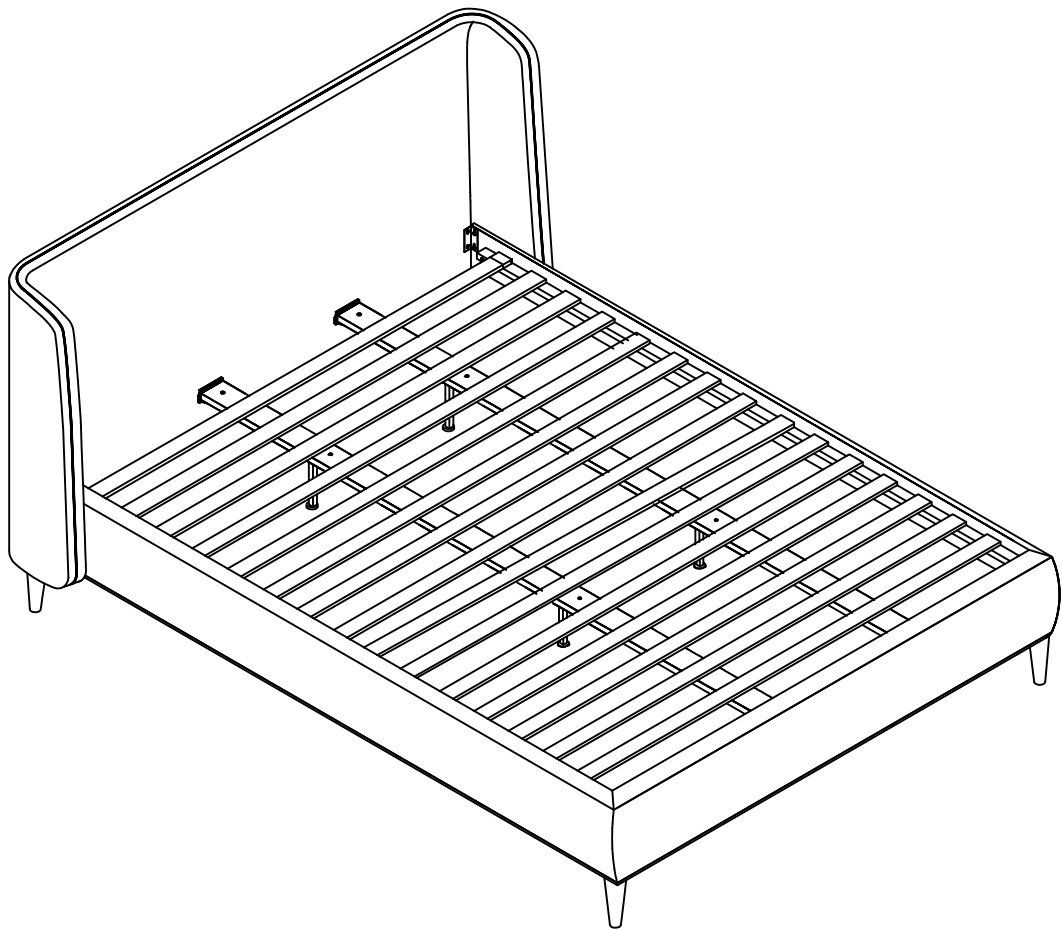

Part list:

1 x Part 1

1 x Part 2

1 x Part 3




1 x Part 4

2 x Part 5

2 x Part 6

4 x Part 7

4 x Part 8

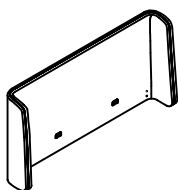

Headboard

Side rail left

Side rail right

Footboard

Slats

Middle support

Leg

Support leg

Hardware list:

Ax20

Bx12

Cx4



Dx8

Ex32

Fx24

Gx1

Hx4



Bolt
M8x25

Bolt
M8x35

Bolt
M6x15

Nut
M8/13

Washer
Ø8/Ø19

Spring washer
Ø8/Ø13



Allen key
5mm

Bracket
68x47x32

Jx4

Kx1


Lx4













Bracket
130x47x47

Spanner
13mm



Felt pad
Ø25x3

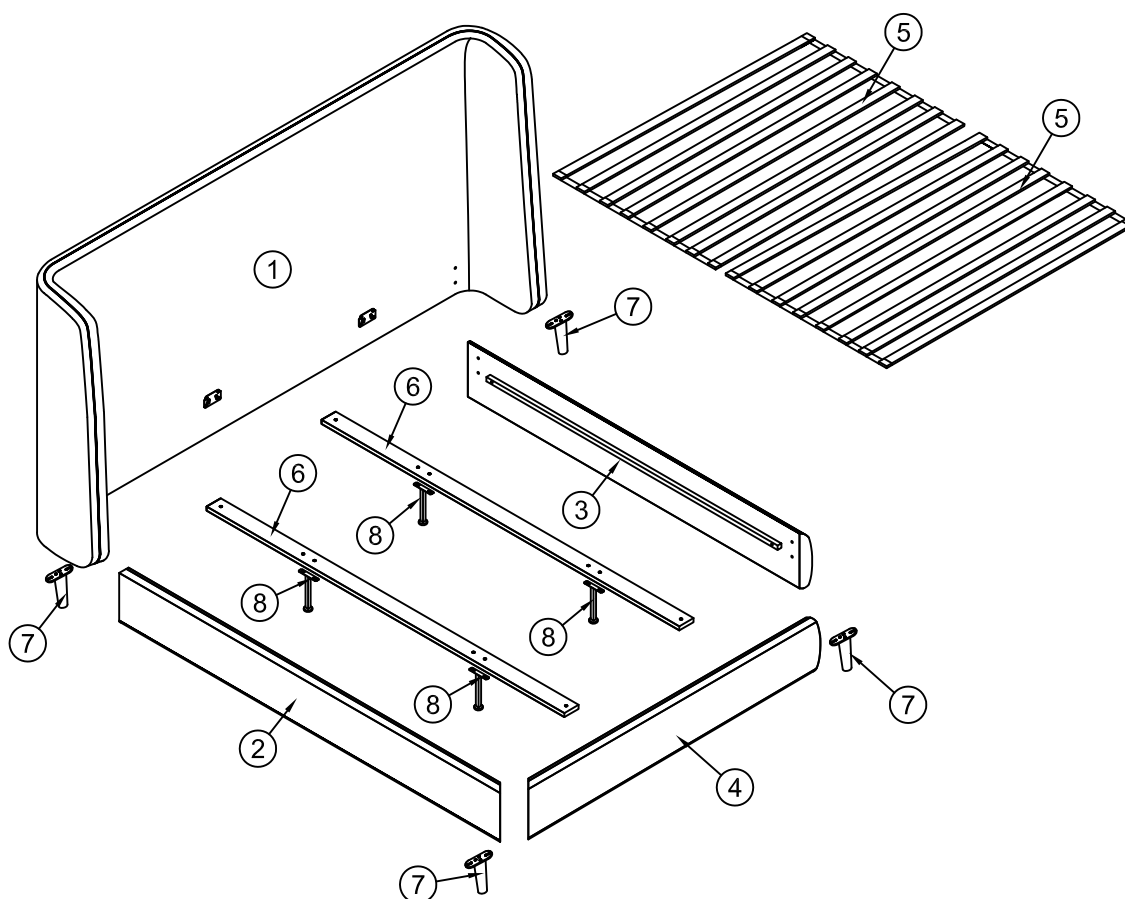

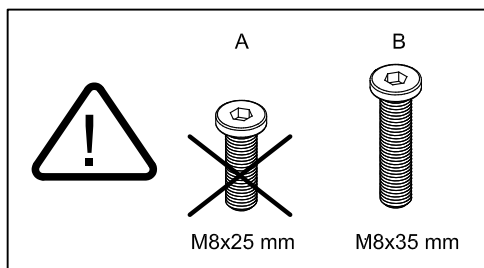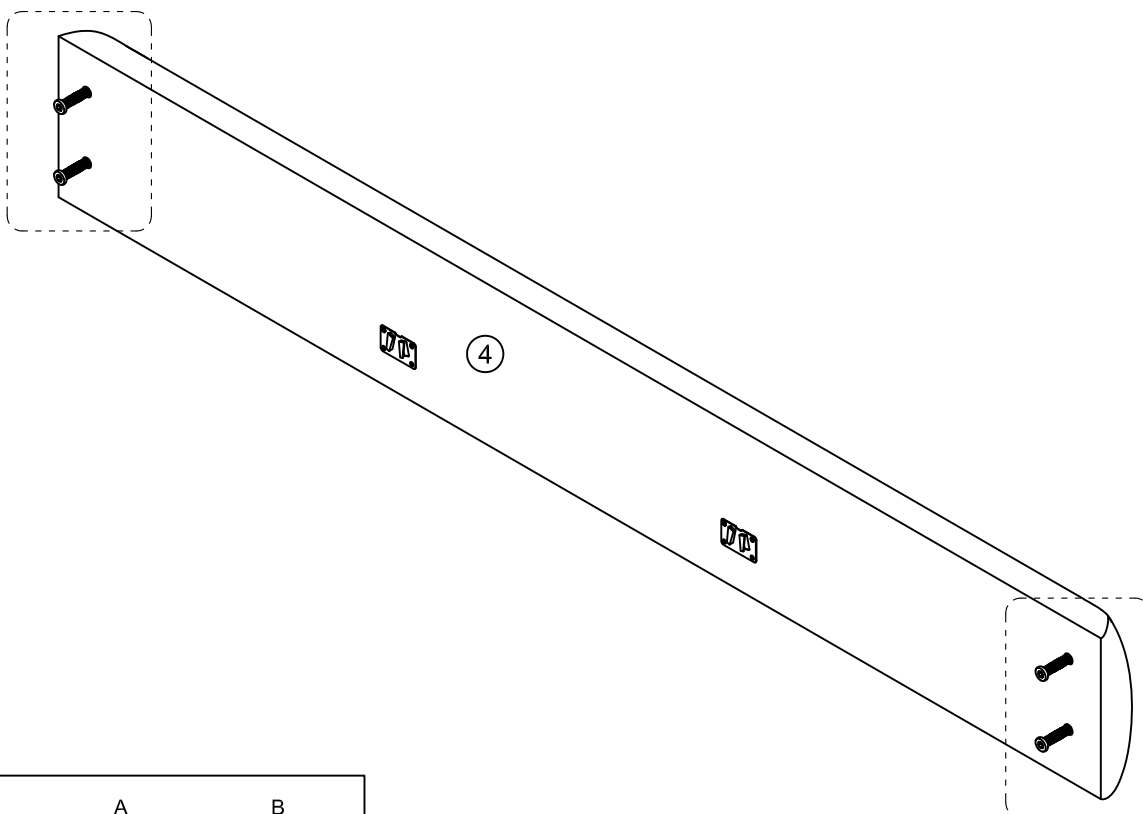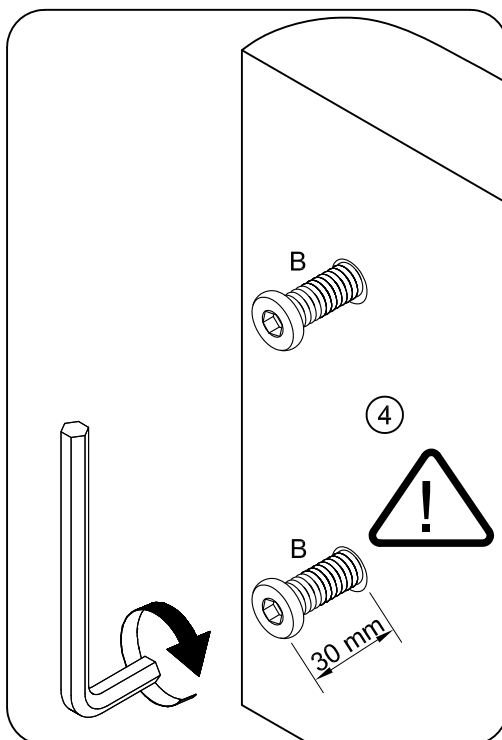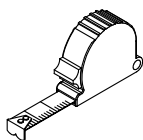
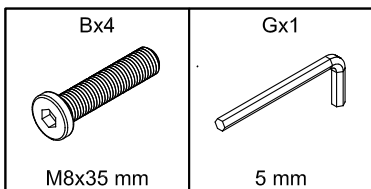


Ax8  M8x25 mm	Ex8  Ø8/Ø19 mm	Fx8  Ø8/Ø13 mm	Gx1  5 mm	Jx4  130x47x47 mm
--	---	---	--	--


2

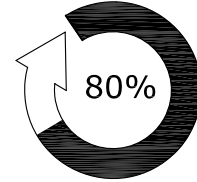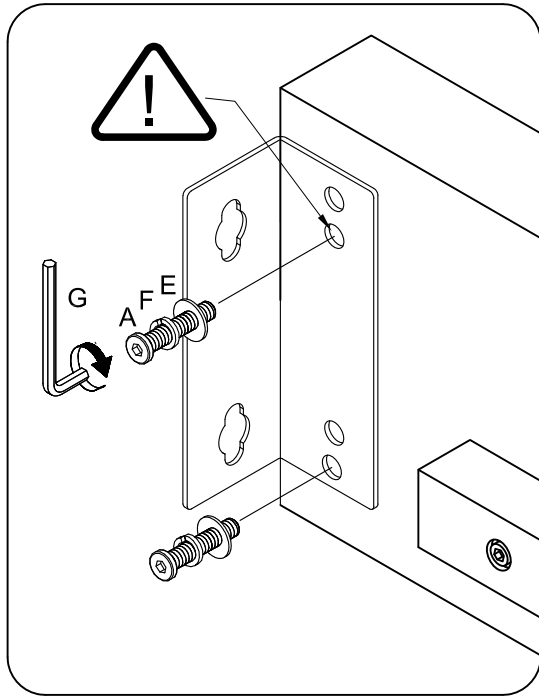

TIGHTEN BOLTS TO 80%.

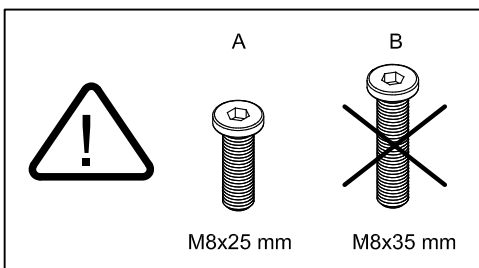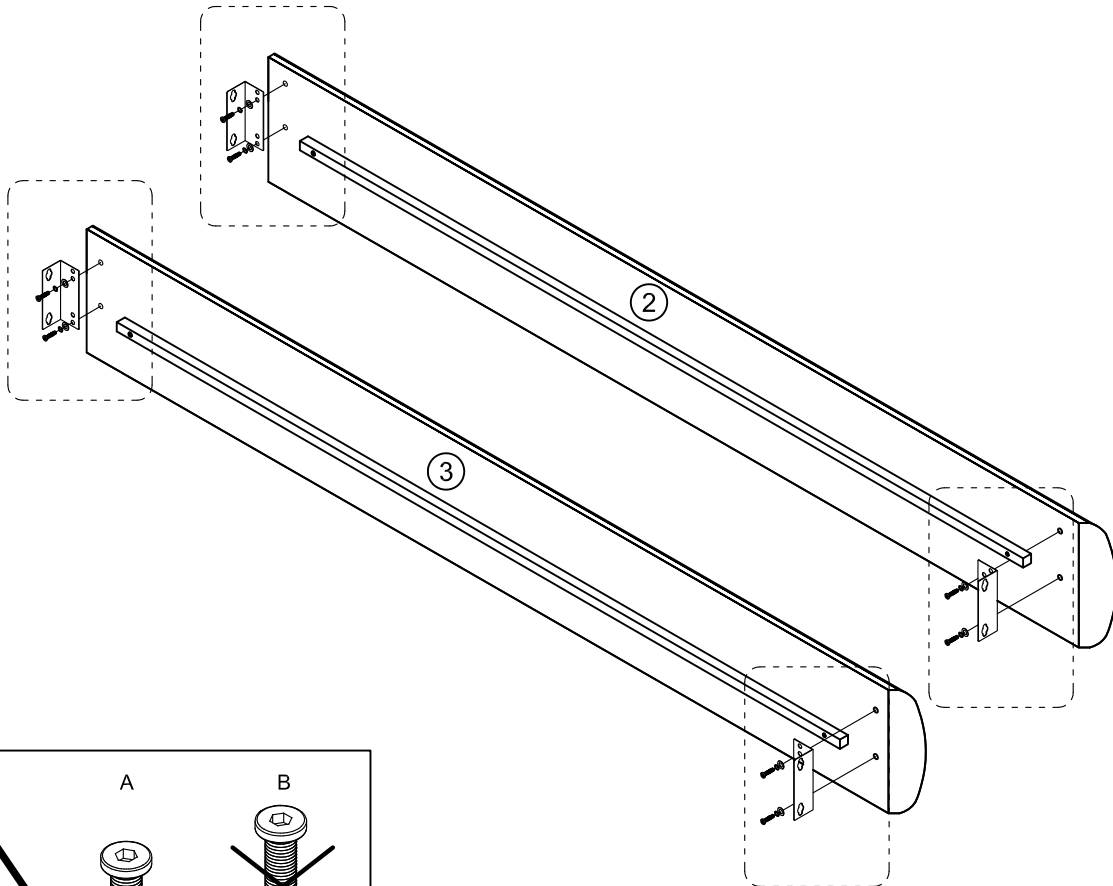


Ax4






M8x25 mm


Gx1



5 mm

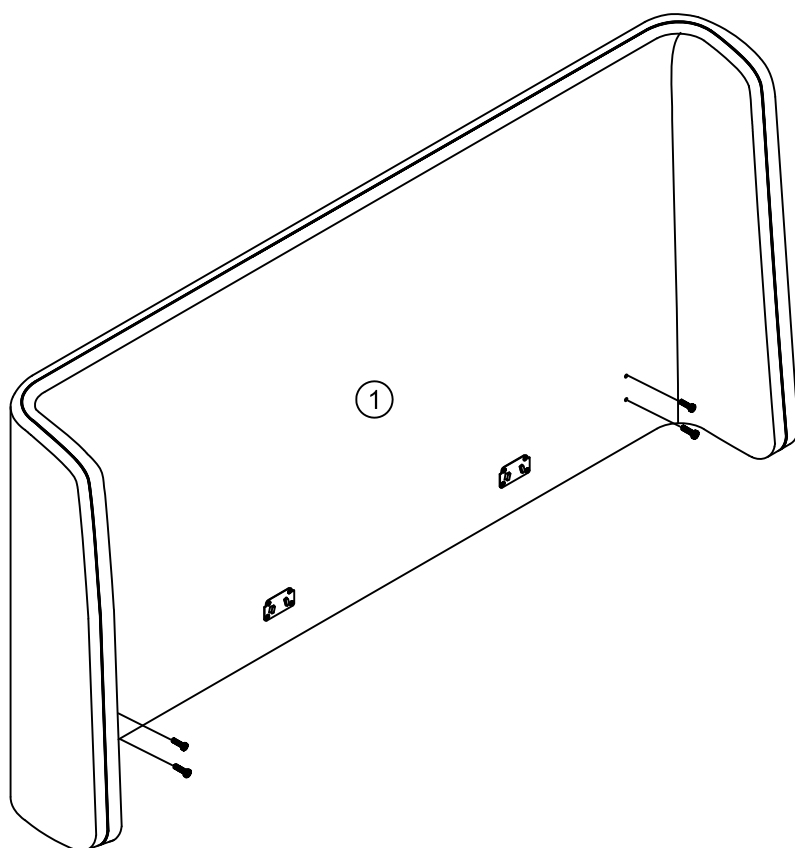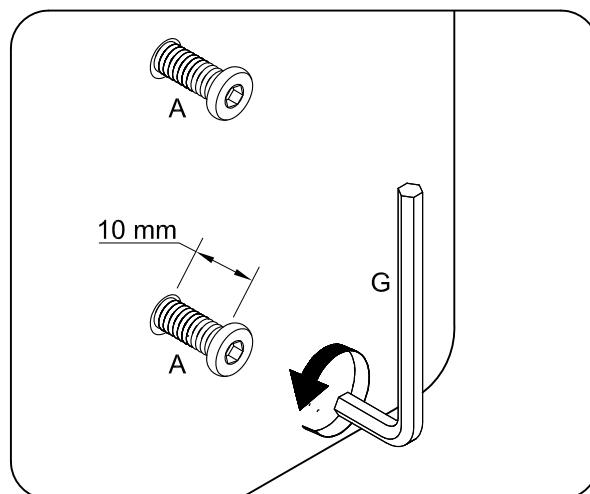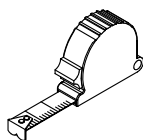


A




M8x25 mm

B




M8x35 mm

Gx1




5 mm




I

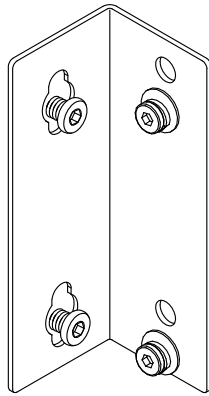

II

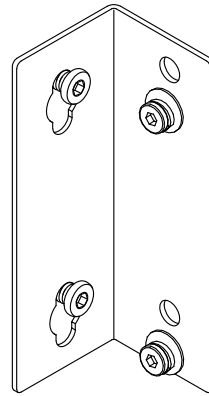

III

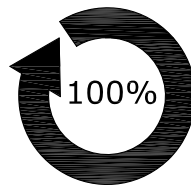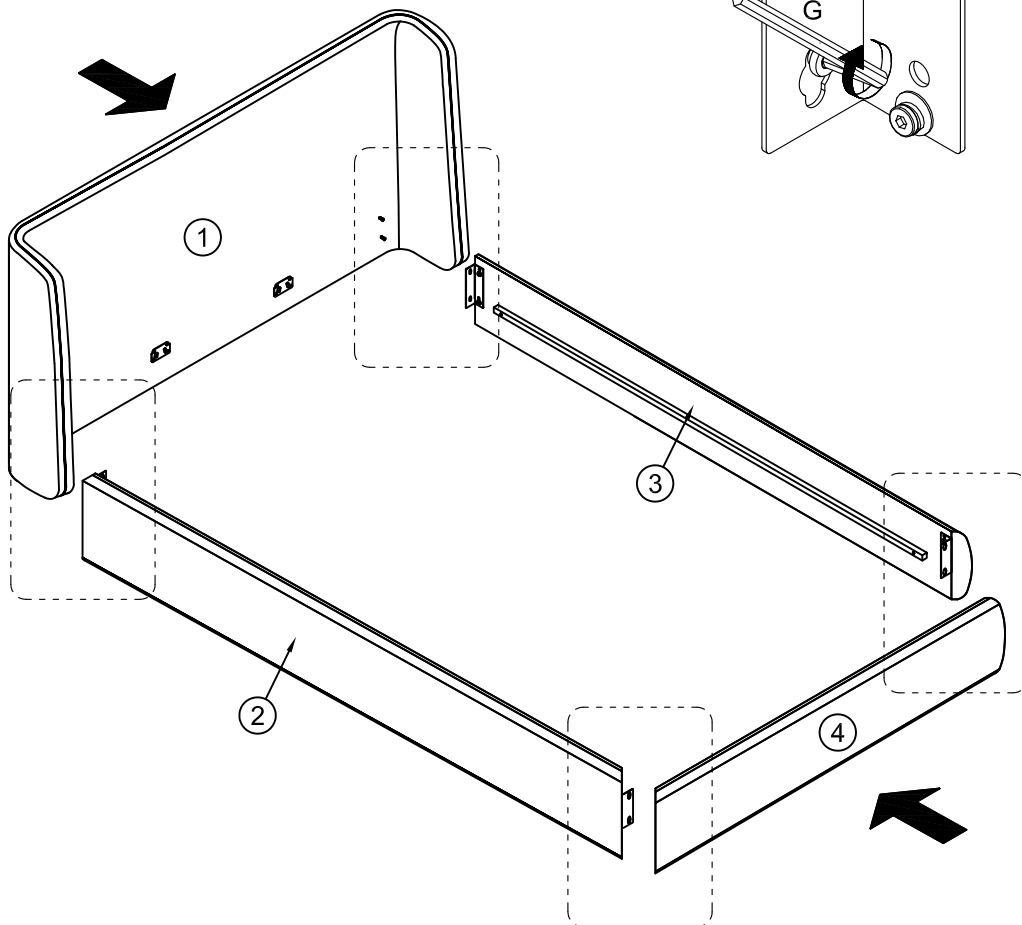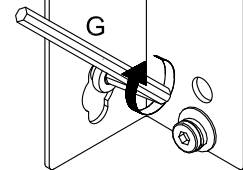
**NOW TIGHTEN BOLTS TO 100%**

5

Lx4




Ø25x3 mm

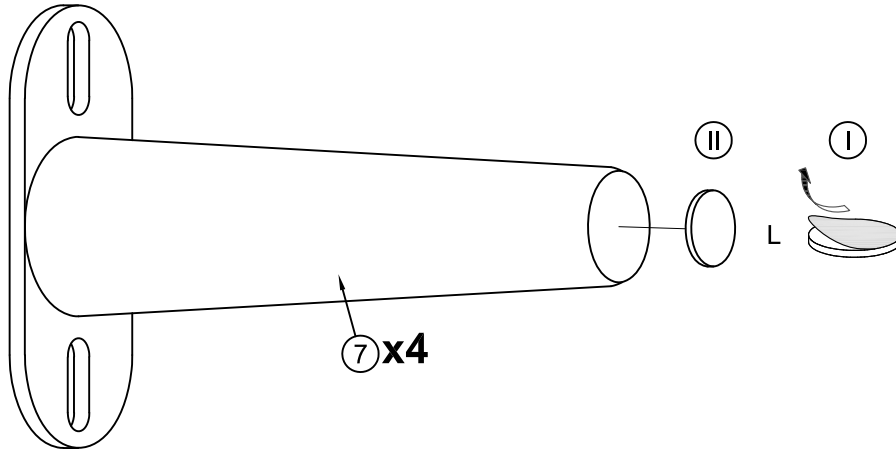

7x4


6

Ax8



M8x25 mm

Ex8




Ø8/Ø19 mm

Fx8





Ø8/Ø13 mm


Gx1



5 mm

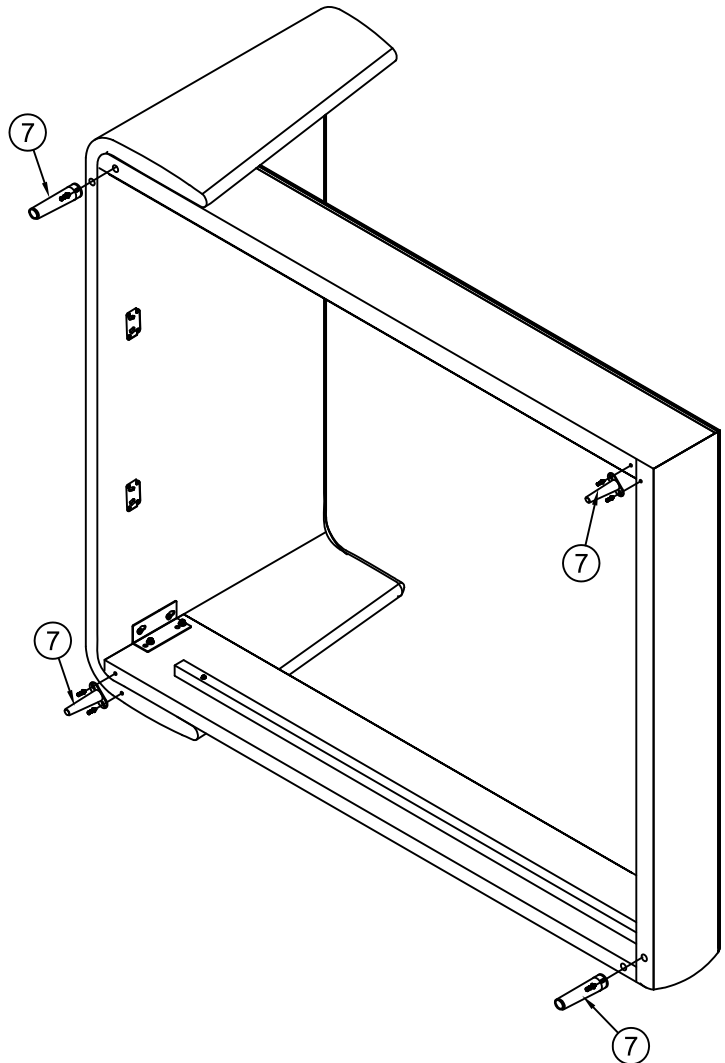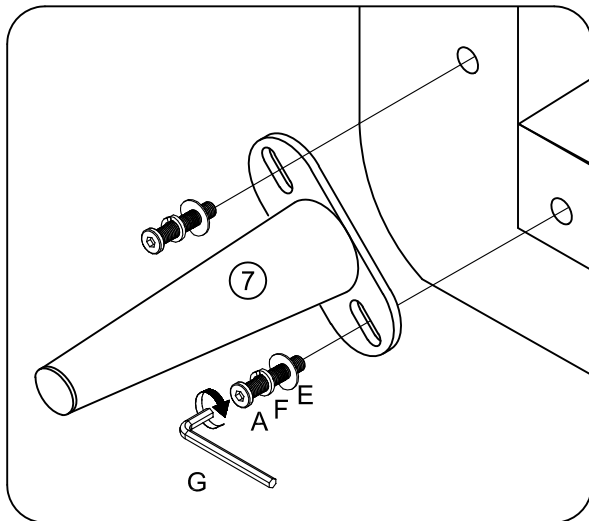


A









M8x25 mm

B



M8x35 mm

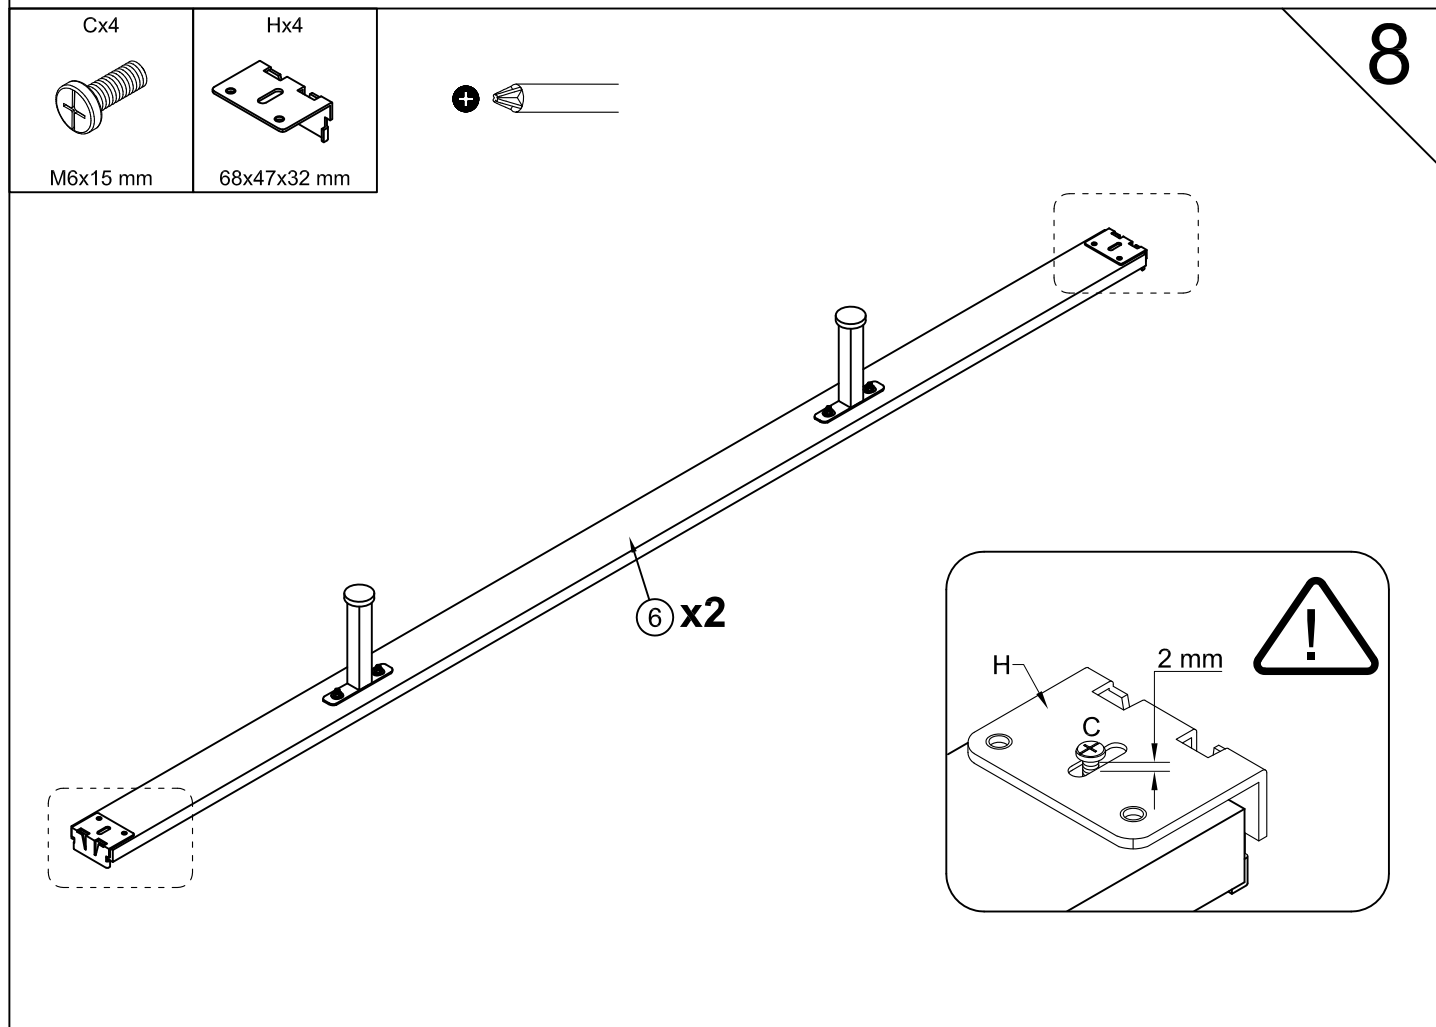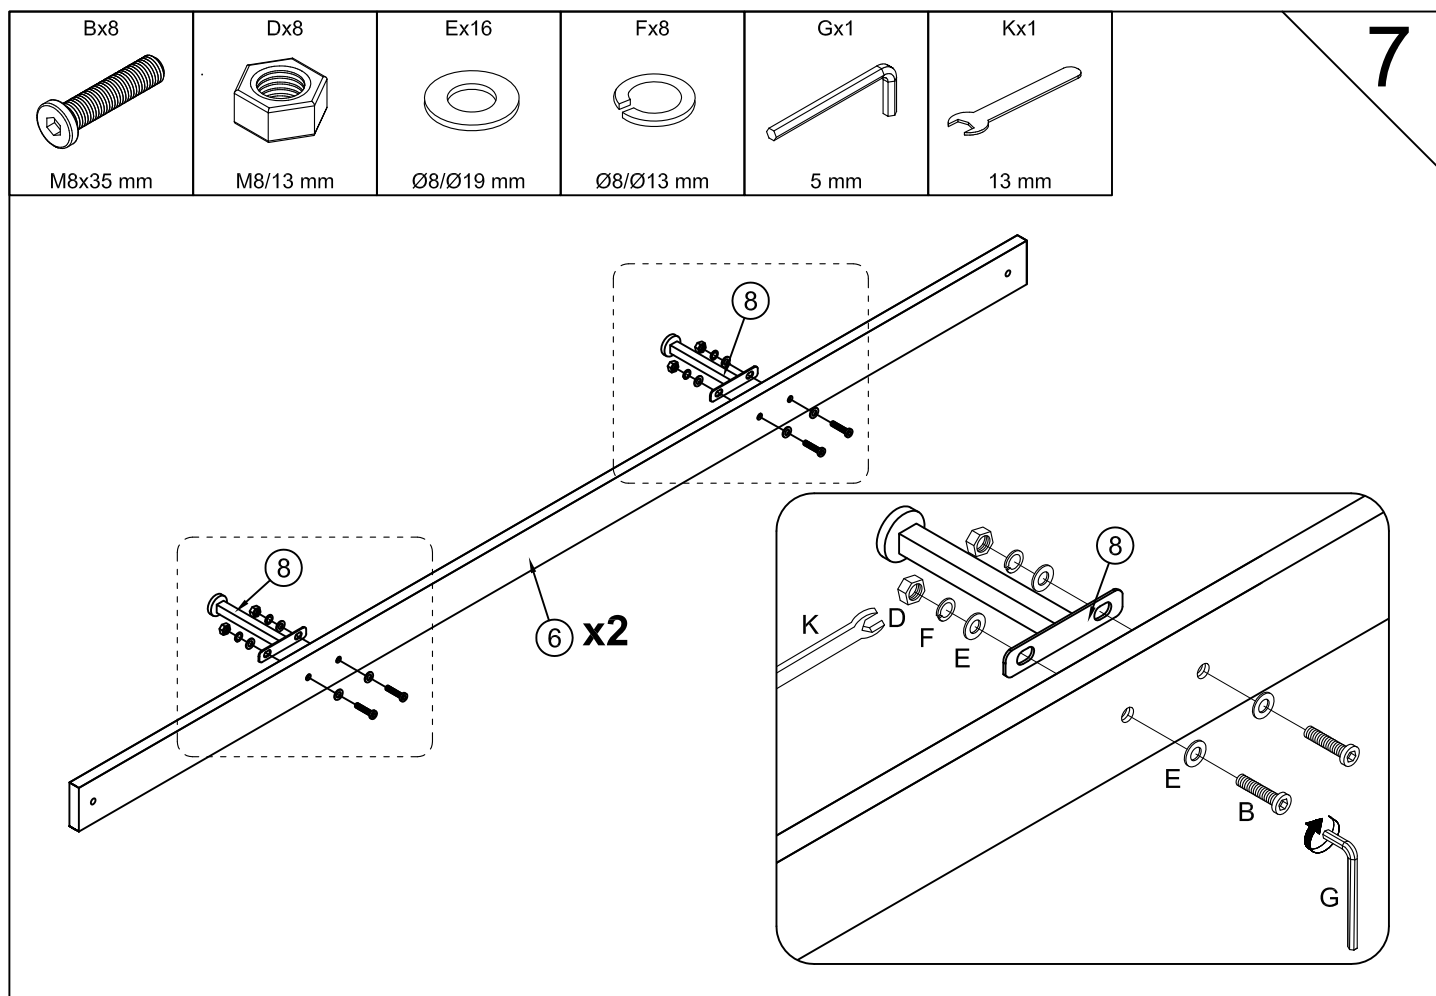

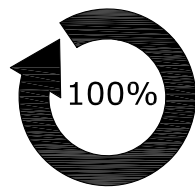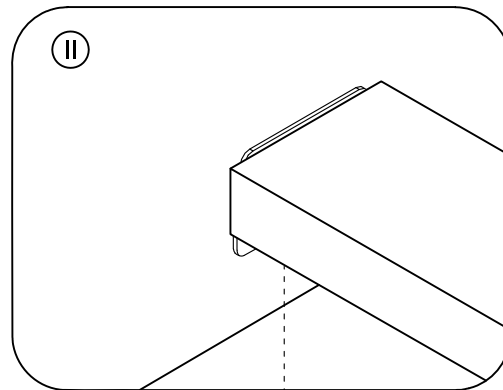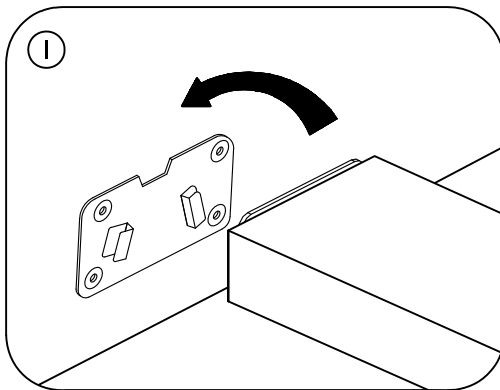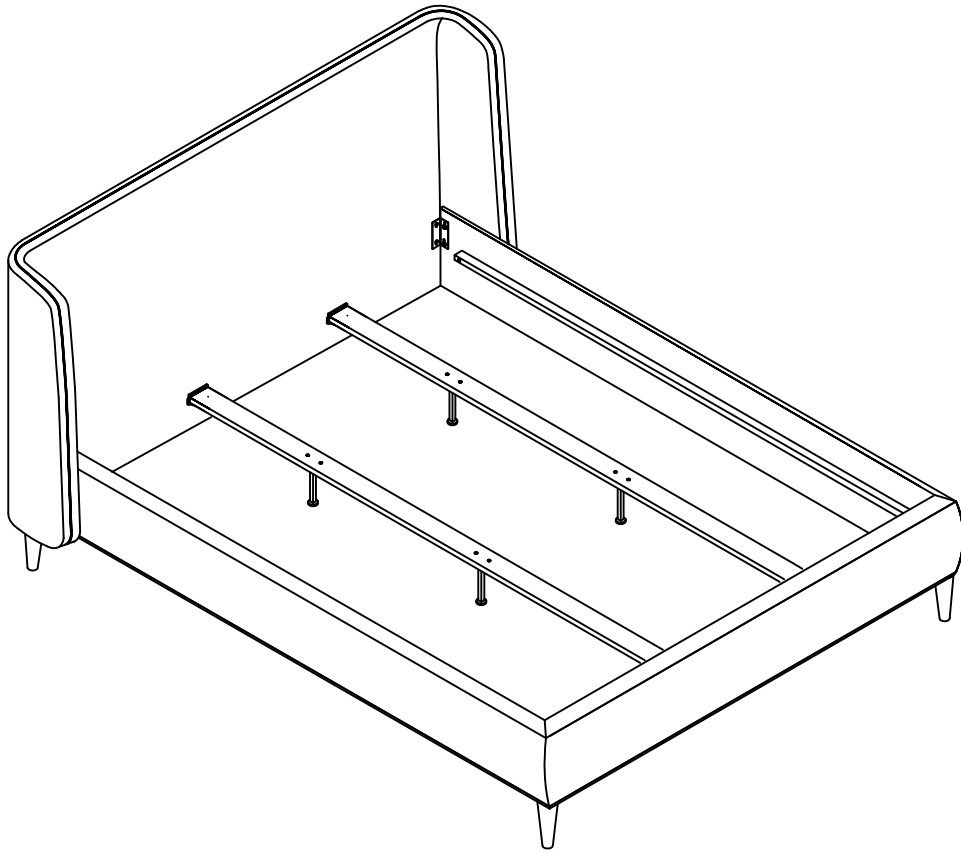

NOW TIGHTEN BOLTS TO 100%

