



ASSEMBLY INSTRUCTIONS
60979 - Oscar Double Bed

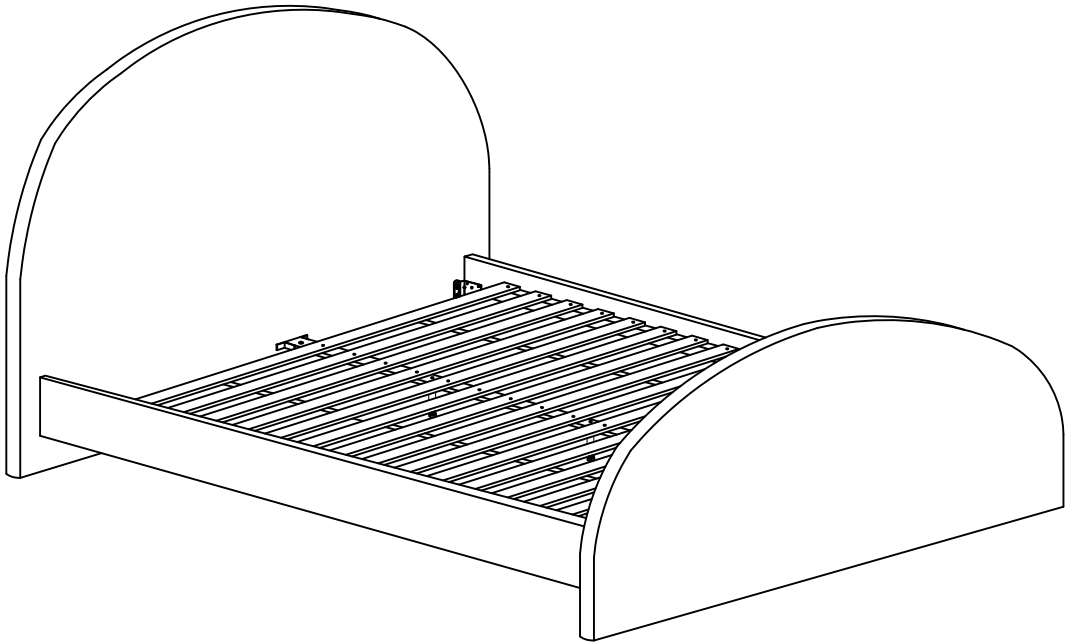

adairs kids



Tools Needed
2 person build




BED FITTINGS

Big Head Bolts (M8*18) ① X 8	Small Bolts(M8*20) ② X 6	Large Bolts (M8*40) ③ X 2	Screws (M4*32) ④ X 42	Washers (M8*19) ⑤ X 8
Brackets ⑥ X 2	Plastic Support legs ⑦ X 2	Allen Key (M5) ⑧ X 1		

PART LIST

Headboard A X 1	Footboard B X 1	Side Rails C X 2
Center Rail D X 1	Slats E X 1	

Parts

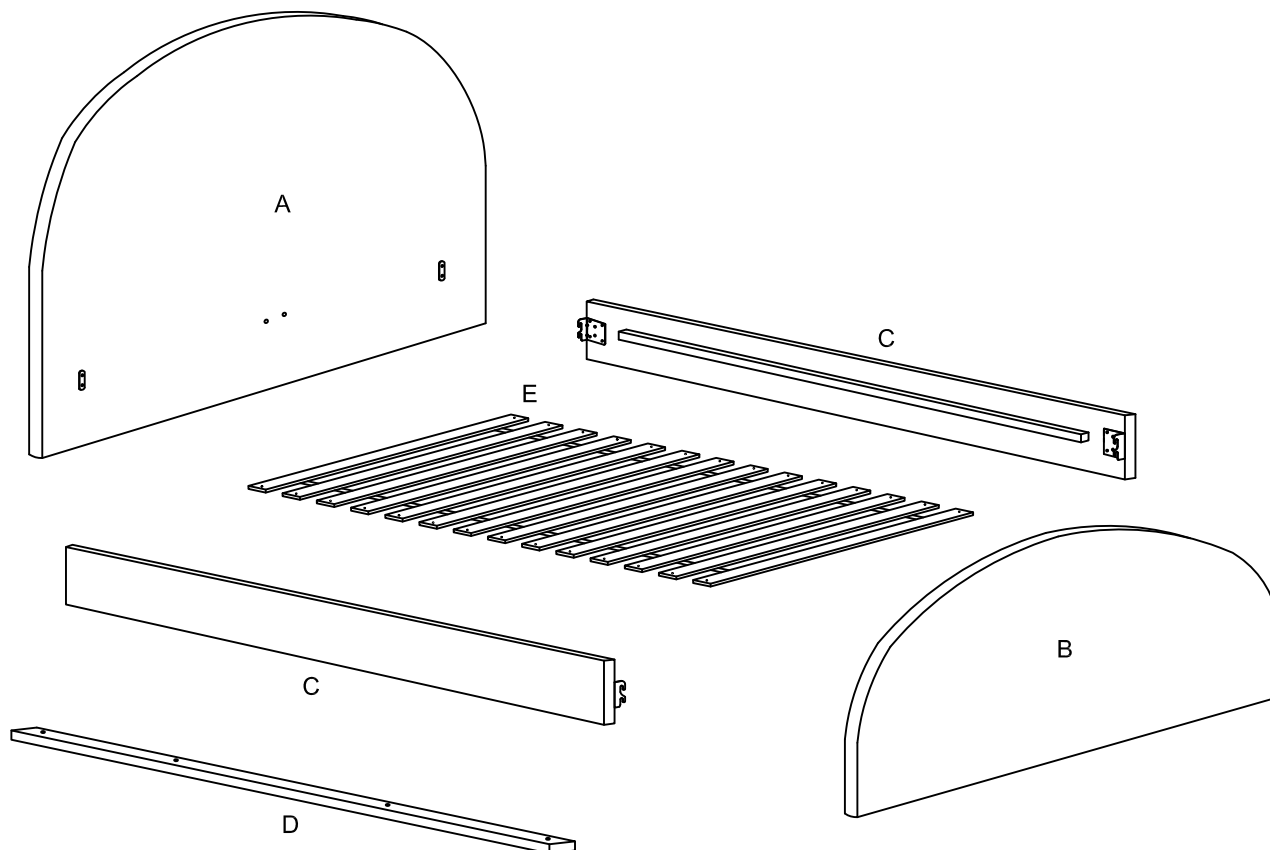



MAXIMUM WEIGHT LOAD: 396 LBS/ 180 KGS.

FOR ASSEMBLY

- First, check the content to make sure that nothing is missing.
- Sort out the parts and fittings as shown.
- Assemble the product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.


Adairs Retail Group Pty Ltd
Level 9, One Middle Road,
Chadstone, VIC, 3148
T 61 3 8888 4500
www.adairs.com.au www.adairs.co.nz

Step 1

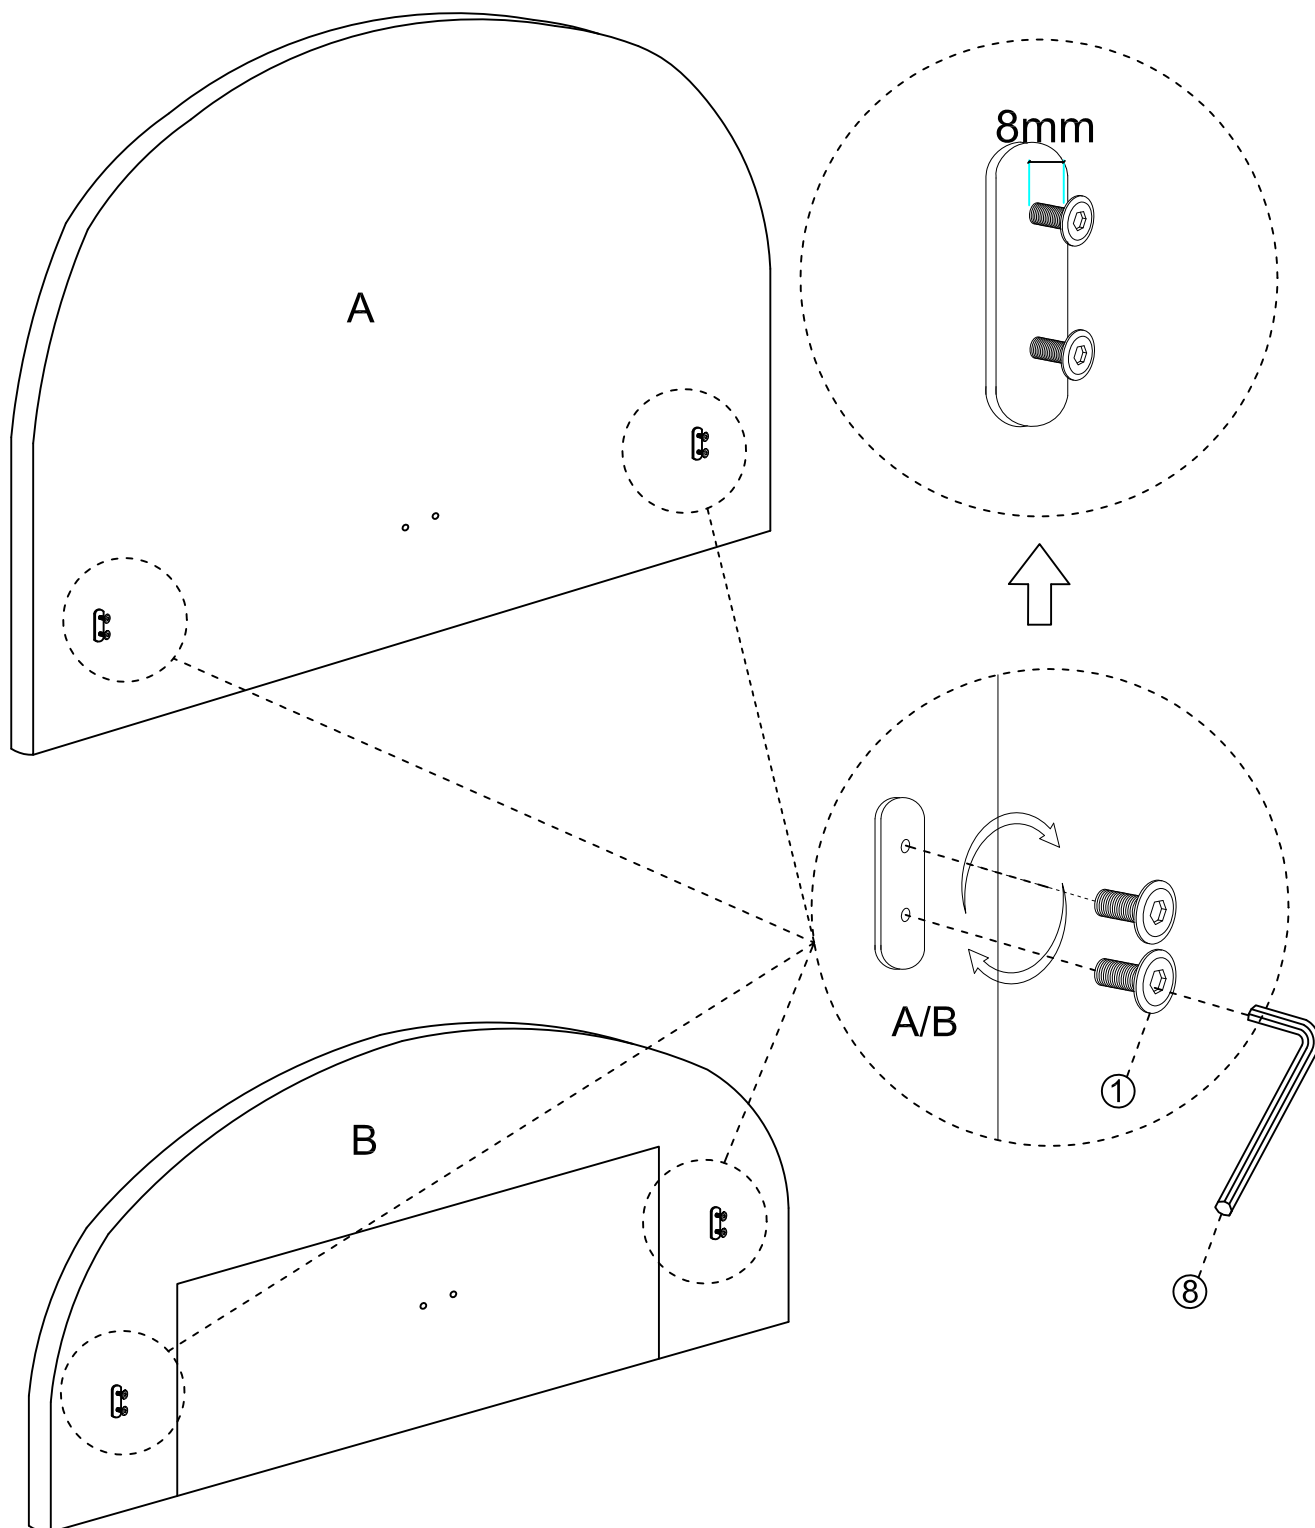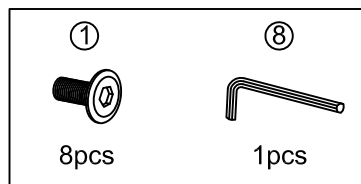


Insert 8 x Big Head Bolts ① into the bracket on the Headboard (A) and Footboard (B), tighten two thirds of the way with Allen Key ⑧ as shown.

Step 2

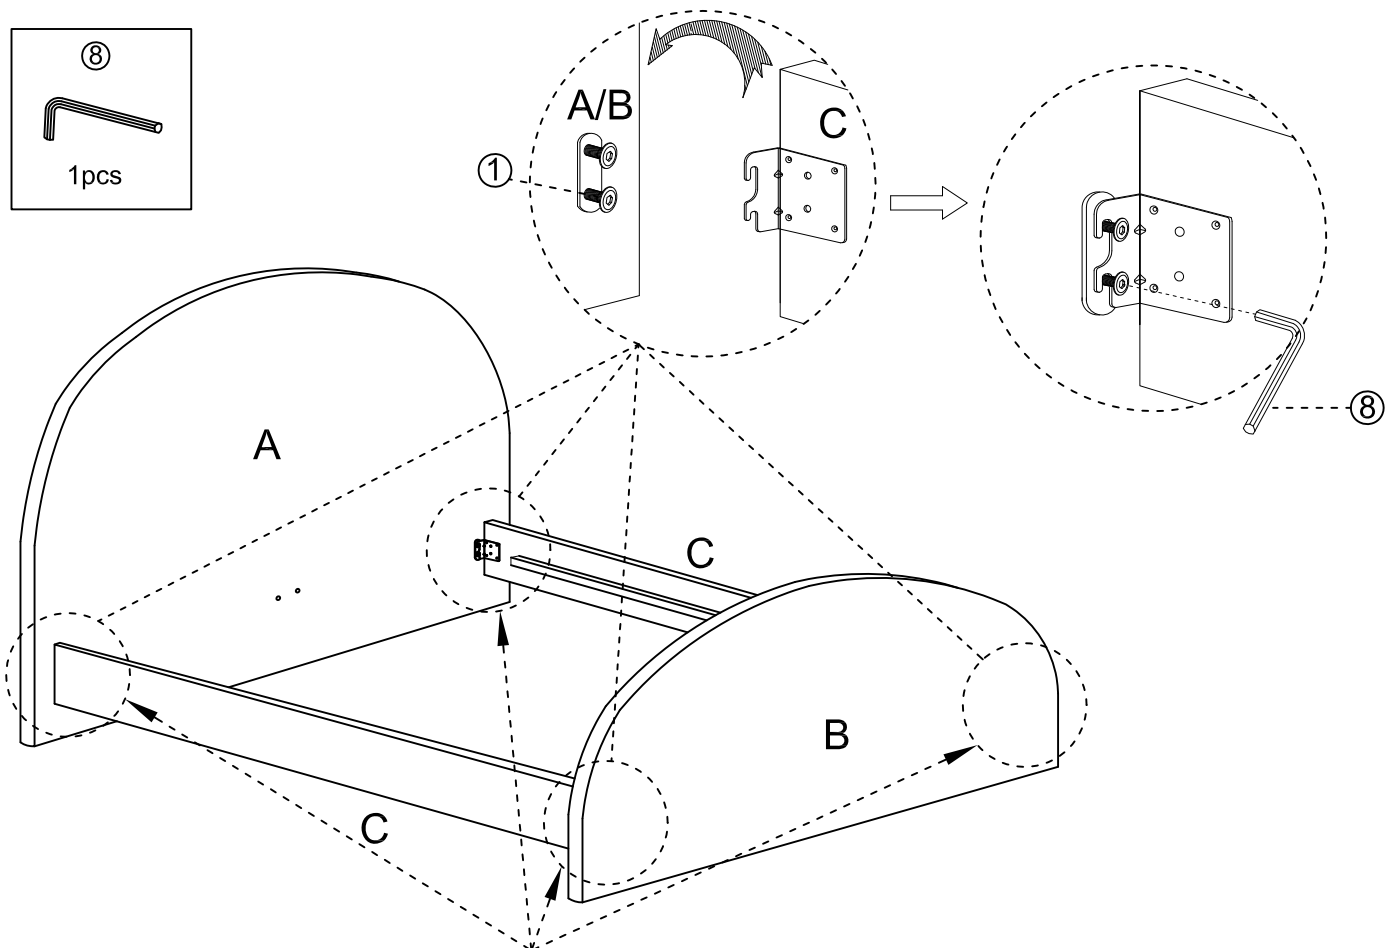


Attach 2 x Side Rails (C) to the Headboard (A) and Footboard (B) by slotting the brackets on the Side Rails (C) over the Big Head Bolts ① as shown.
Do not fully tighten the Big Head Bolts ① until Step 6.


Step 3

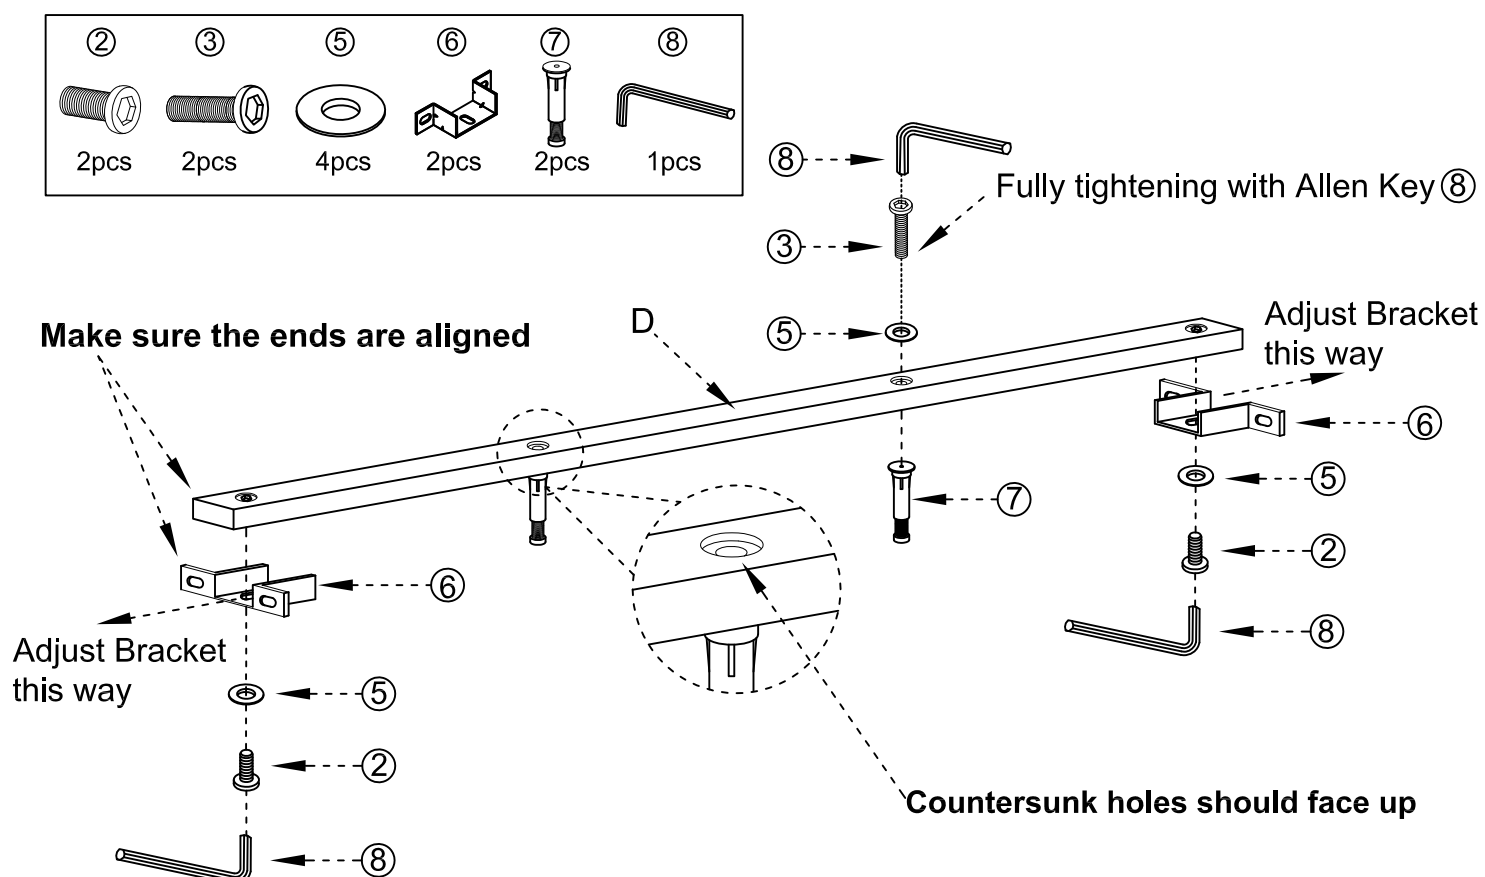

Step 4

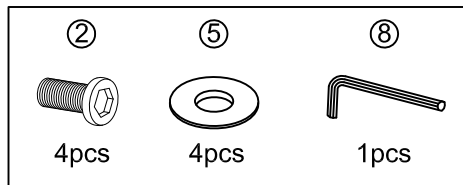


You must use.

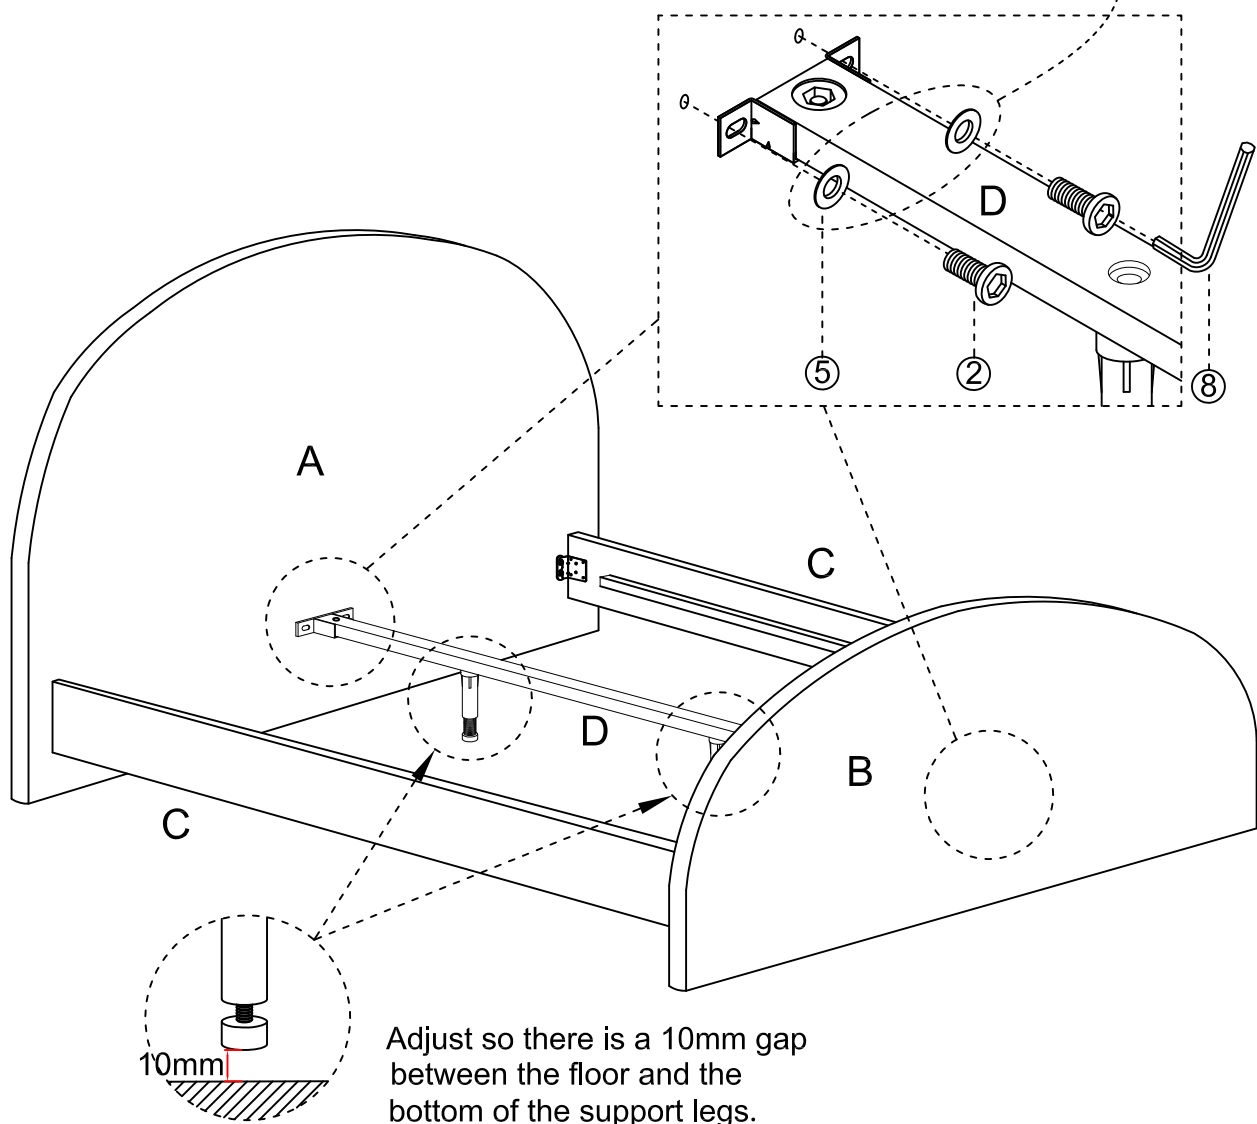


Slot the Center Rail (D) into the Headboard (A) and Footboard (B) as shown. Secure using 4 x Small Bolts ② and 4 x Washers ⑤, fully tightening with Allen Key ⑧ (You MUST use the Washers).

Step 5

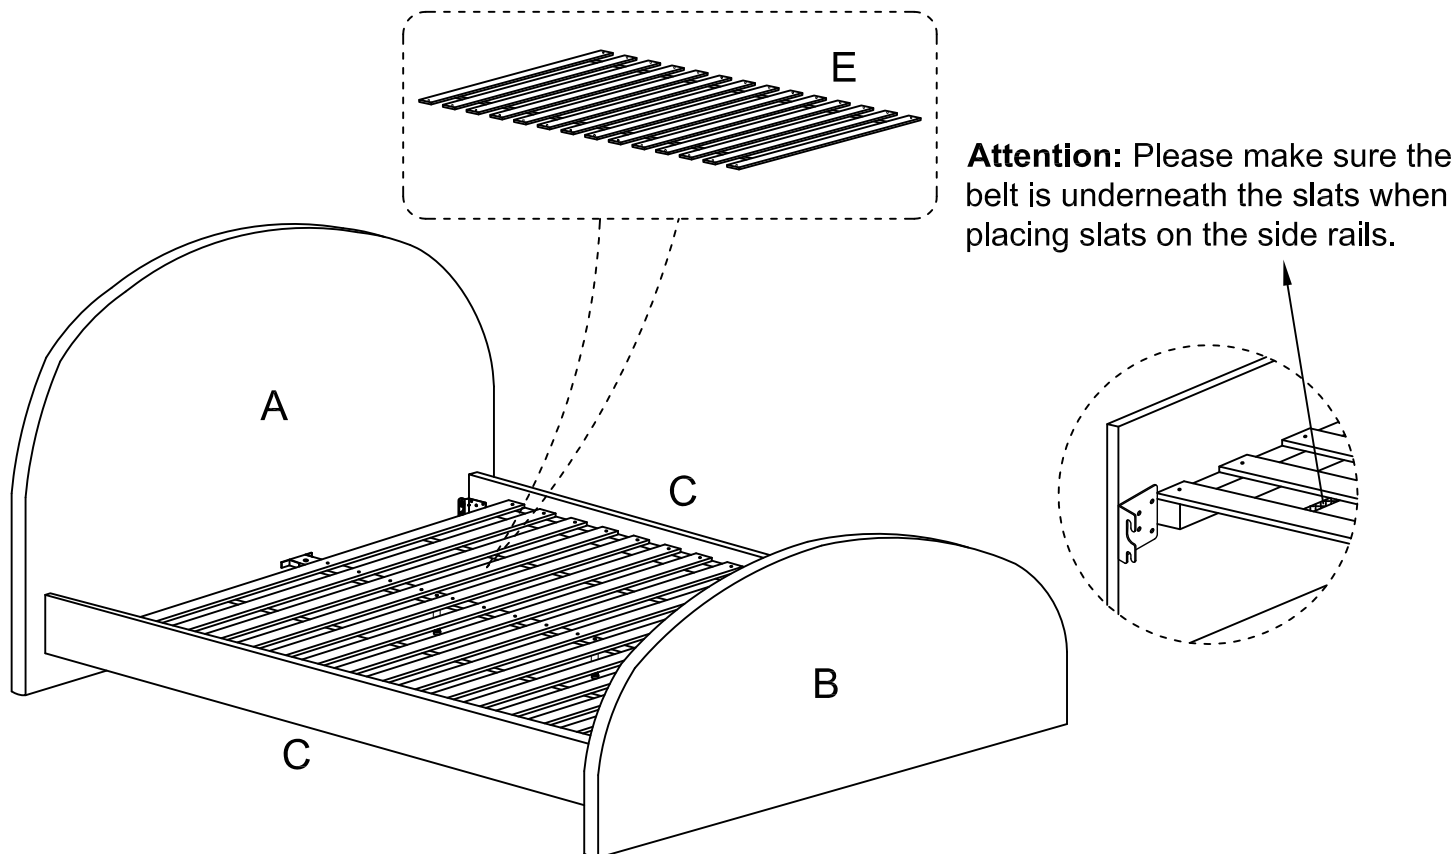


Ensure the bed inner space is square and even as shown above.
Place the Slats (E) onto the assembled bed frame as shown.

Step 6

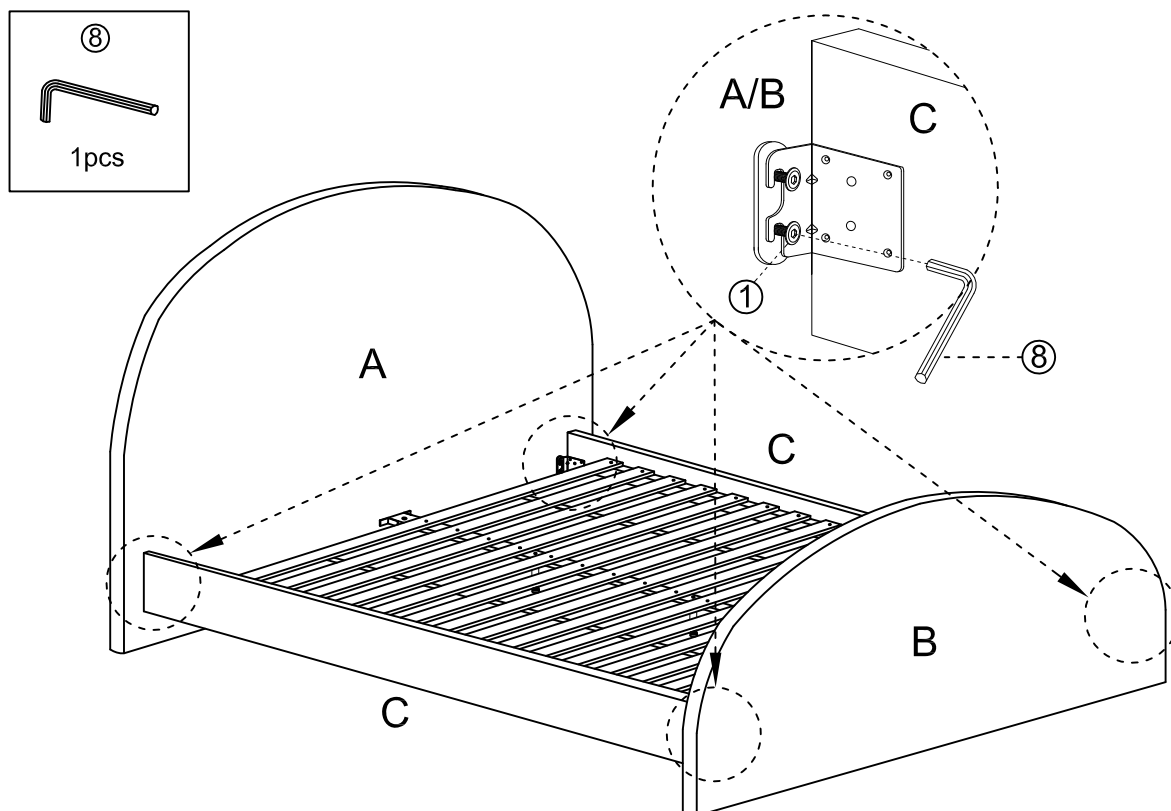


Fully tighten all the Big Head Bolts ① on the Headboard (A) and Footboard (B) using the Allen Key ⑧ as shown.

Step 7

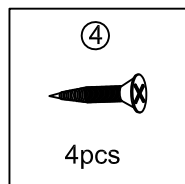



Make sure the screws are in the centre of side rail cleat.

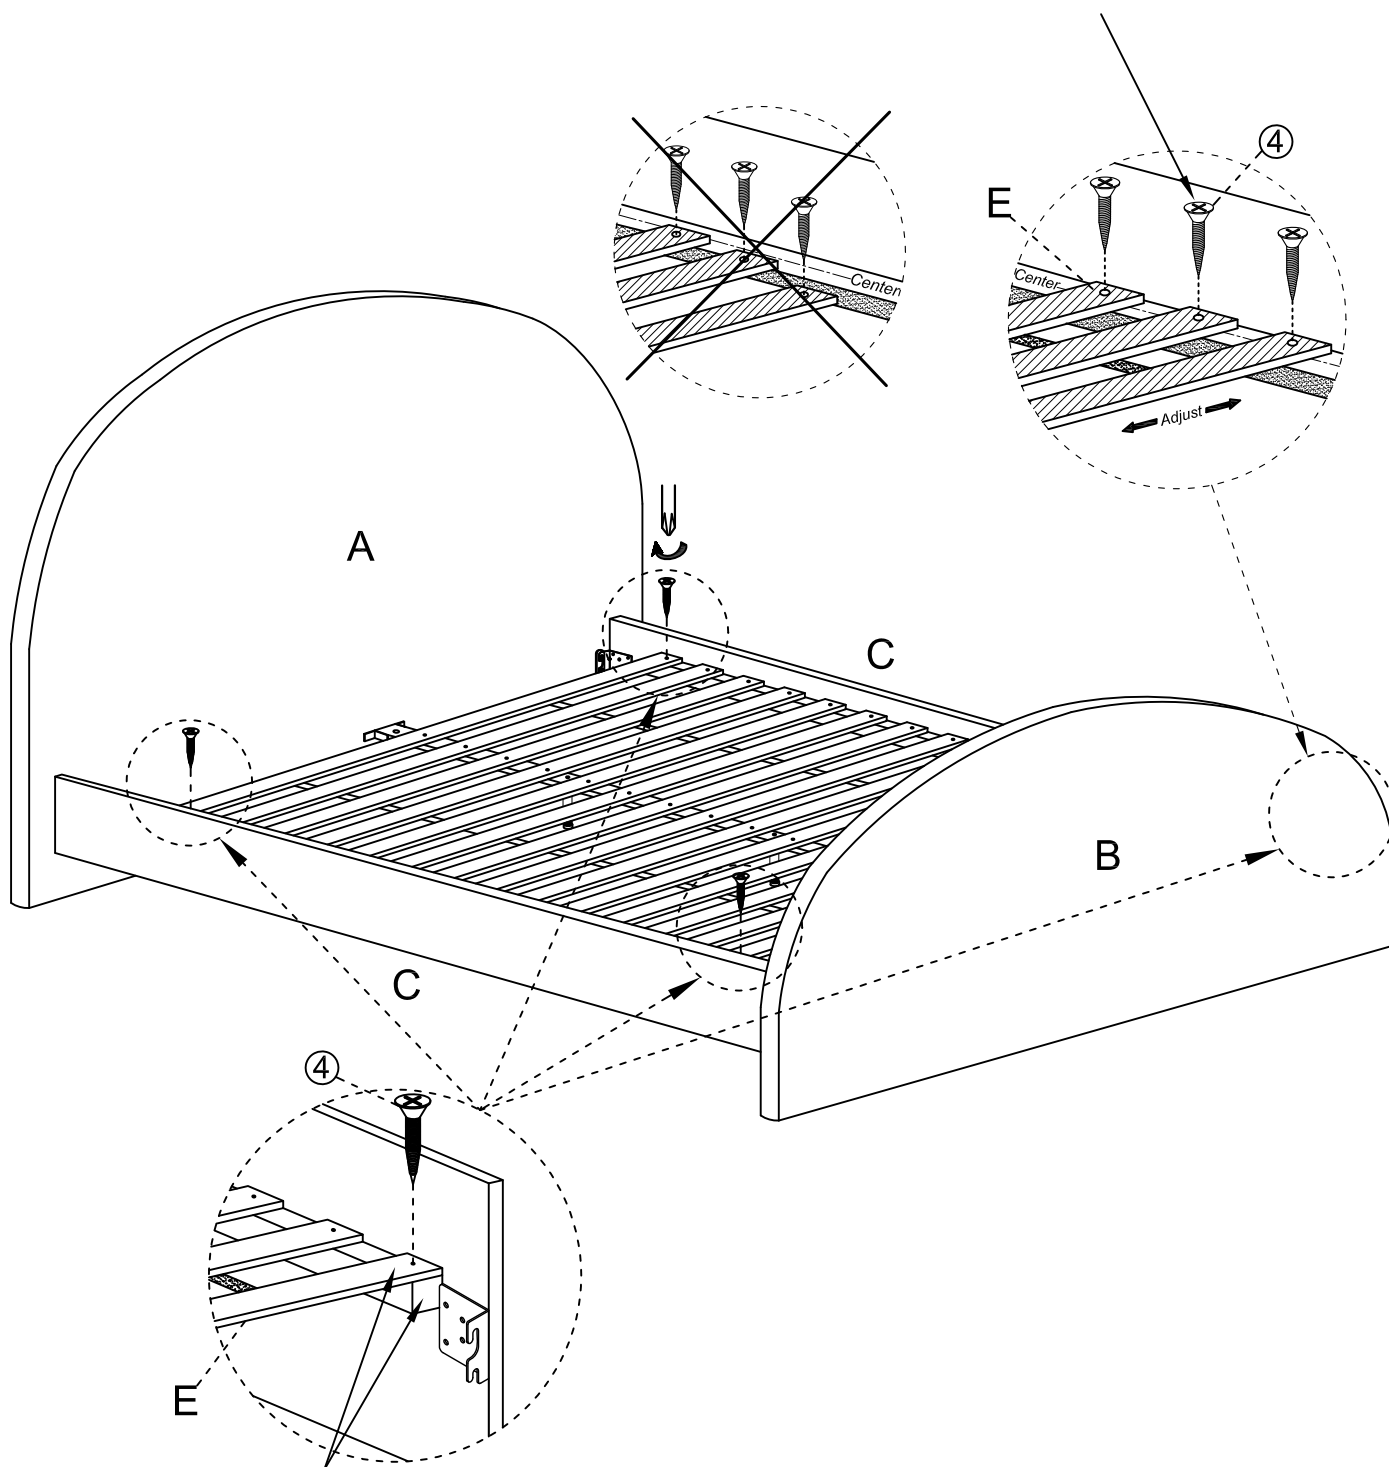

Make sure the two ends are aligned.

Attach the Slats (E) to the assembled frame using 4 x Screws ④ as shown. Ensure the slats are centred before screwing them to the bed frame.

Step 8

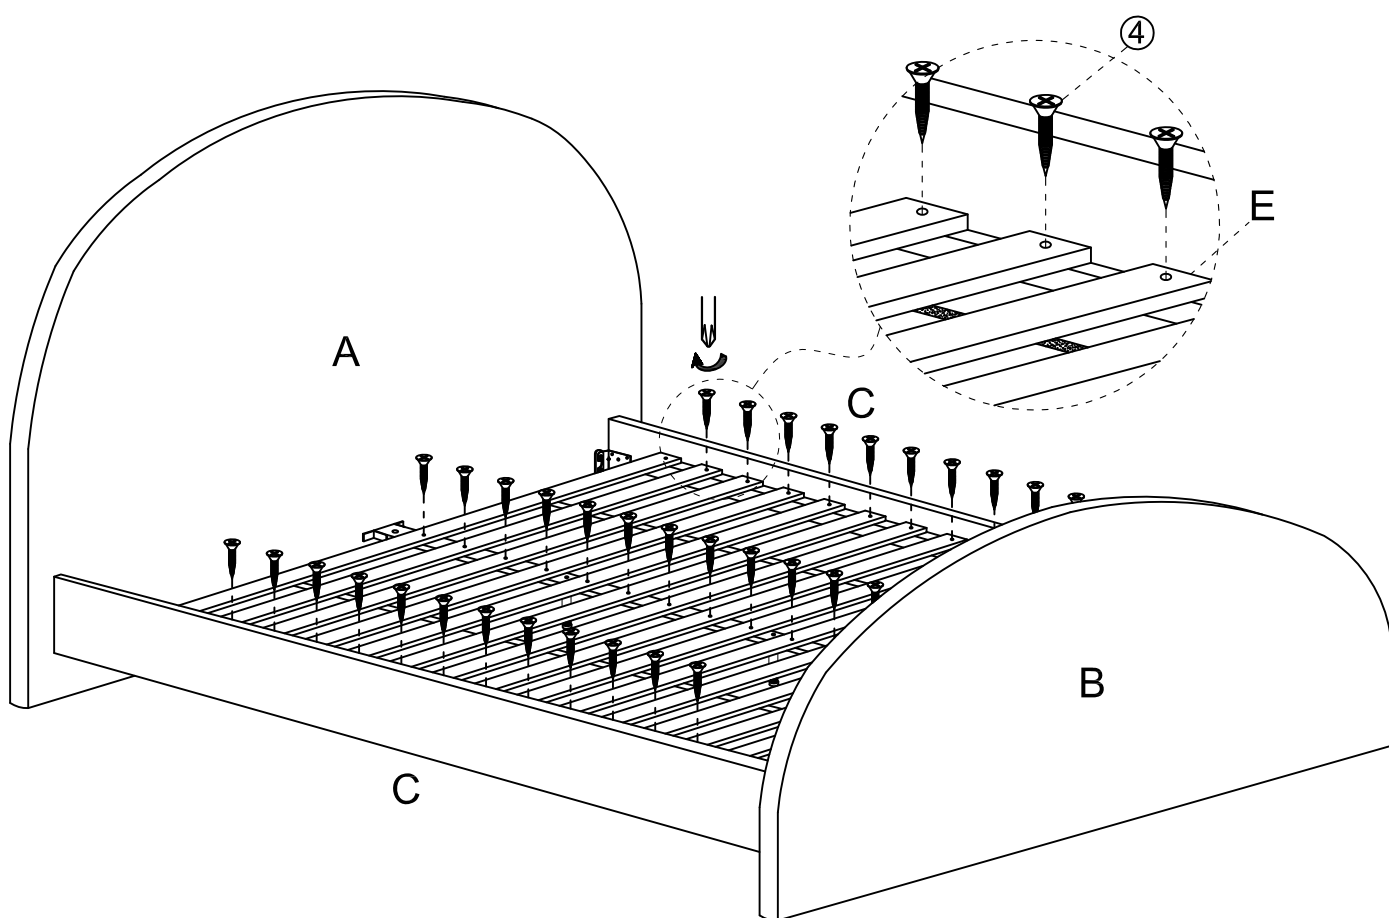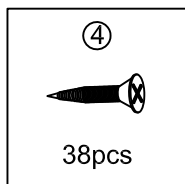

Attach the Slats (E) to the assembled frame using 38 x Screws ④ as shown.
Ensure the slats are centred before screwing them to the bed frame.

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO
SLATS UNLESS MATTRESS IS IN PLACE.