


ASSEMBLY INSTRUCTIONS

60979 - Oscar King Single Bed

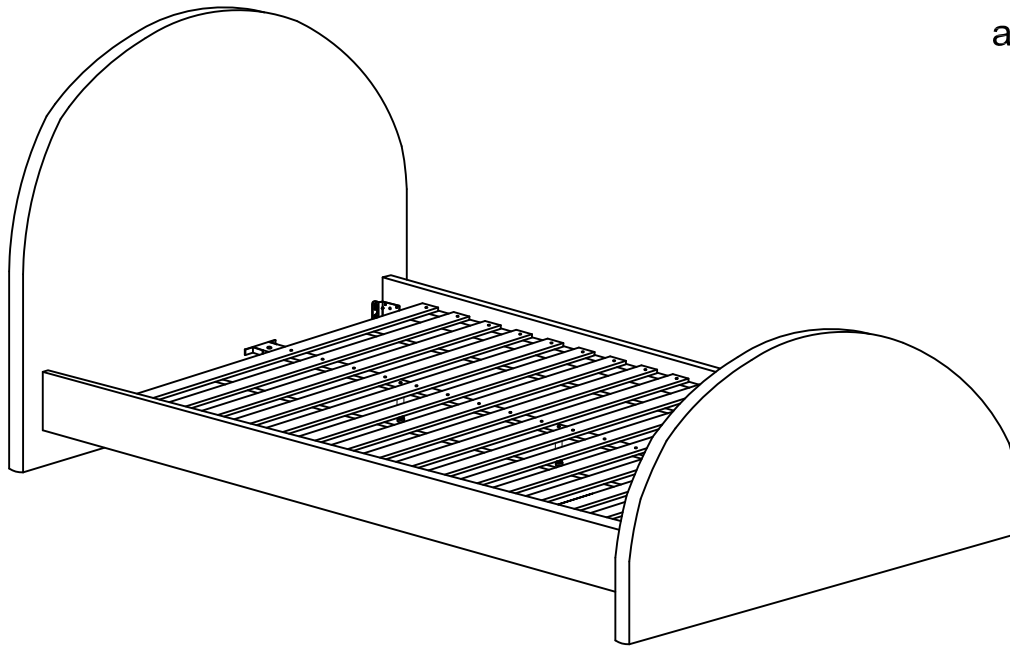



adairs kids







Tools Needed
2 person build




BED FITTINGS

				
Big Head Bolts (M8*18)	Small Bolts(M8*20)	Large Bolts (M8*40)	Screws (M4*32)	Washers (M8*19)
① X 8	② X 6	③ X 2	④ X 45	⑤ X 8
				
Brackets	Plastic Support legs	Allen Key (M5)		
⑥ X 2	⑦ X 2	⑧ X 1		

PART LIST

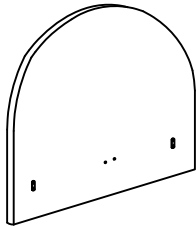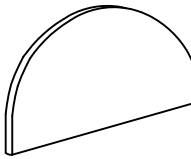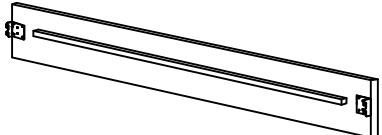		
Headboard	Footboard	Side Rails
A X 1	B X 1	C X 2
		
Center Rail	Slats	
D X 1	E X 1	

Parts

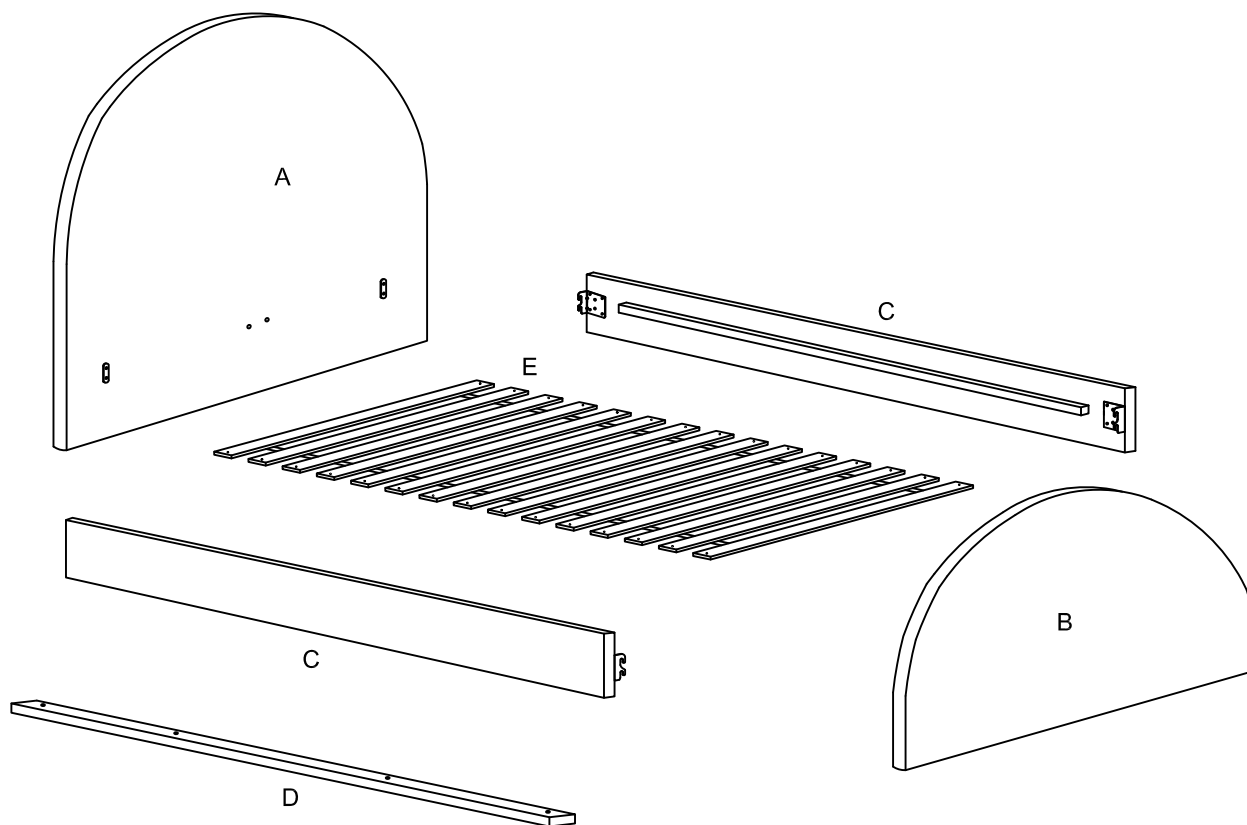



MAXIMUM WEIGHT LOAD: 396 LBS/ 180 KGS.

FOR ASSEMBLY

- First, check the content to make sure that nothing is missing.
- Sort out the parts and fittings as shown.
- Assemble the product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.


Adairs Retail Group Pty Ltd
Level 9, One Middle Road,
Chadstone, VIC, 3148
T 61 3 8888 4500
www.adairs.com.au www.adairs.co.nz

Step 1

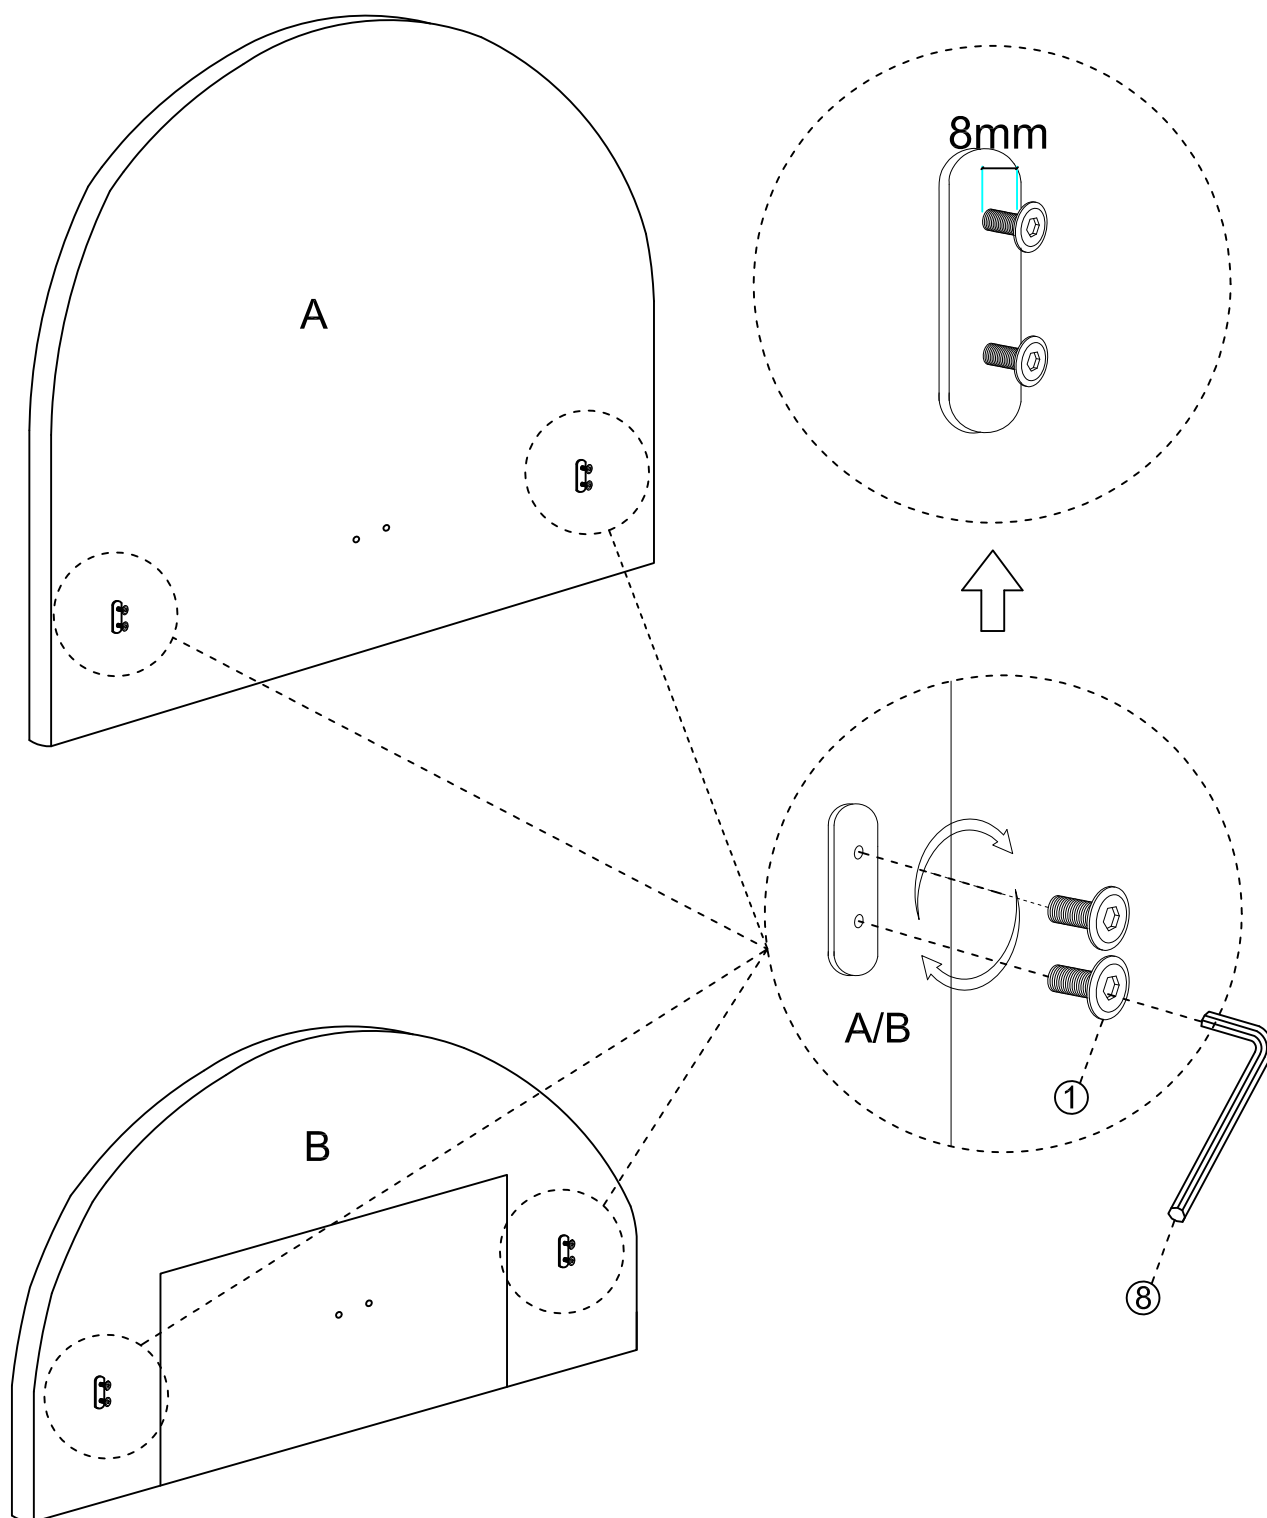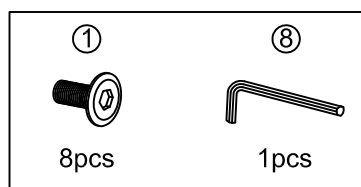


Insert 8 x Big Head Bolts ① into the bracket on the Headboard (A) and Footboard (B), tighten two thirds of the way with Allen Key ⑧ as shown.


Step 2

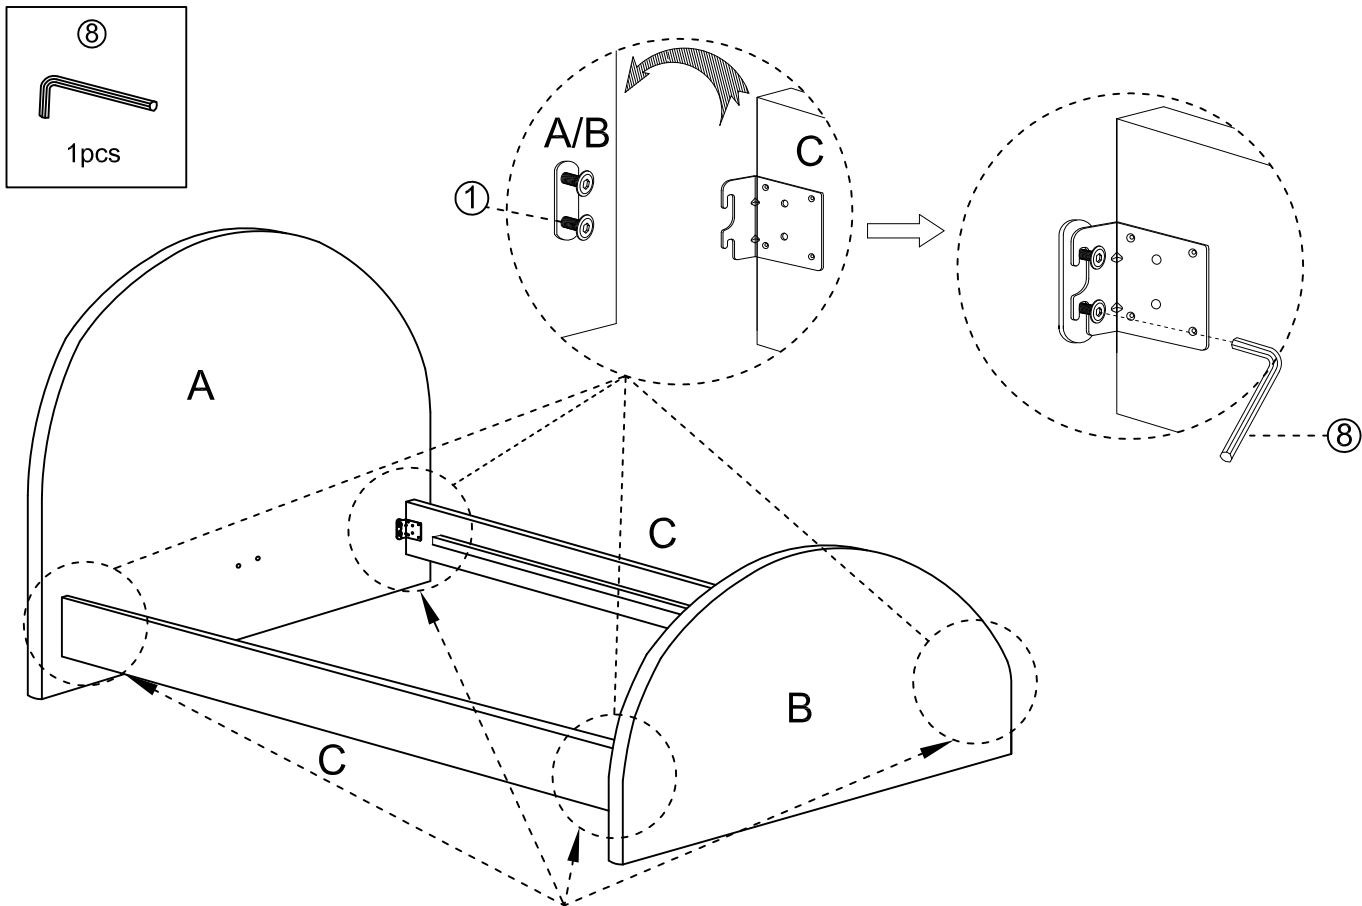


Attach 2 x Side Rails (C) to the Headboard (A) and Footboard (B) by slotting the brackets on the Side Rails (C) over the Big Head Bolts ① as shown.
Do not fully tighten the Big Head Bolts ① until Step 6.

Step 3

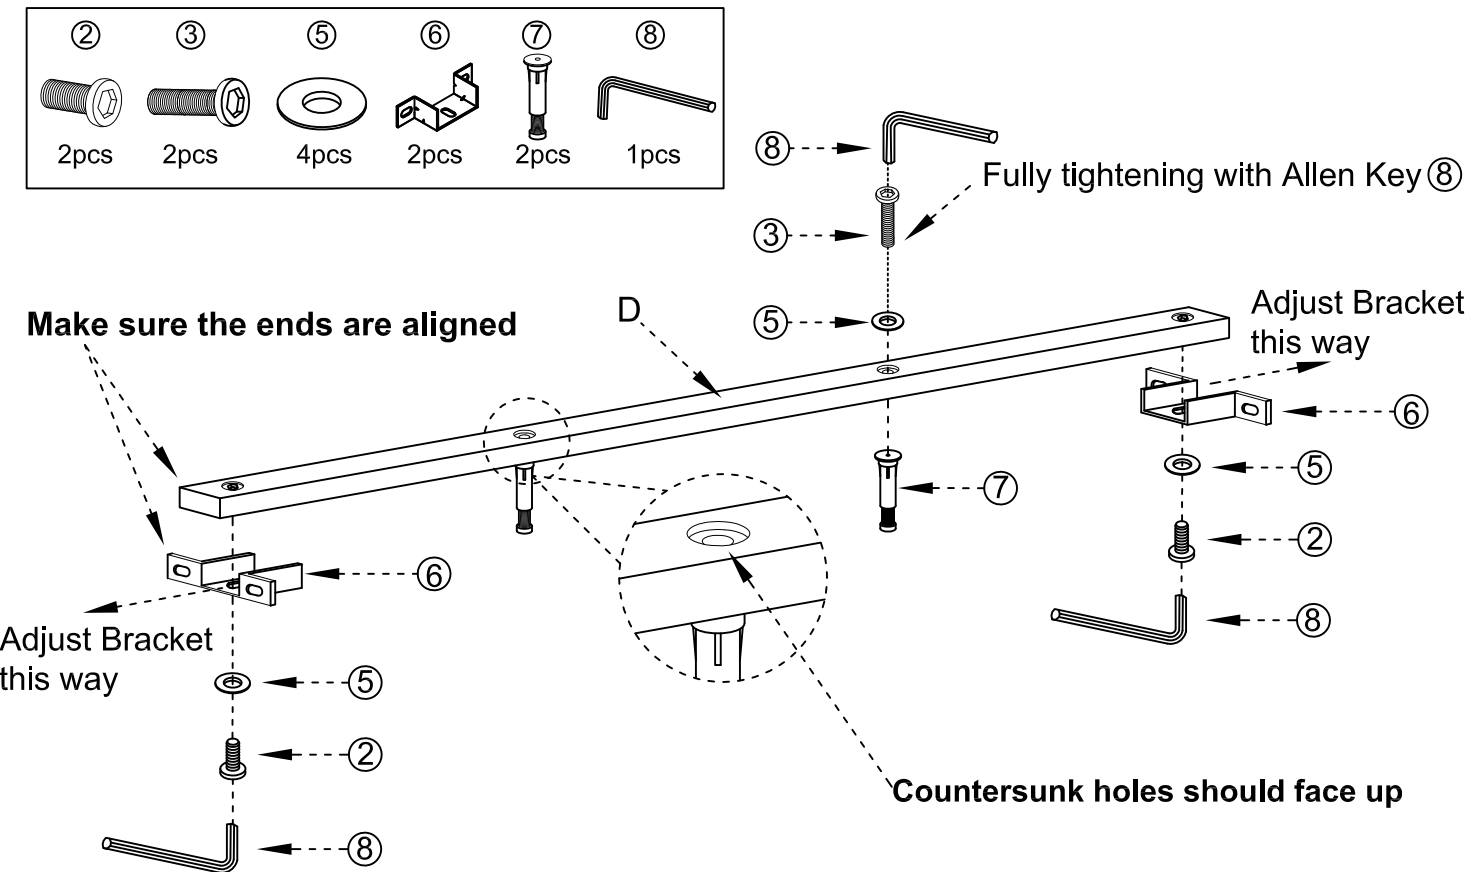

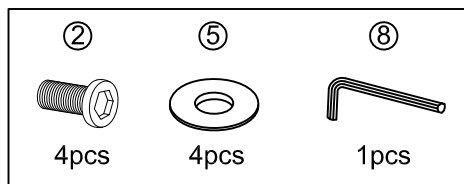


You must use.

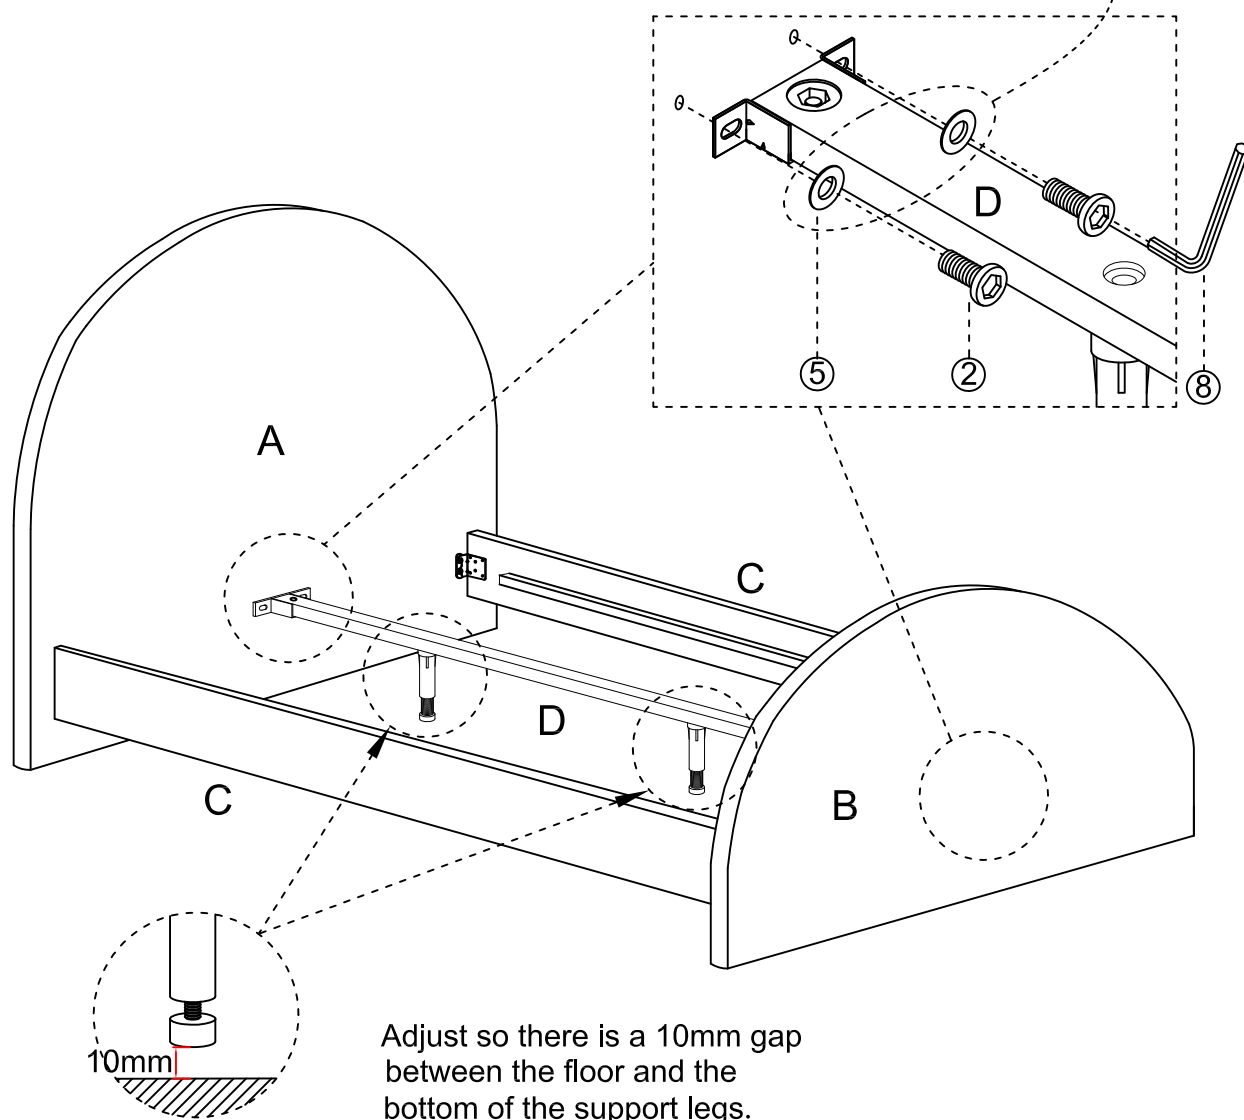


Slot the Center Rail (D) into the Headboard (A) and Footboard (B) as shown. Secure using 4 x Small Bolts ② and 4 x Washers ⑤, fully tightening with Allen Key ⑧ (You MUST use the Washers).

Step 5

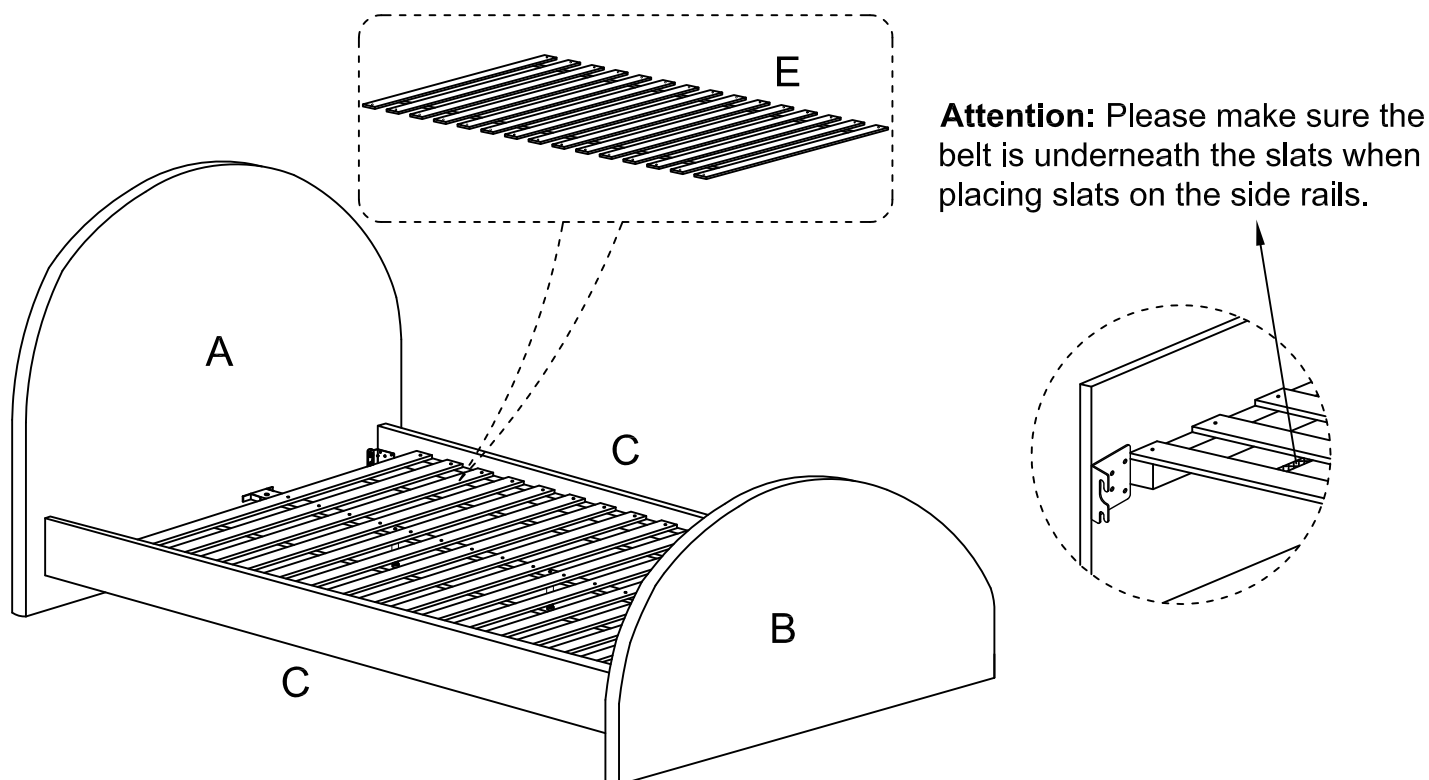


Ensure the bed inner space is square and even as shown above.
Place the Slats (E) onto the assembled bed frame as shown.

Step 6

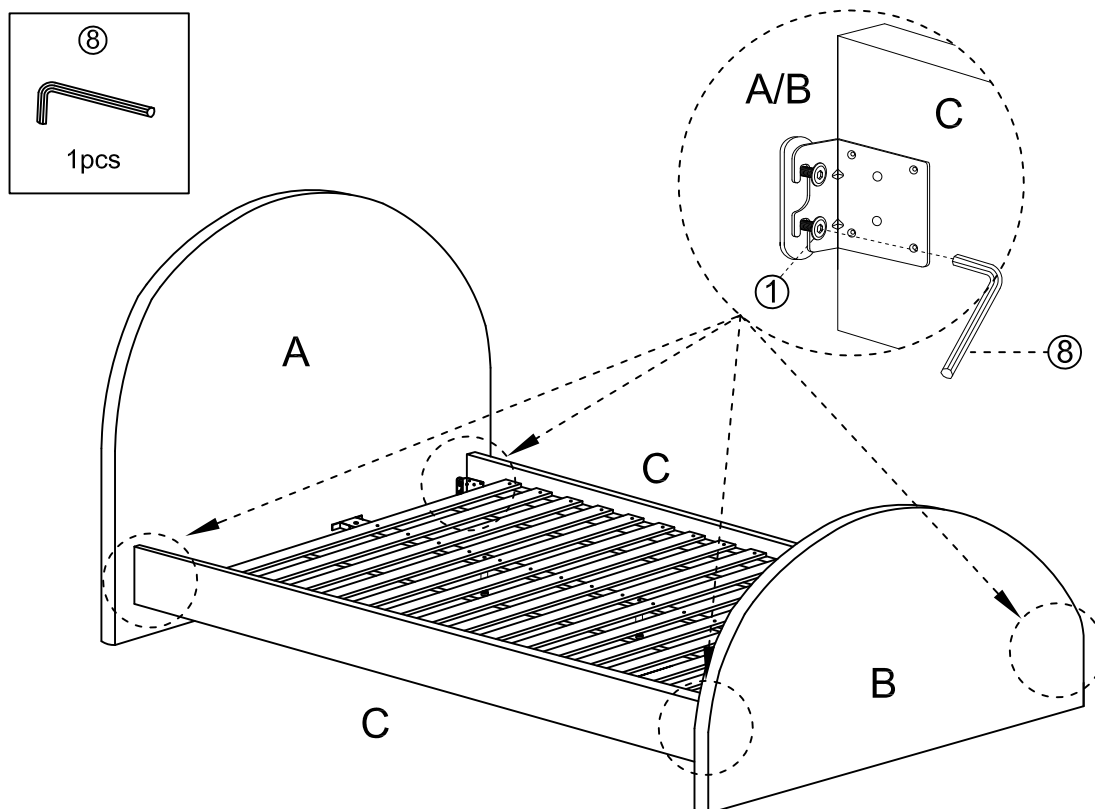


Fully tighten all the Big Head Bolts ① on the Headboard (A) and Footboard (B) using the Allen Key ⑧ as shown.

Step 7

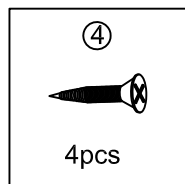



Make sure the screws are in the centre of side rail cleat.

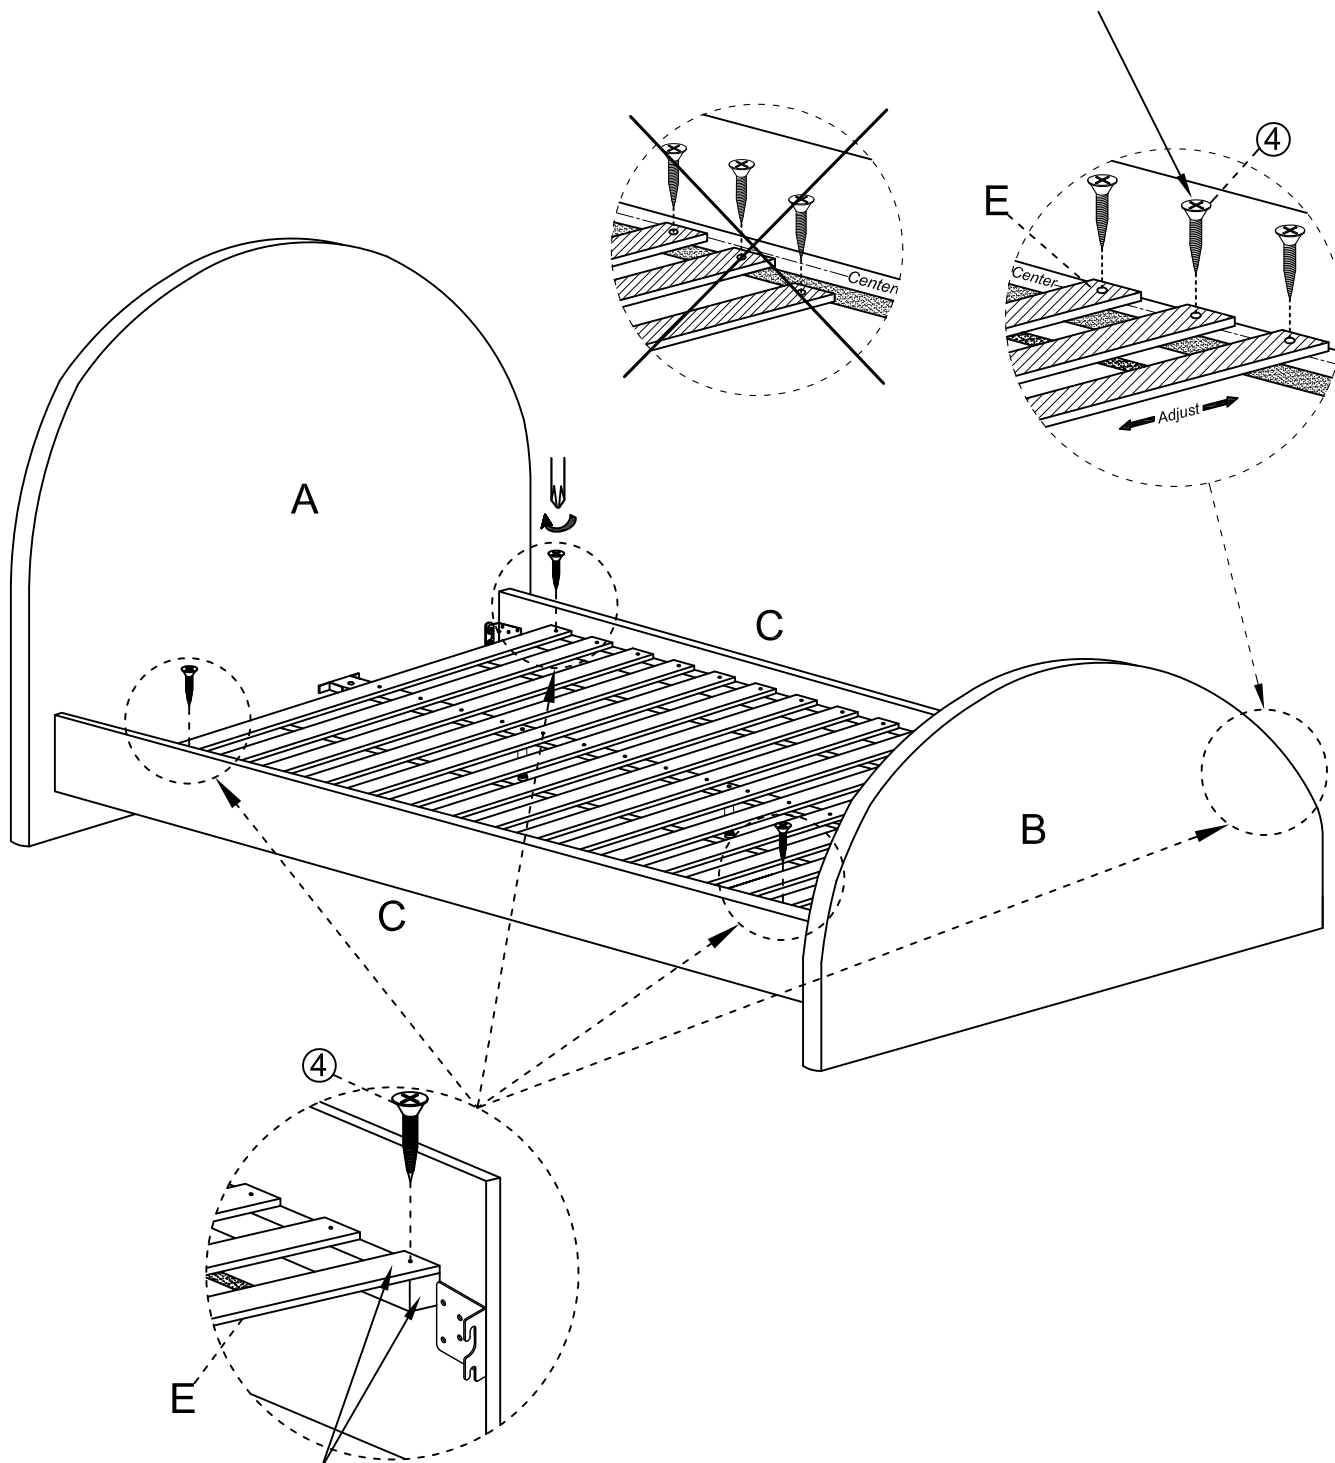

Make sure the two ends are aligned.

Attach the Slats (E) to the assembled frame using 4 x Screws ④ as shown. Ensure the slats are centred before screwing them to the bed frame.

Step 8

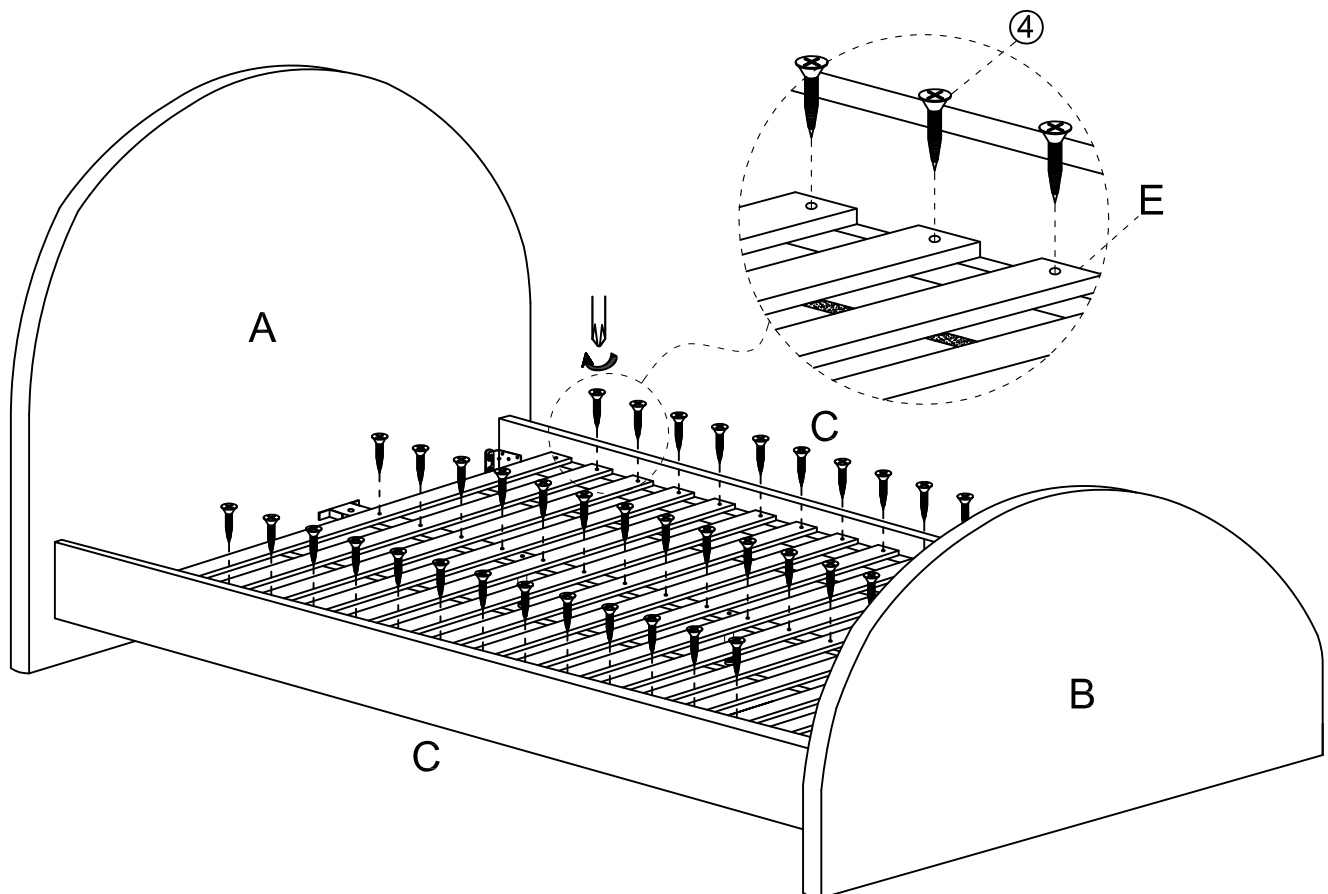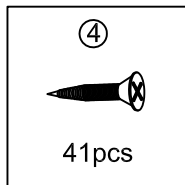

Attach the Slats (E) to the assembled frame using 41 x Screws ④ as shown.
Ensure the slats are centred before screwing them to the bed frame.

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO
SLATS UNLESS MATTRESS IS IN PLACE.