




ASSEMBLY INSTRUCTIONS
60979 - Oscar Single Bed

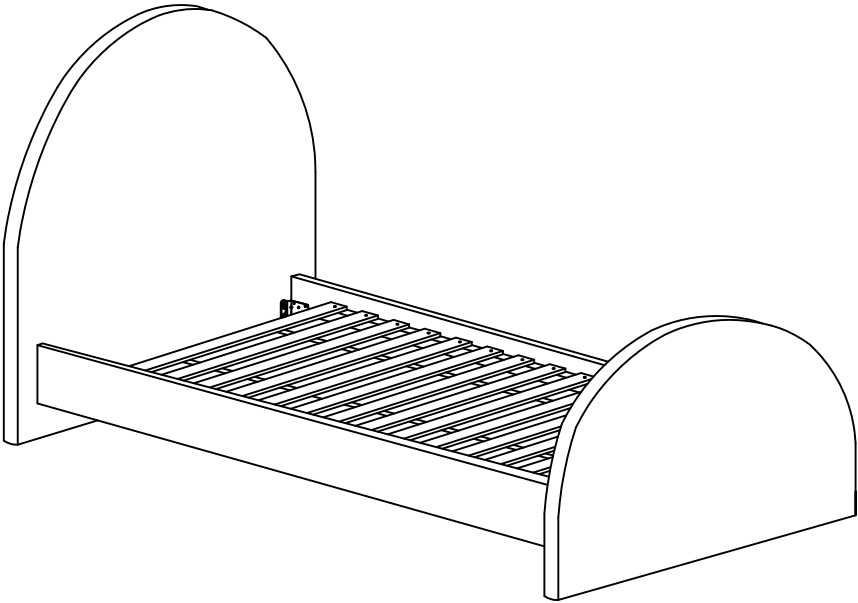





Tools Needed
2 person build

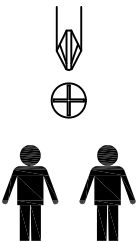


BED FITTINGS

		
Big Head Bolts (M8*18)	Screws (M4*32)	Allen Key (M5)
① X 8	② X 26	③ X 1

PART LIST

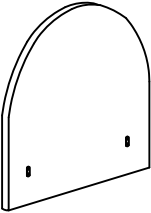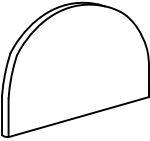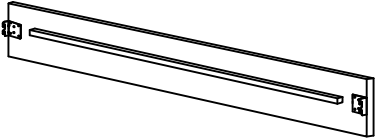		
Headboard	Footboard	Side Rails
A X 1	B X 1	C X 2
		
Slats		
D X 1		

Parts

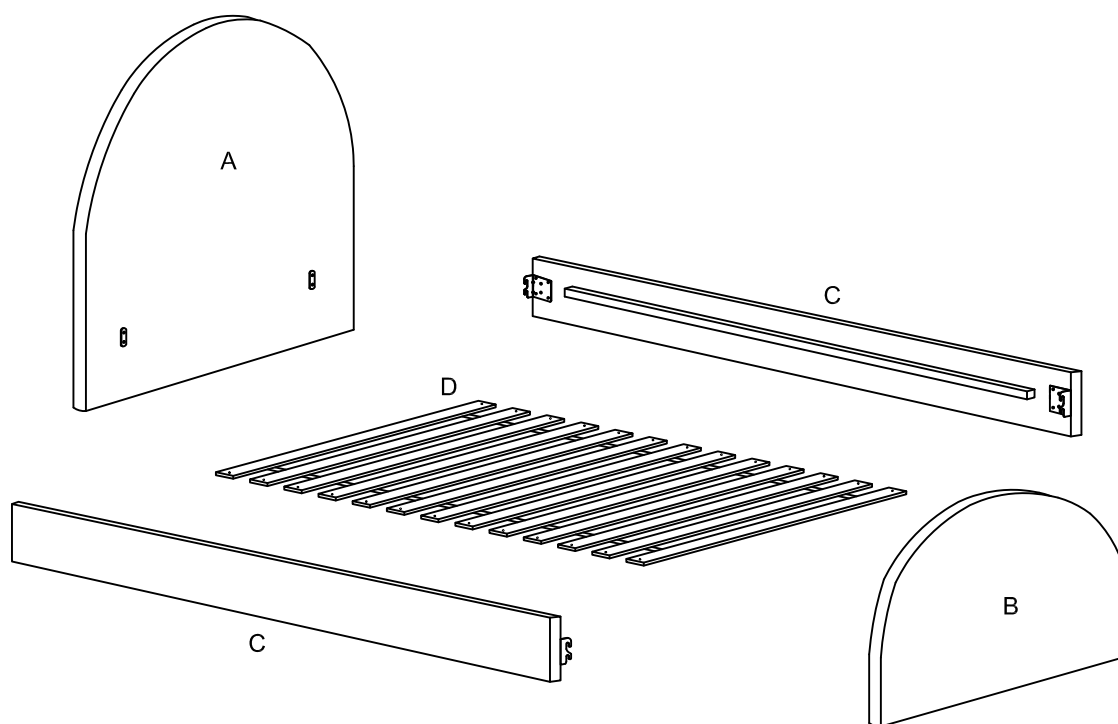



MAXIMUM WEIGHT LOAD: 396 LBS/ 180 KGS.

FOR ASSEMBLY

- First, check the content to make sure that nothing is missing.
- Sort out the parts and fittings as shown.
- Assemble the product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.



Adairs Retail Group Pty Ltd
Level 9, One Middle Road,
Chadstone, VIC, 3148
T 61 3 8888 4500
www.adairs.com.au www.adairs.co.nz

Step 1

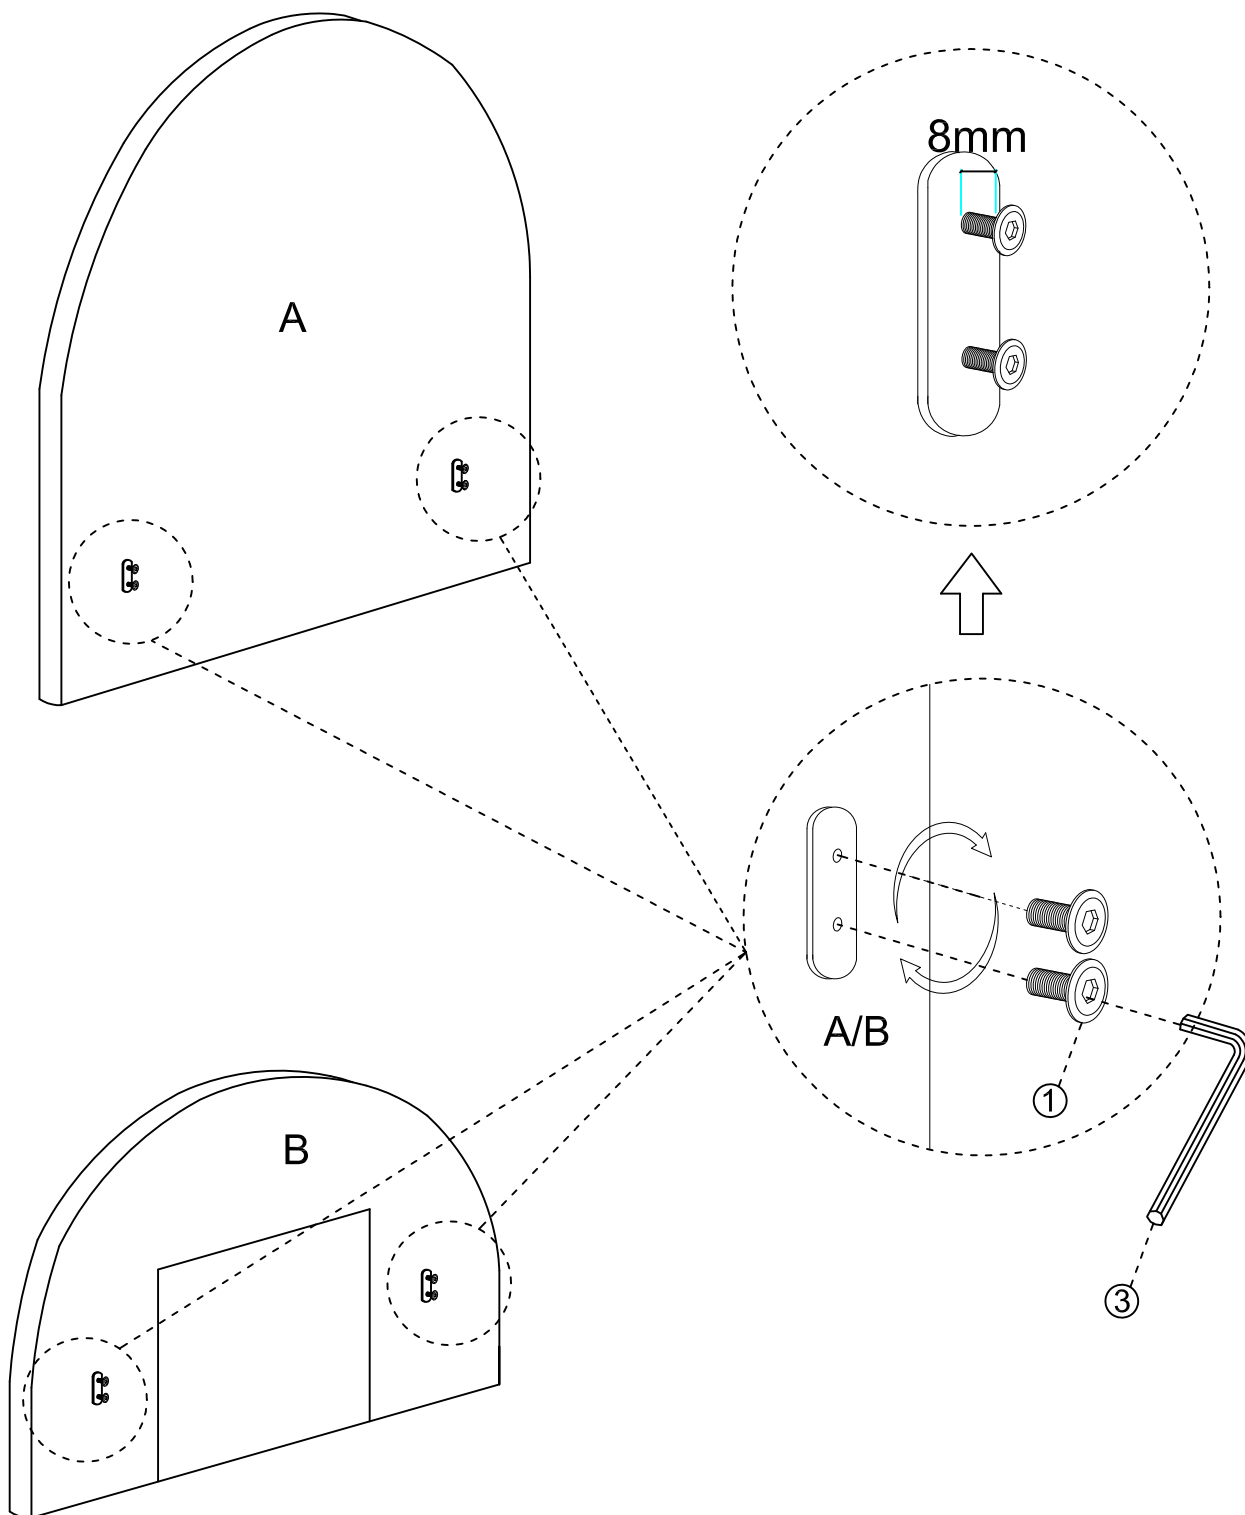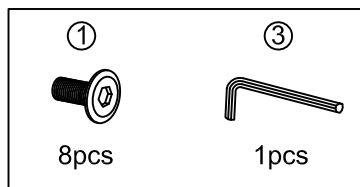


Insert 8 x Big Head Bolts ① into the bracket on the Headboard (A) and Footboard (B), tighten two thirds of the way with Allen Key ③ as shown.

Step 2

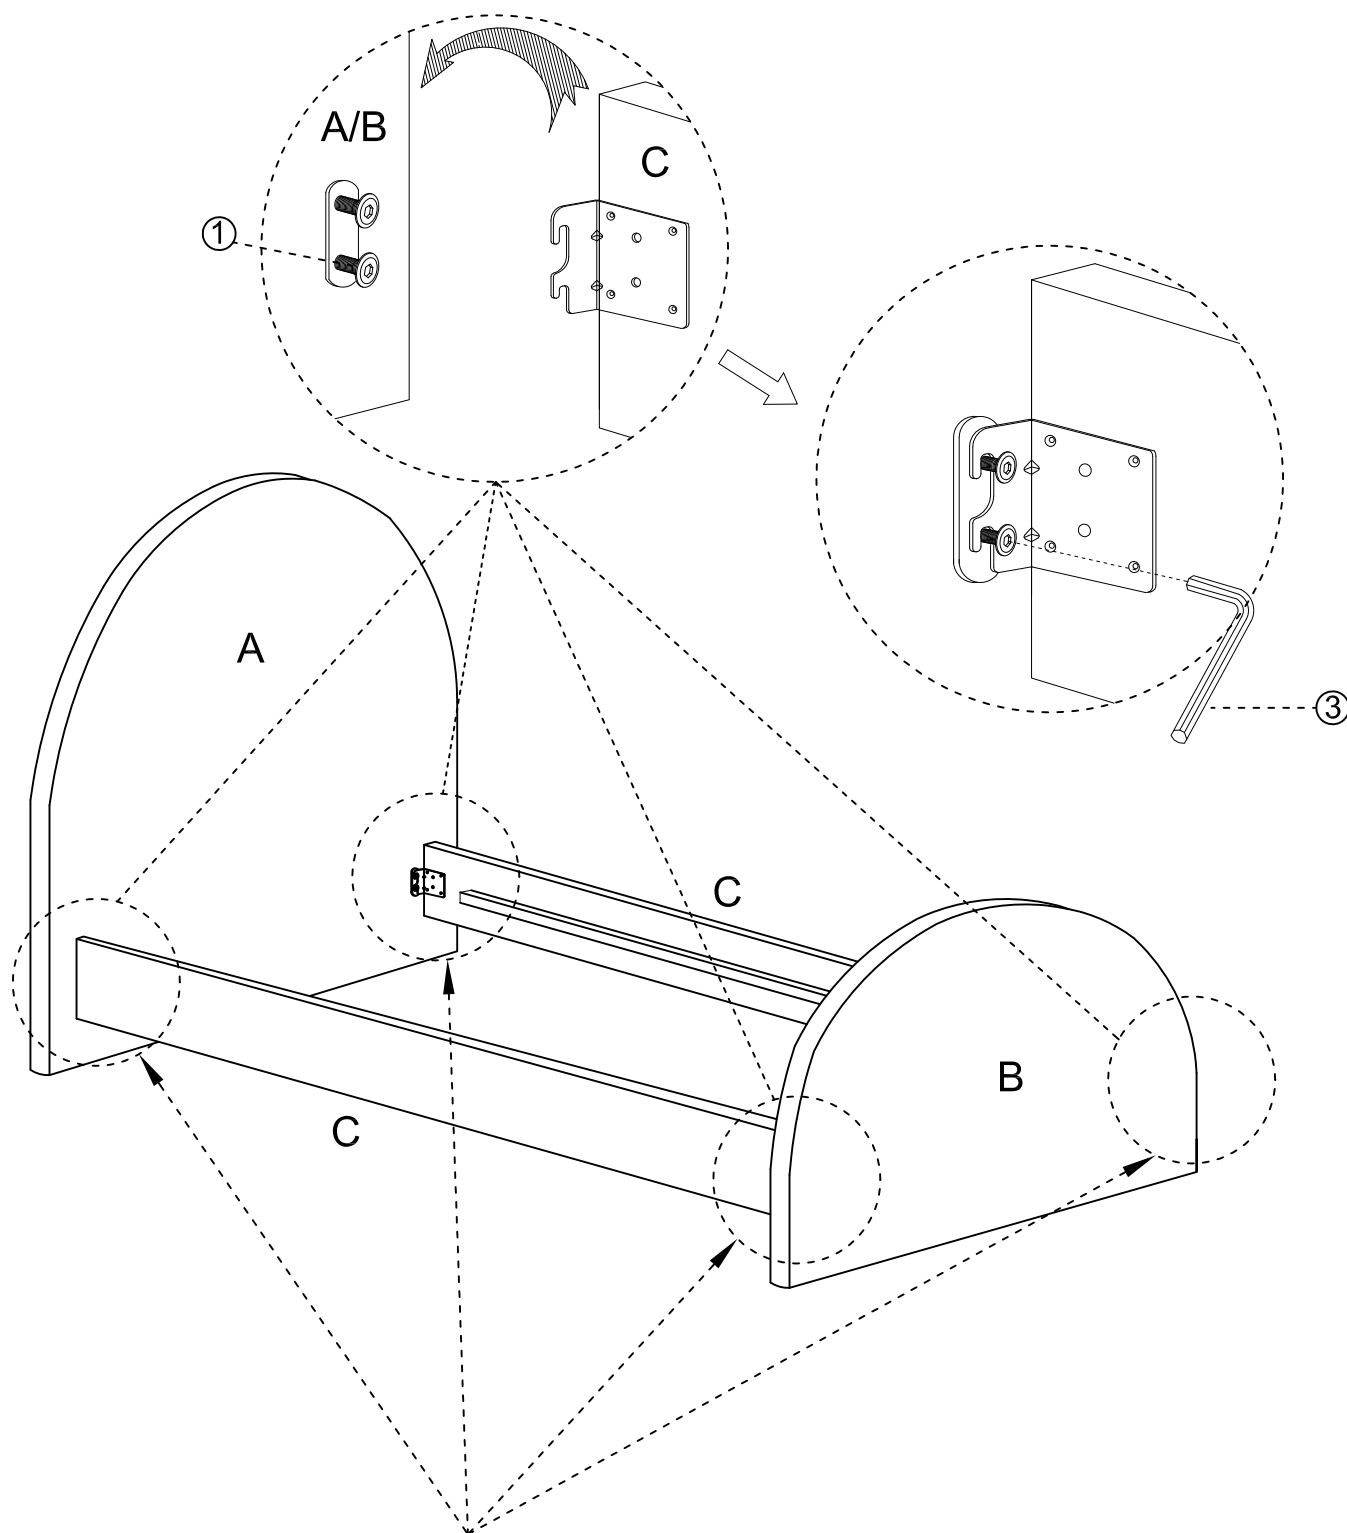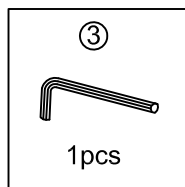

Attach 2 x Side Rails (C) to the Headboard (A) and Footboard (B) by slotting the brackets on the Side Rails (C) over the Big Head Bolts ① as shown. Do not fully tighten the Big Head Bolts ① until Step 4.



Step 3

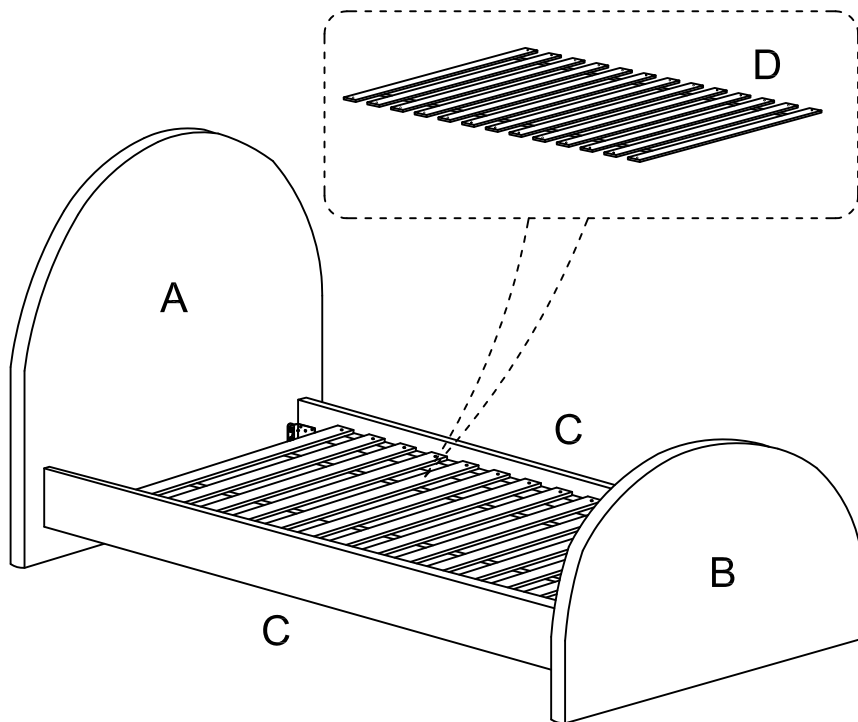

Attention: Please make sure the belt is underneath the slats when placing slats on the side rails.


Ensure the bed inner space is square and even as shown above.
Place the Slats (D) onto the assembled bed frame as shown.

Step 4

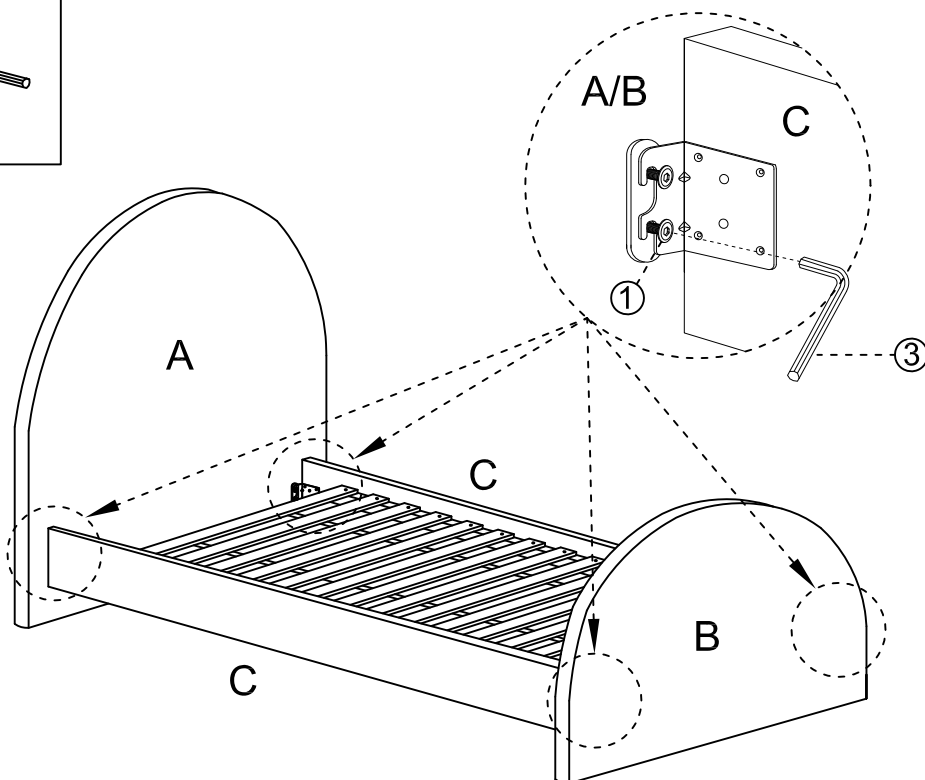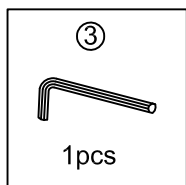


Fully tighten all the Big Head Bolts ① on the Headboard (A) and Footboard (B) using the Allen Key ③ as shown.

Step 5

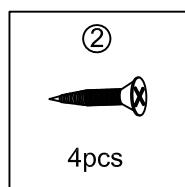



Make sure the screws are in the centre of side rail cleat.

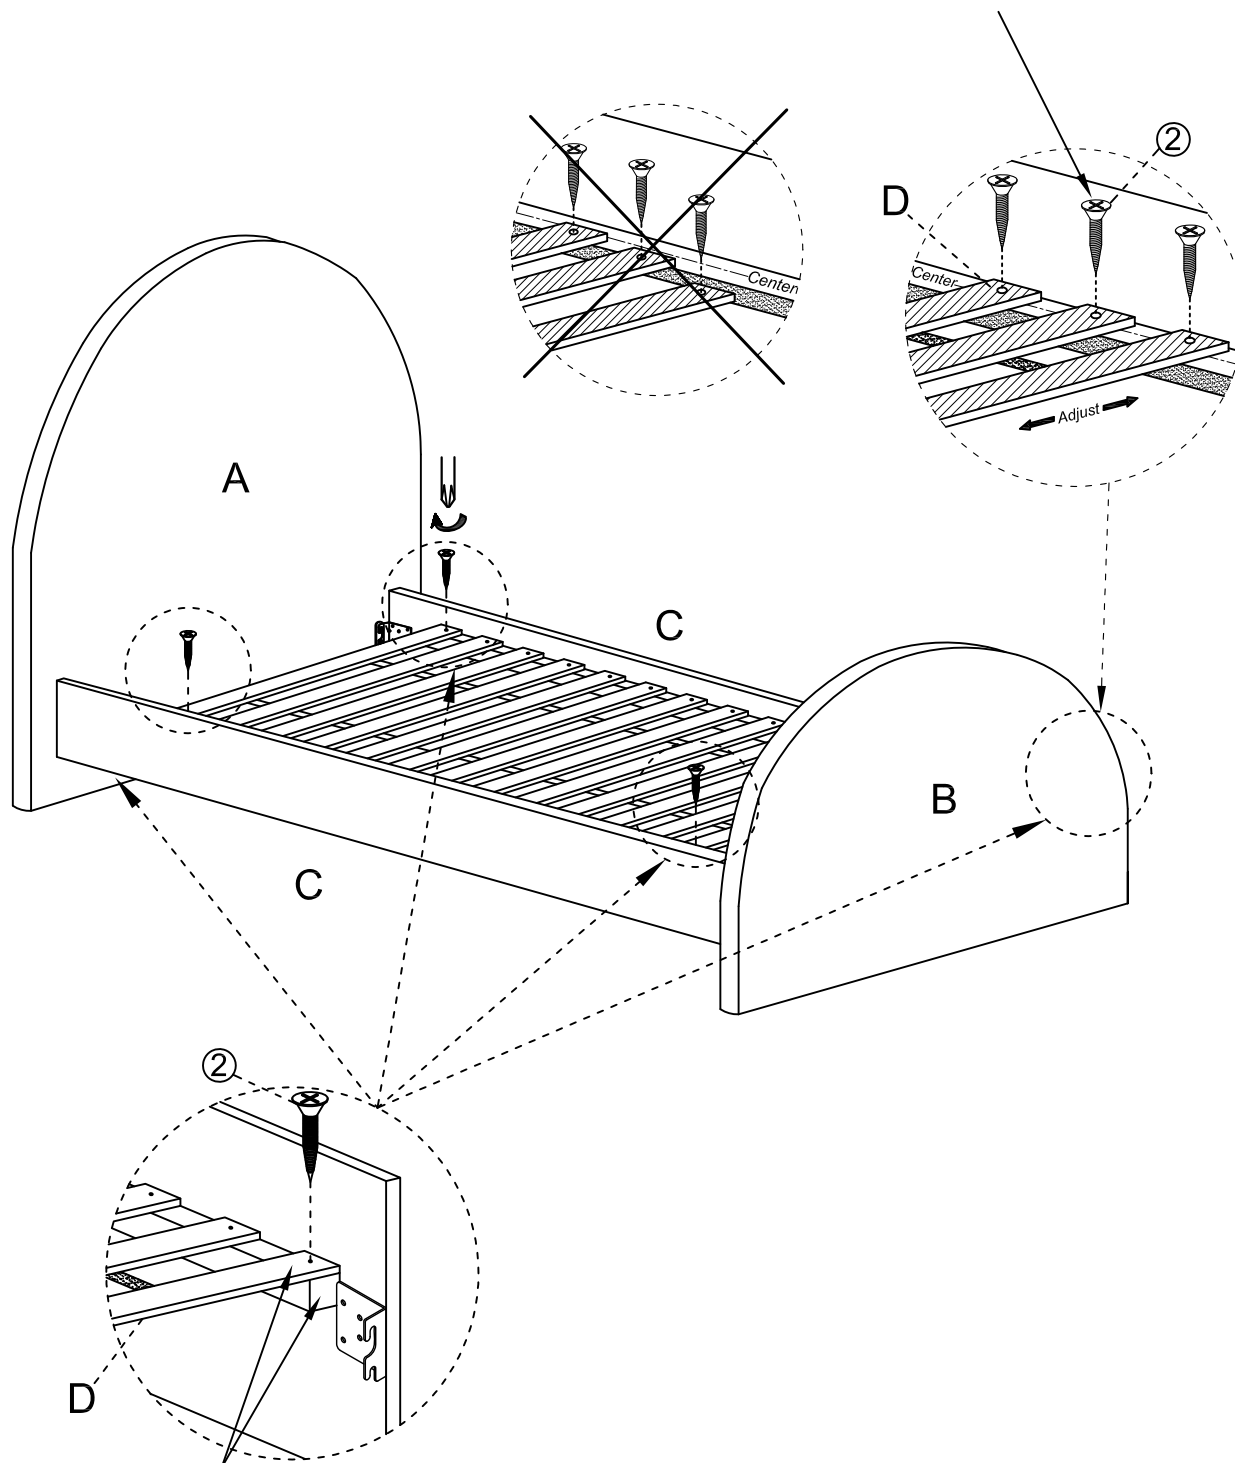

Make sure the two ends are aligned.

Attach the Slats (D) to the assembled frame using 4 x Screws ② as shown. Ensure the slats are centred before screwing them to the bed frame.

Step 6

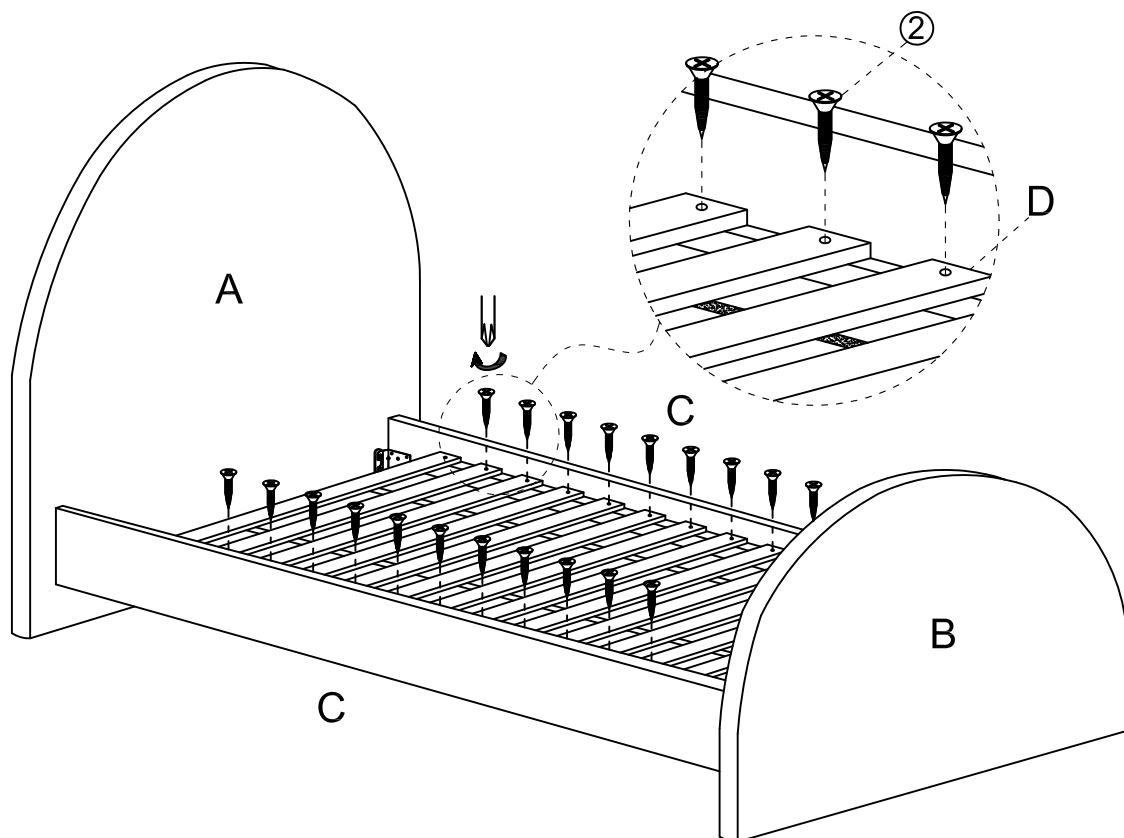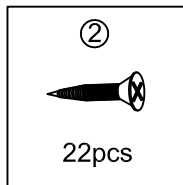

Attach the Slats (D) to the assembled frame using 22 x Screws ② as shown. Ensure the slats are centred before screwing them to the bed frame.

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO SLATS UNLESS MATTRESS IS IN PLACE.