


ASSEMBLY INSTRUCTIONS

60980 - Lennox King Single Bed

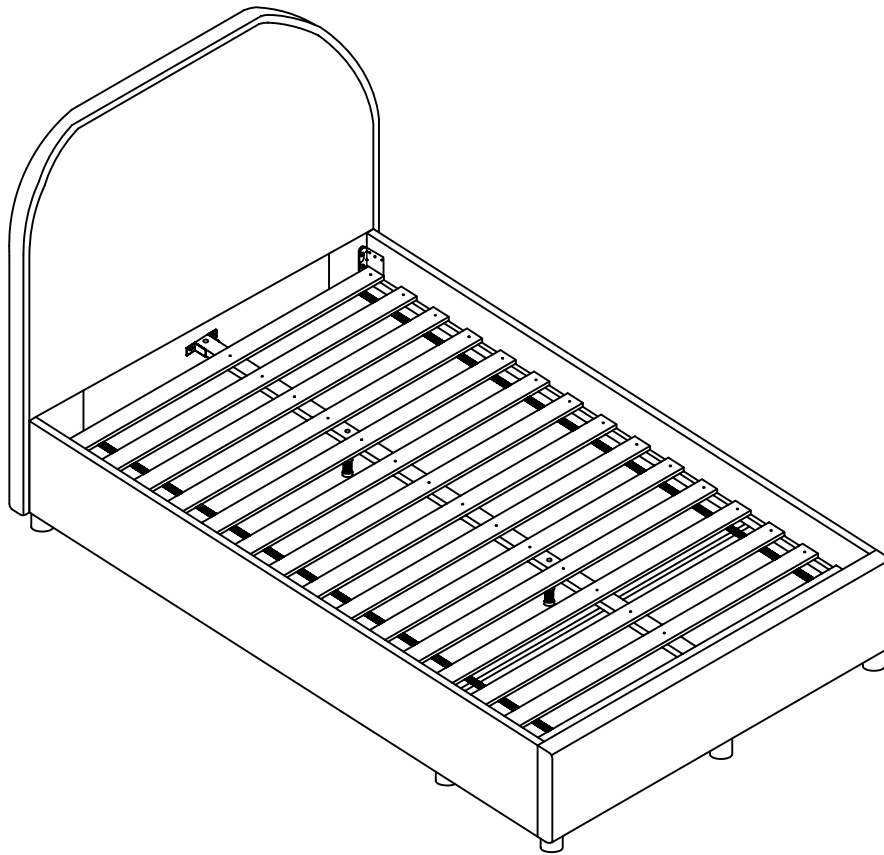



adairs kids






Tools Needed
2 person build




BED FITTINGS

				
Feet	Big Head Bolts (M8*18)	Small Bolts (M8*25)	Medium Bolts (M8*35)	Washers (M8*19)
① X 8	② X 8	③ X 10	④ X 10	⑤ X 16
				
Plastic Support Leg	Bracket	Allen Key (M5)	Screws (M4*32)	
⑥ X 2	⑦ X 2	⑧ X 1	⑨ X 42	

PART LIST

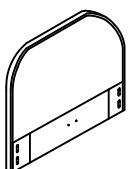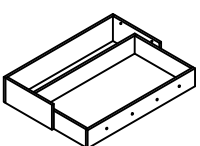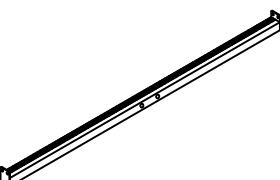			
Headboard	Right Side Rail	Left Side Rail	Footboard Drawer
A X 1	B X 1	C X 1	D X 1
			
Drawer Board	Center Rail	Metal Cross Bar	Slats
E X 1	F X 1	G X 1	H X 1

Parts

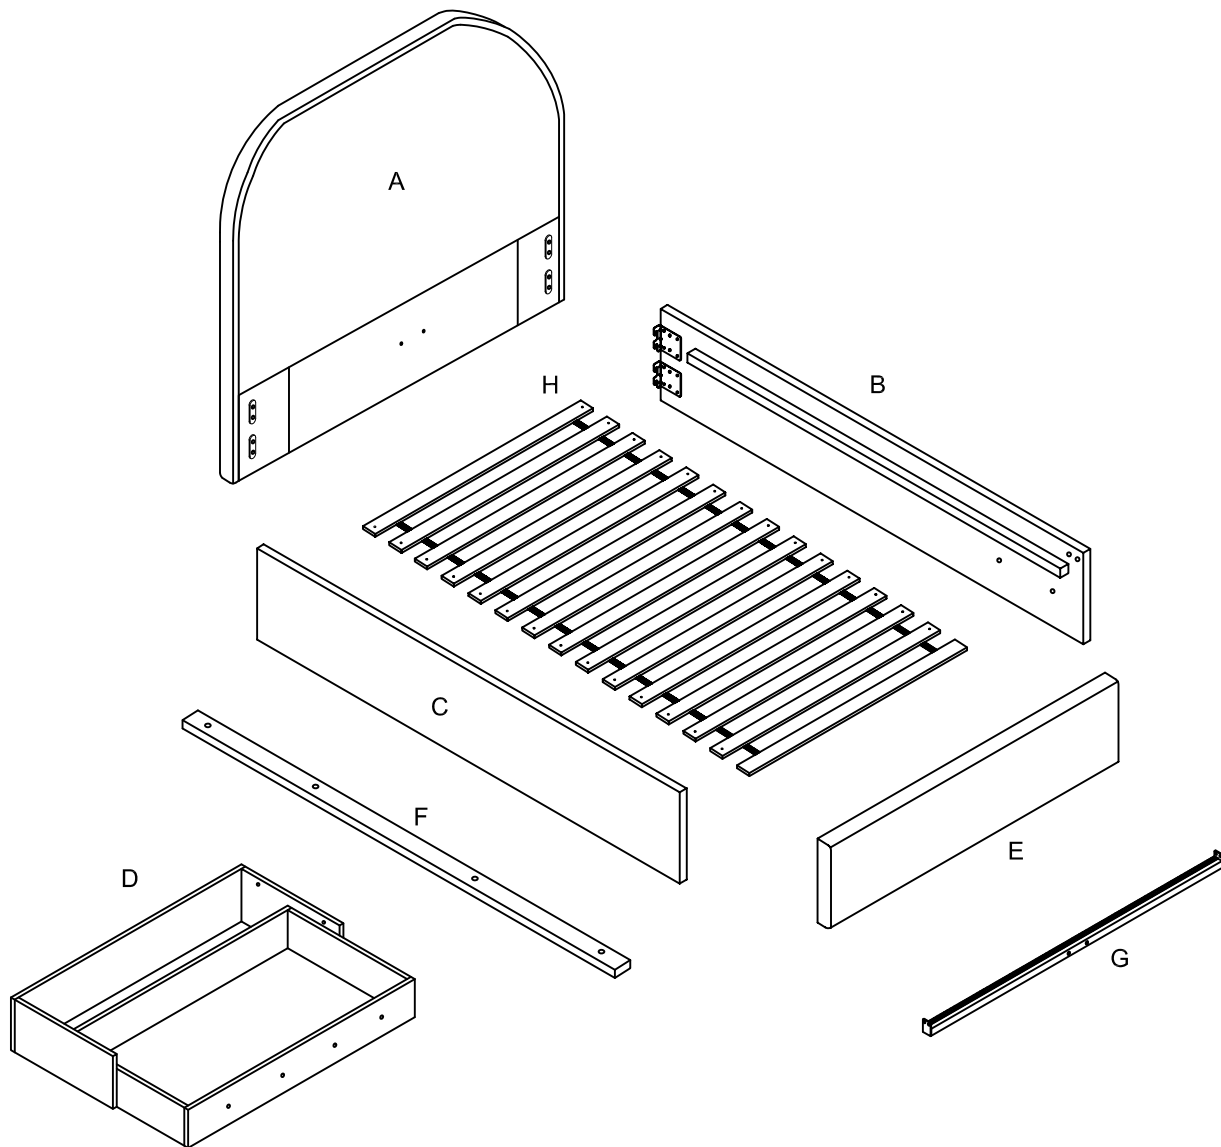



MAXIMUM WEIGHT LOAD: 396 LBS/ 180 KGS.

FOR ASSEMBLY

- First, check the content to make sure that nothing is missing.
- Sort out the parts and fittings as shown.
- Assemble the product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.



Adairs Retail Group Pty Ltd
Level 9, One Middle Road,
Chadstone, VIC, 3148
T 61 3 8888 4500
www.adairs.com.au www.adairs.co.nz

Step 1

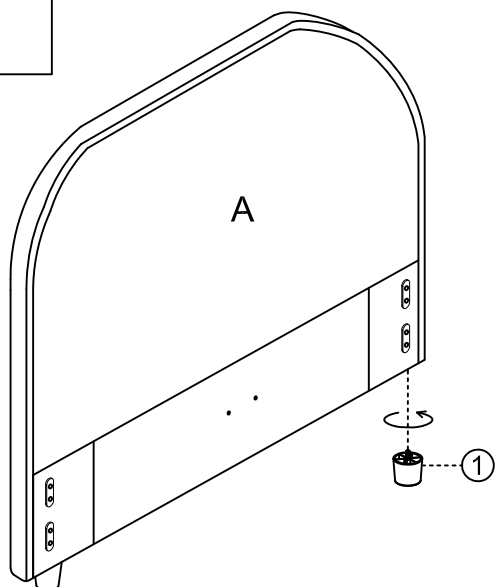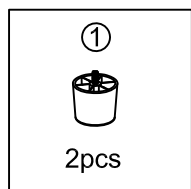





Install 2 x Feet ① on the bottom of Headboard (A), rotate the feet until they are fully tightened.

Step 2

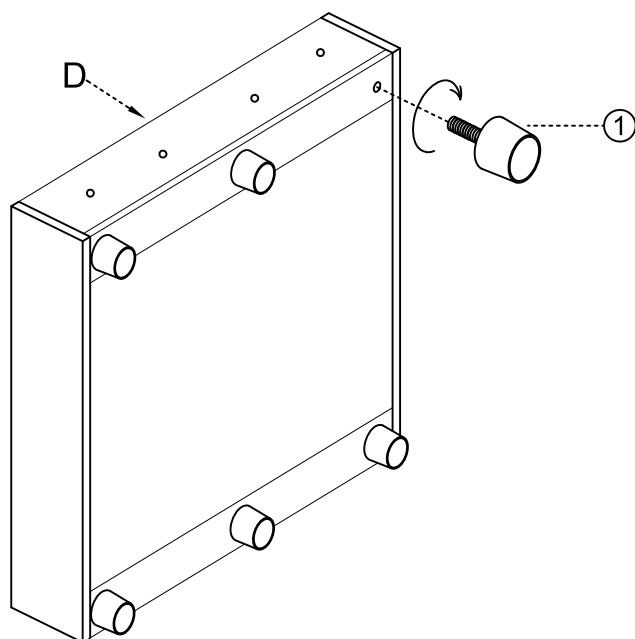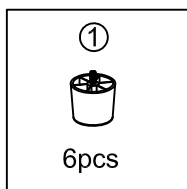



Install 6 x Feet ① on the bottom of Footboard Drawer (D) as shown, please make sure you tighten all of them.

Step 3

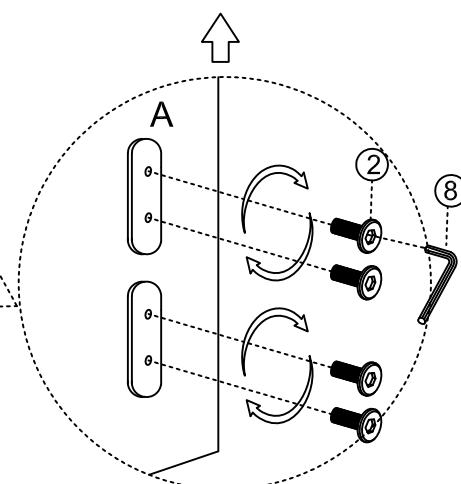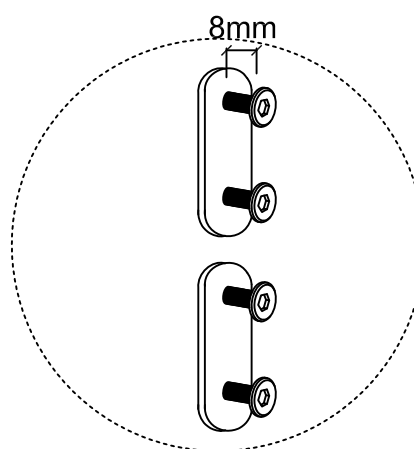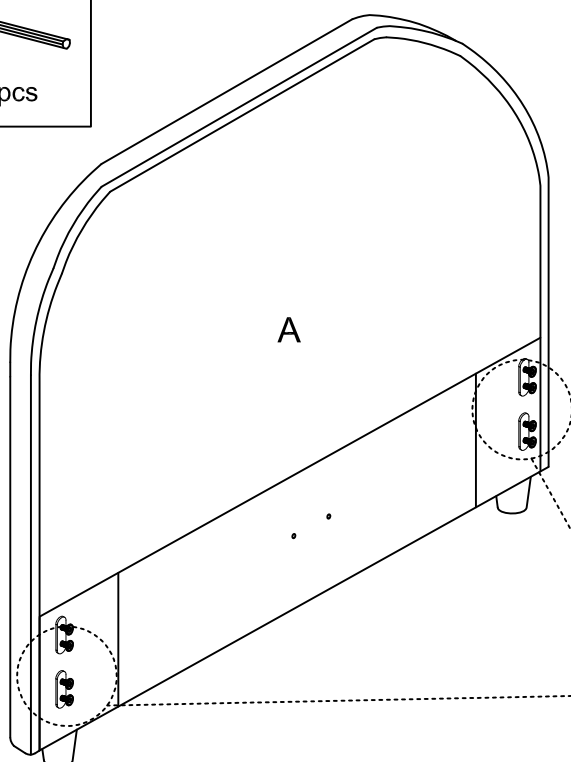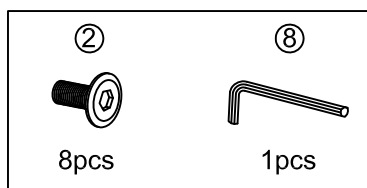



Insert 8 x Big Head Bolts ② into the brackets on the Headboard (A) and tighten two thirds of the way with Allen key ⑧ as shown.

Step 4

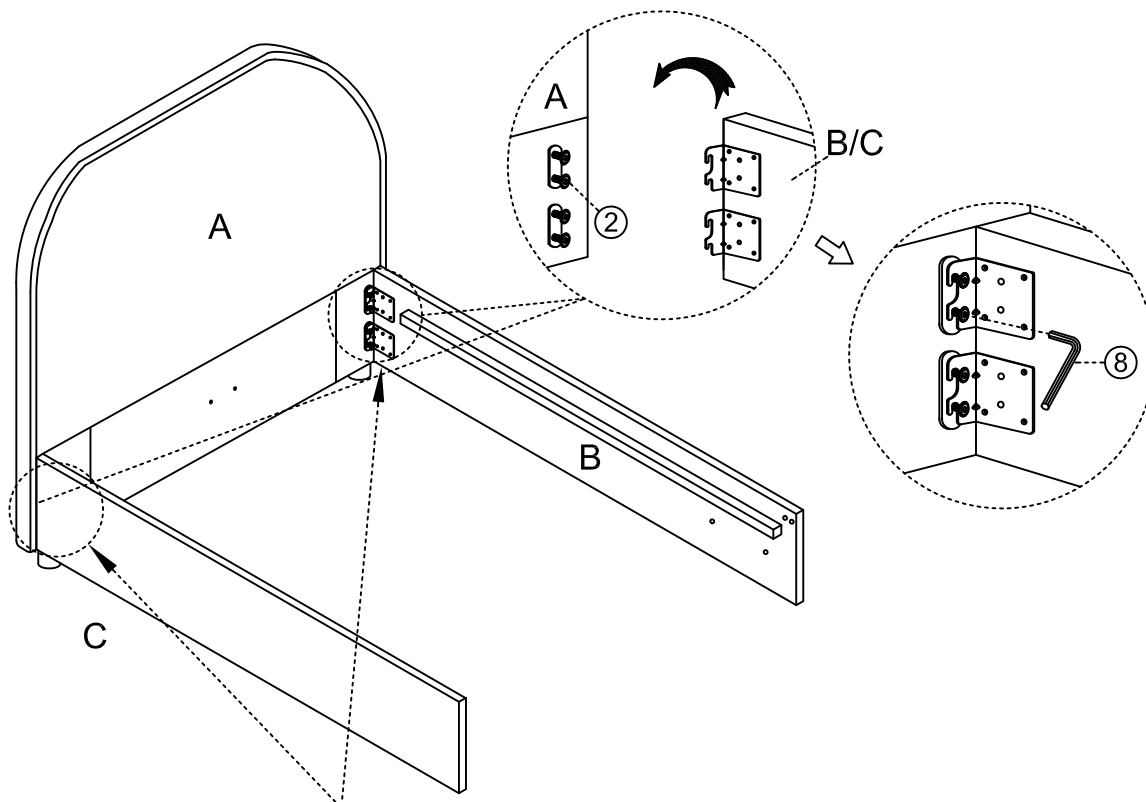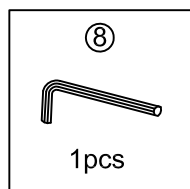

Attach 2 x Side rails (B/C) to the Headboard (A) by slotting the brackets on the Side rails (B/C) over the Big Head Bolts ② as shown. Do not fully tighten Big Head Bolts ② until Step 10.




Step 5

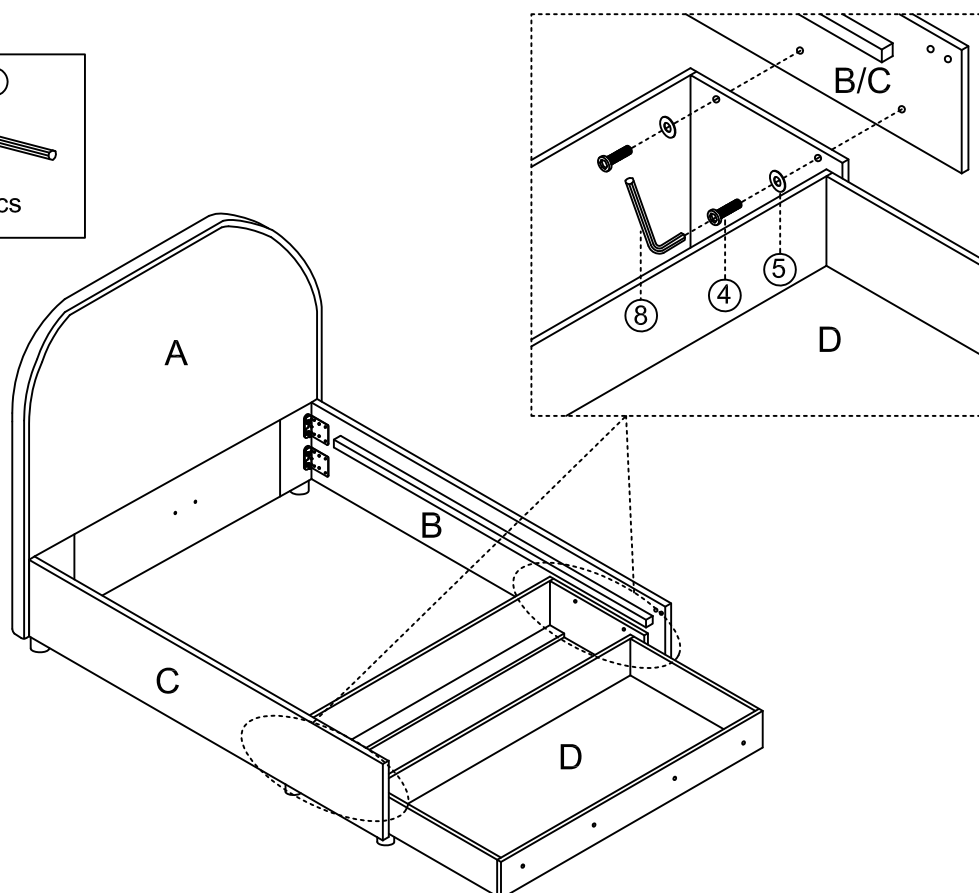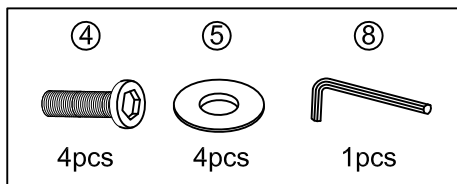

Please place Footboard Drawer (D) into the inner space as shown.

Please pull out the drawer, then attach the Footboard Drawer (D) to Side Rails (B/C) with 4 x Medium Bolts ④ and 4 x Washers ⑤ by using Allen key ⑧. Please do not fully tighten Medium Bolts ④ until Step 6.

Step 6

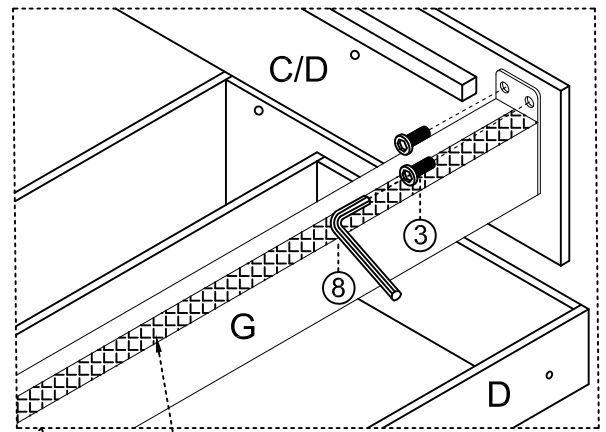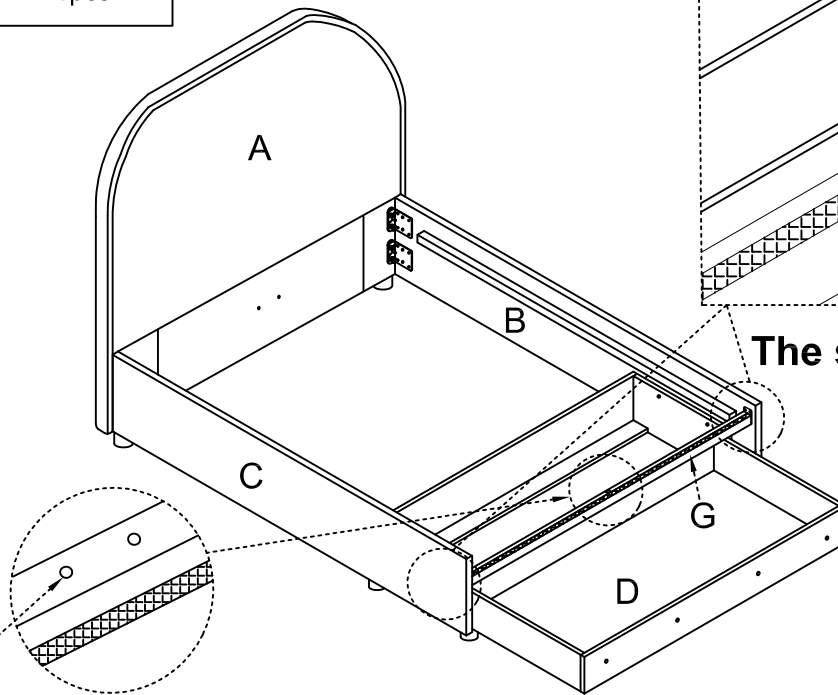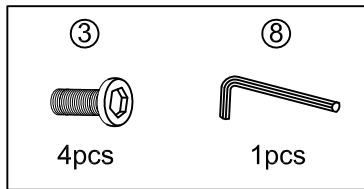


The side with sticker face up.

Attention:


The two drilled holes on Metal Cross Bar (G) is to connect Center Rail (F).

Attach Metal Cross Bar (G) to the Side Rails (B/C) with 4 x Small Bolts (3) by using Allen key (8). Please fully tighten all the 4 x Small Bolts (3) at this Step. Then fully tighten all the 4 x Medium Bolts (4) on the Footboard Drawer (D).


Step 7

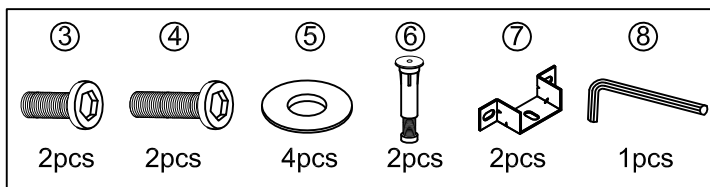


Make sure the ends are aligned

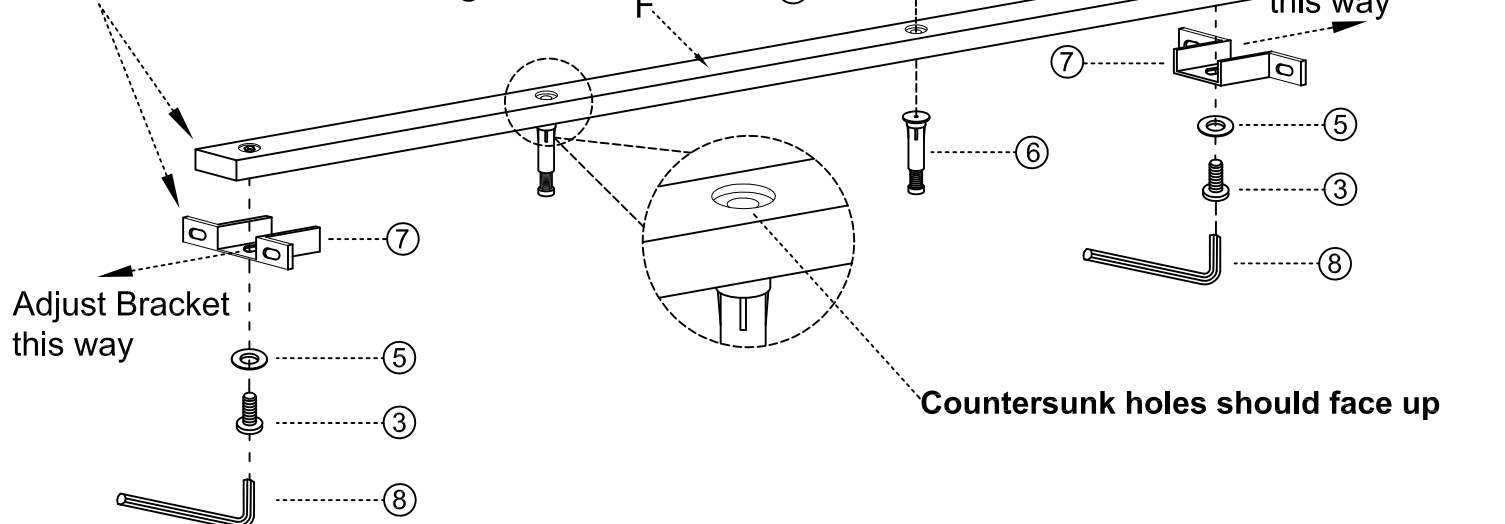

Step 8

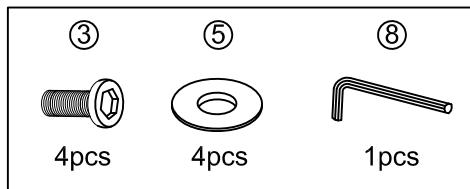


You must use.


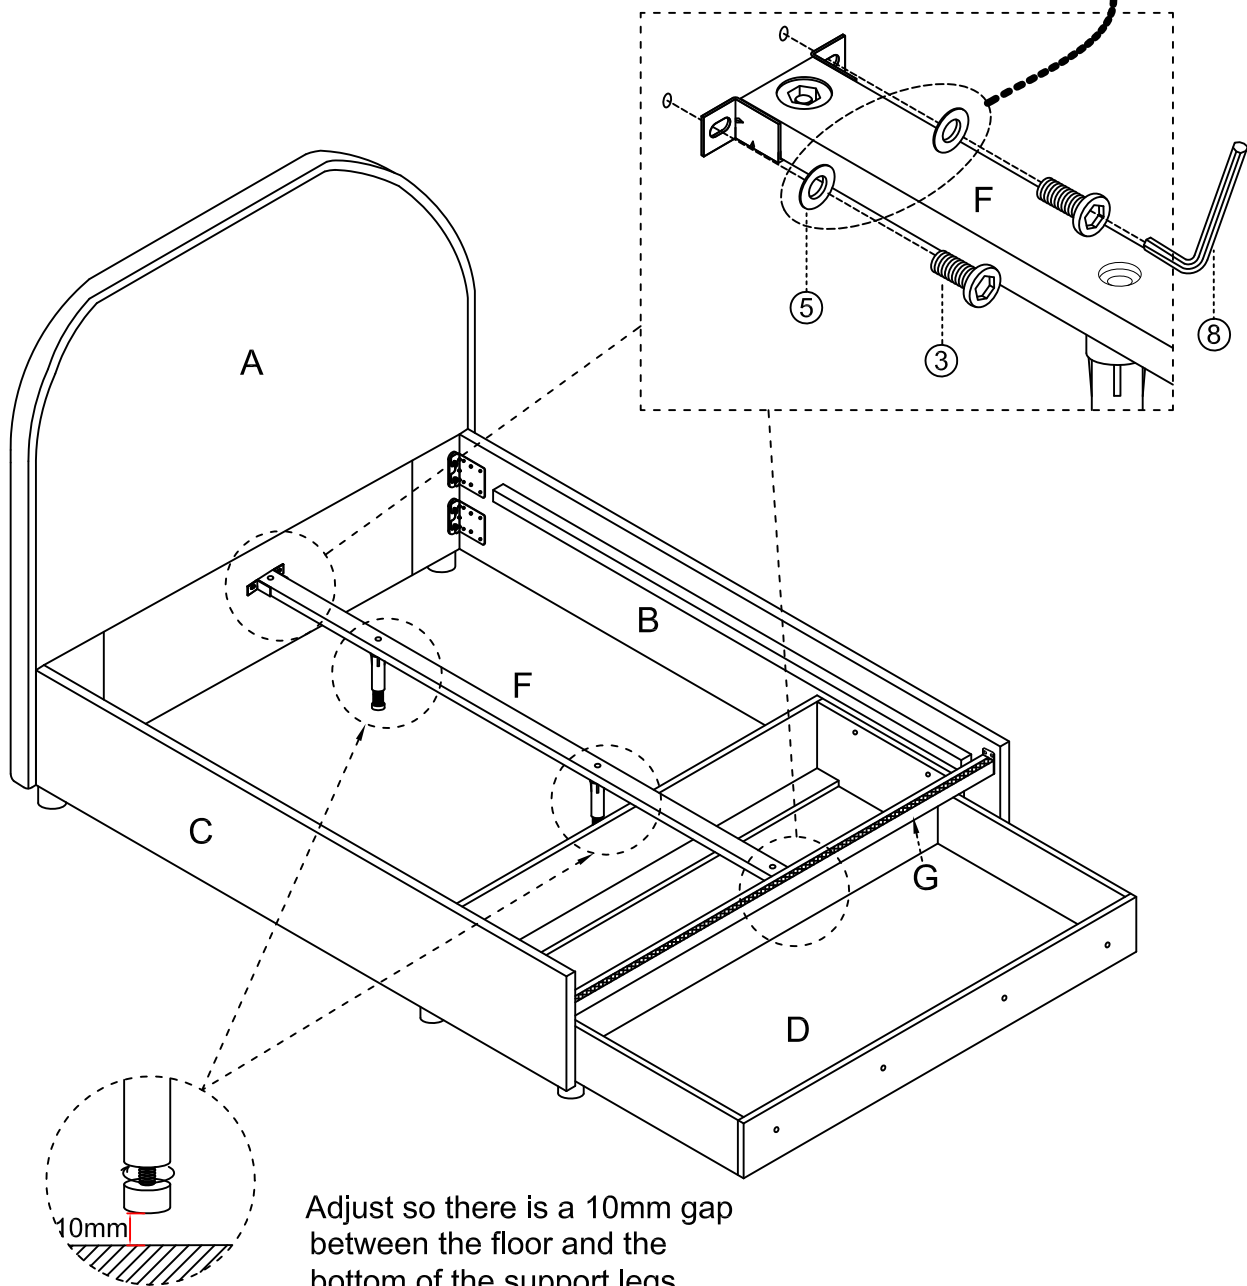


Slot the Center Rail (F) into the Headboard (A) and Metal Cross Bar (G) as shown. Secure using 4 x Small Bolts ③ and 4 x Washers ⑤, fully tightening with Allen Key ⑧ (You MUST use the Washers).

Step 9


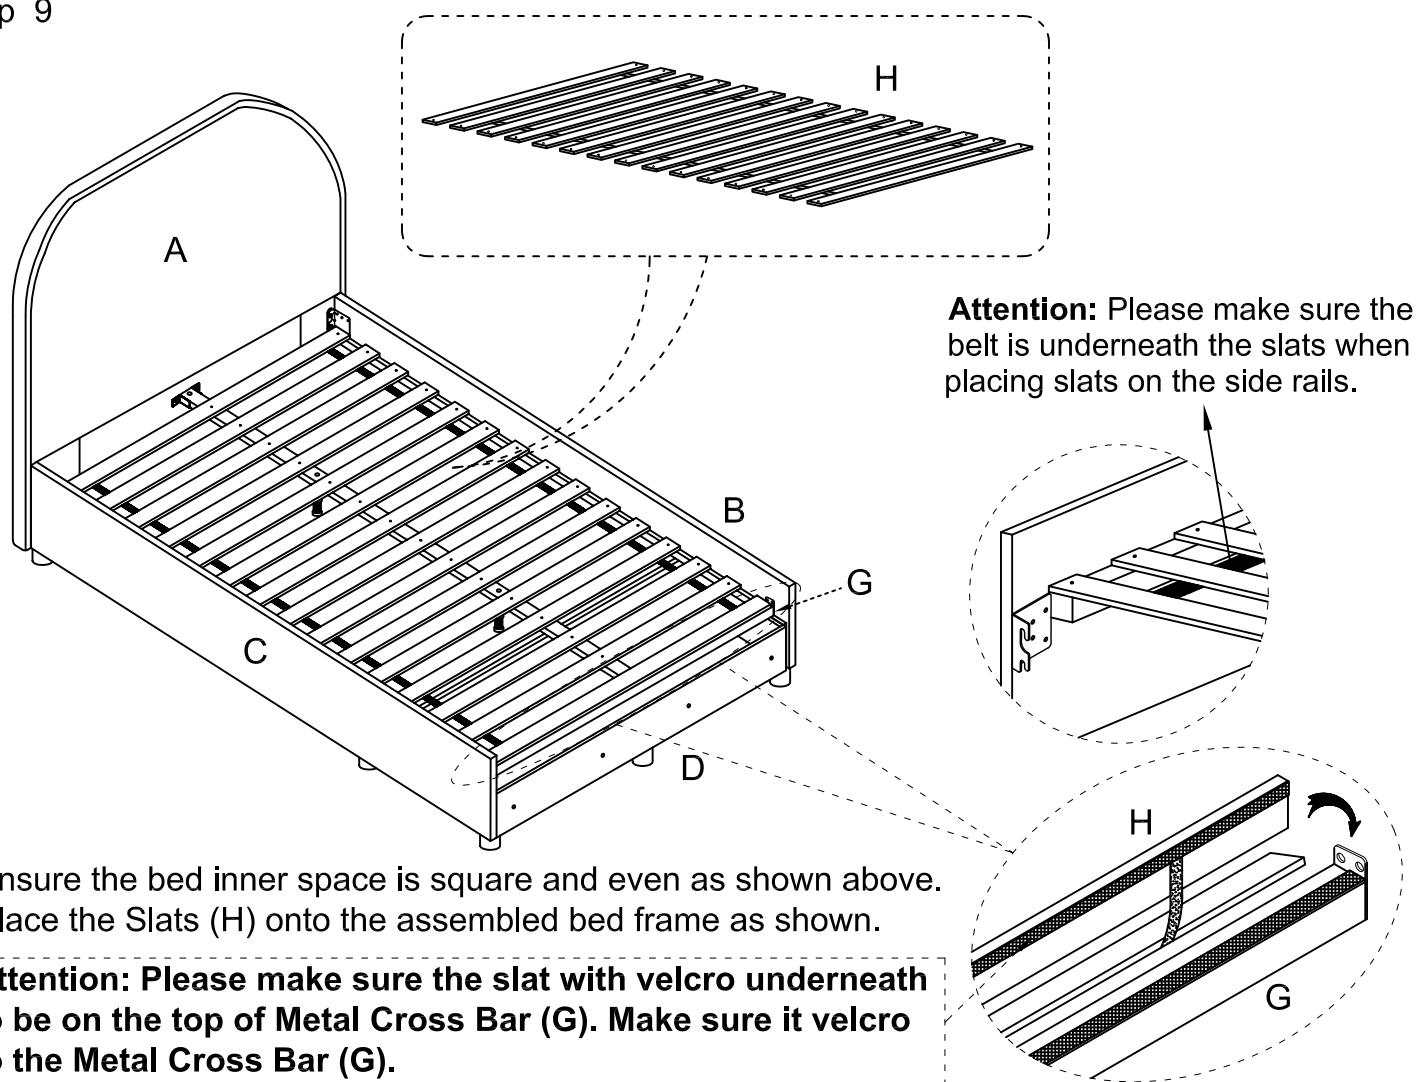


Step 10

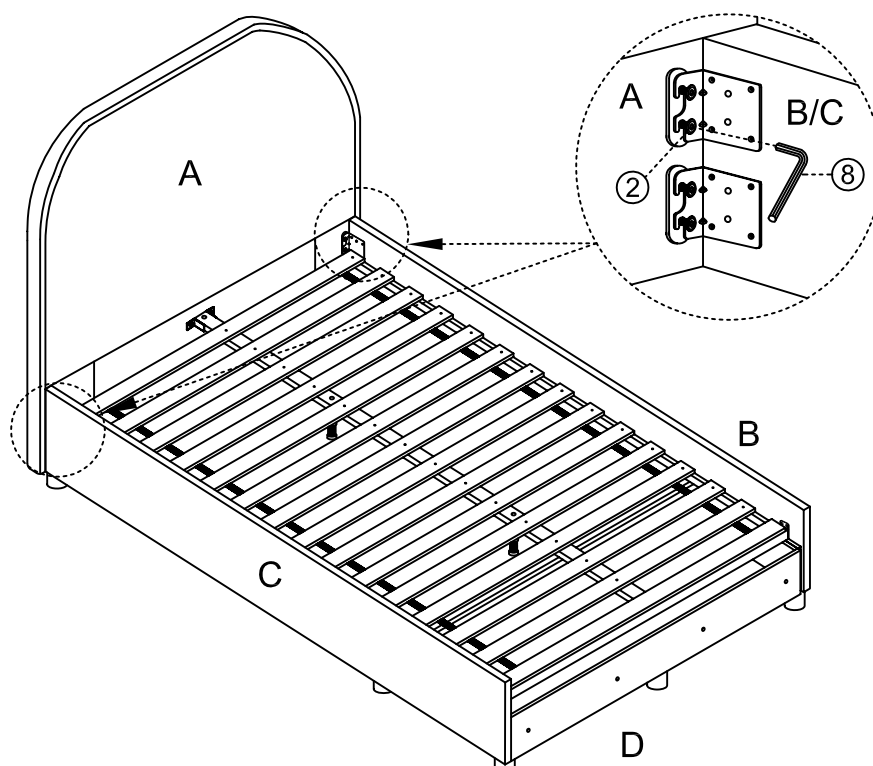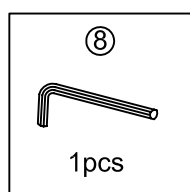



Fully tighten all the Big Head Bolts ② on the Headboard (A).

Step 11

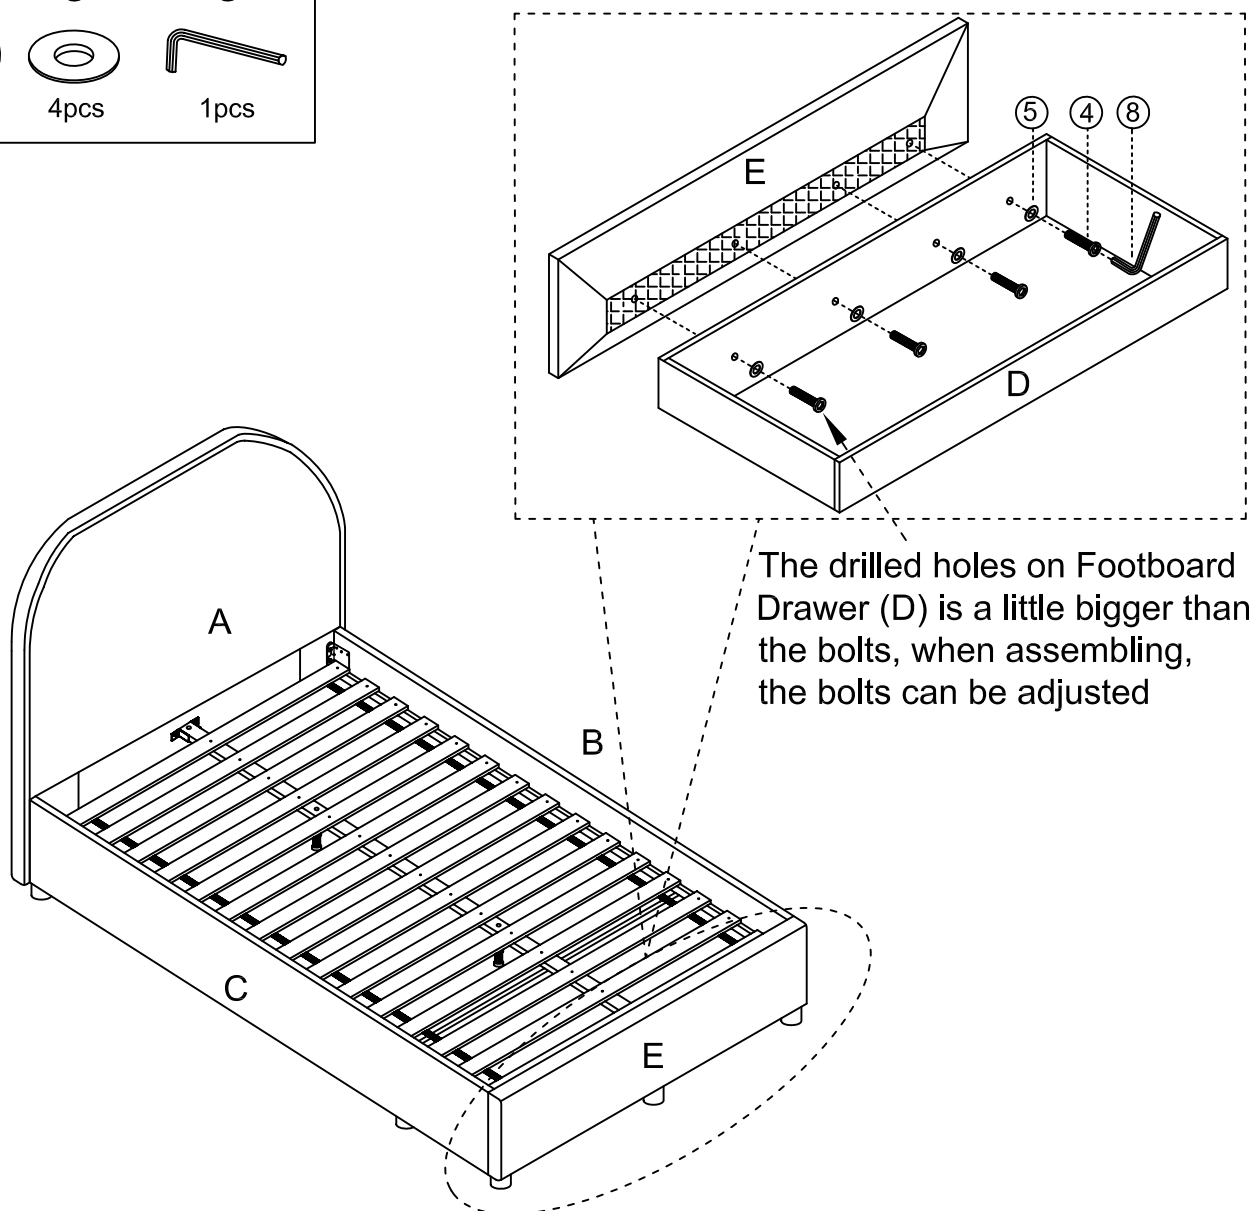
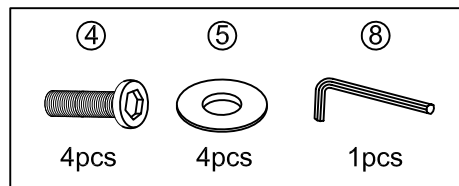


Attach Drawer Board (E) to Footboard Drawer (D) with 4 x Medium Bolts ④ and 4 x Washers ⑤. Fully tighten Medium Bolts ④.

Step 12

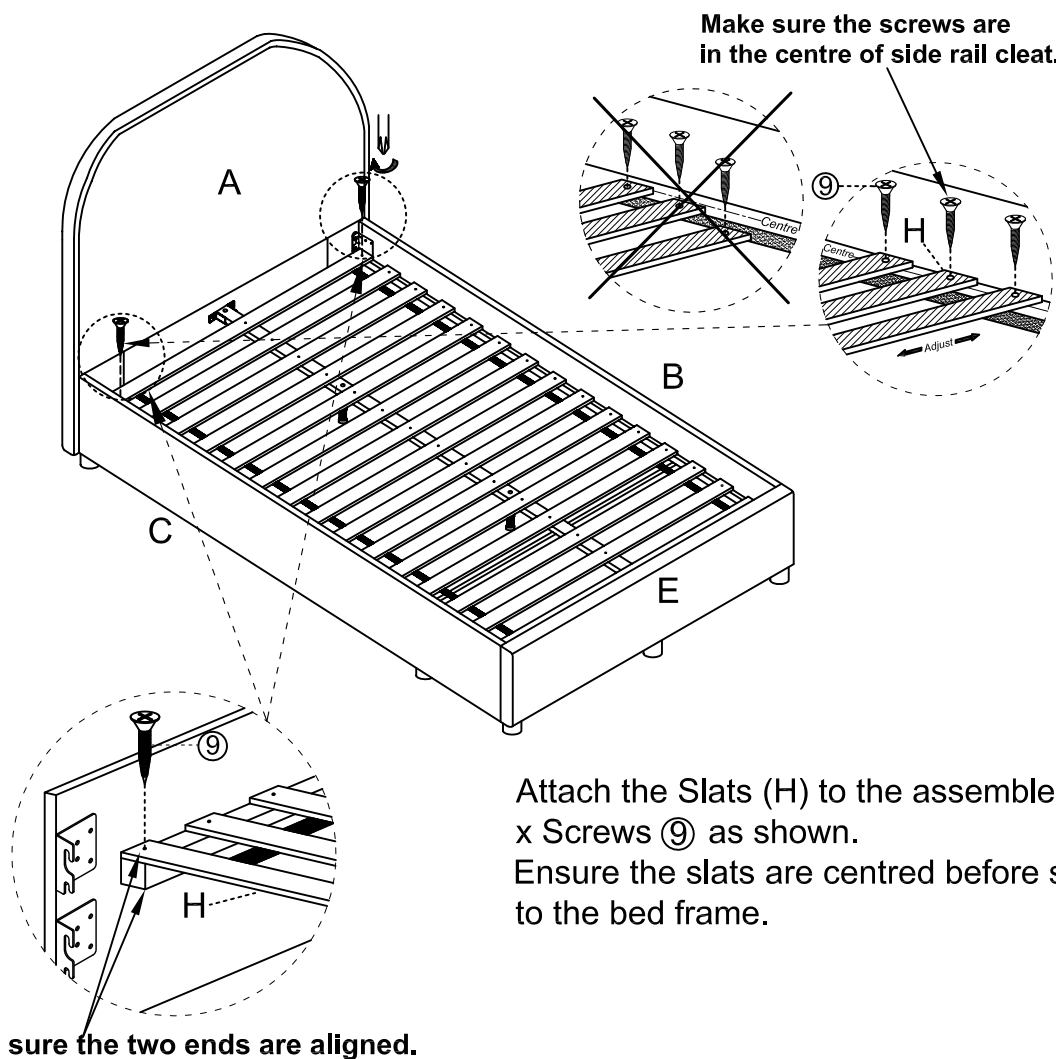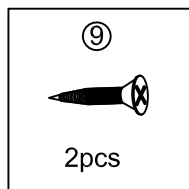

Step 13

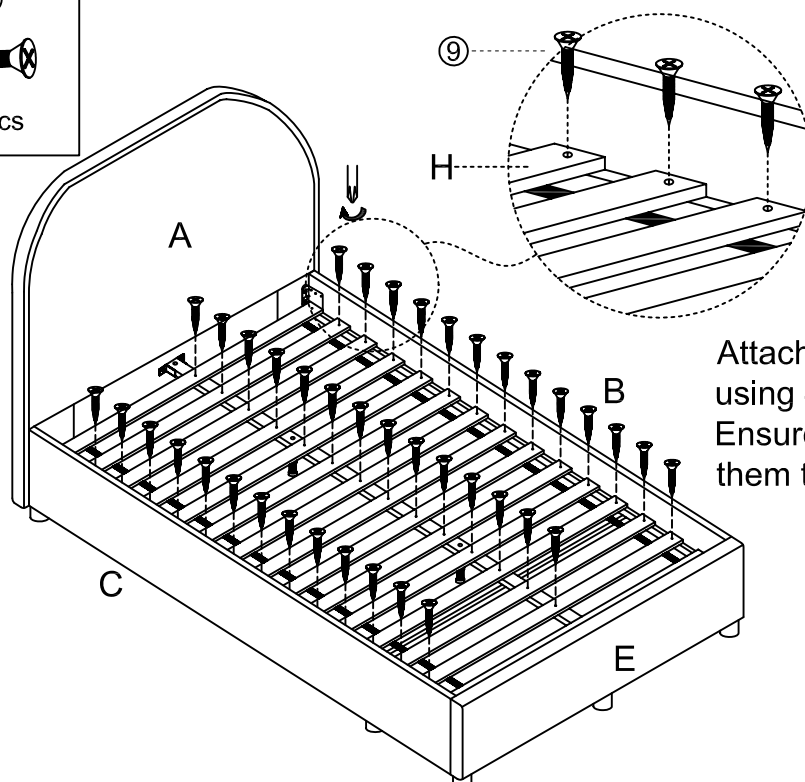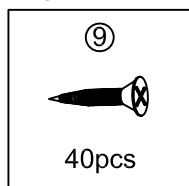

Attach the Slats (H) to the assembled frame using 40 x Screws ⑨ as shown. Ensure the slats are centred before screwing them to the bed frame.

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO SLATS UNLESS MATTRESS IS IN PLACE.