


ASSEMBLY INSTRUCTIONS

60980 - Lennox Single Bed

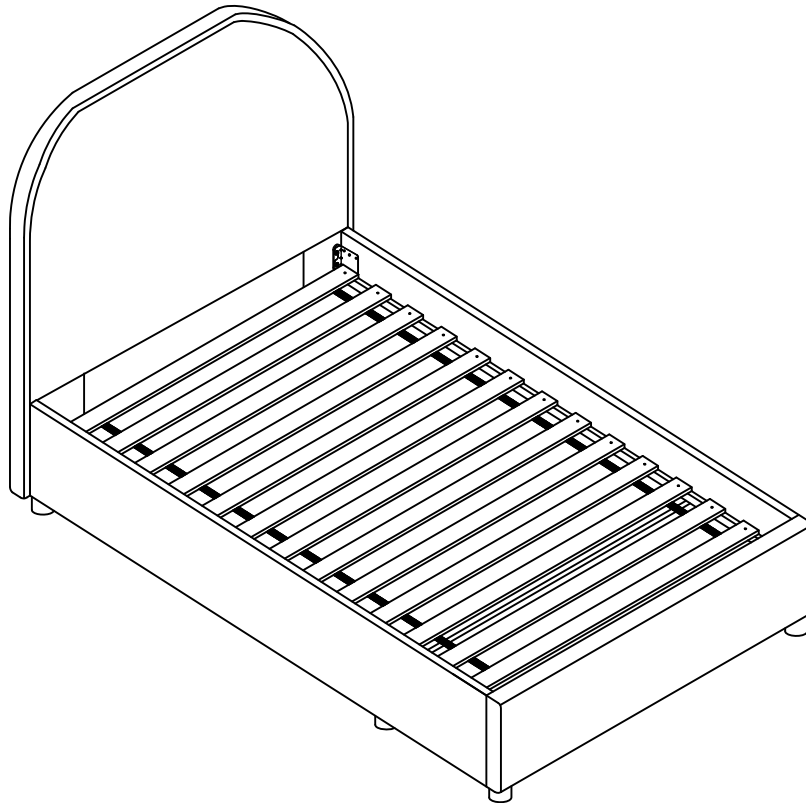







adairs kids









Tools Needed
2 person build




BED FITTINGS

		
Feet ① X 6	Big Head Bolts (M8*18) ② X 8	Medium Bolts (M8*35) ③ X 7
		
Washers (M8*19) ④ X 7	Allen Key (M5) ⑤ X 1	Screws (M4*32) ⑥ X 26

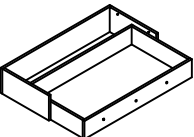PART LIST

		
Headboard A X 1	Right Side Rail B X 1	Left Side Rail C X 1
		
Footboard Drawer D X 1	Drawer Board E X 1	Slats F X 1

Parts

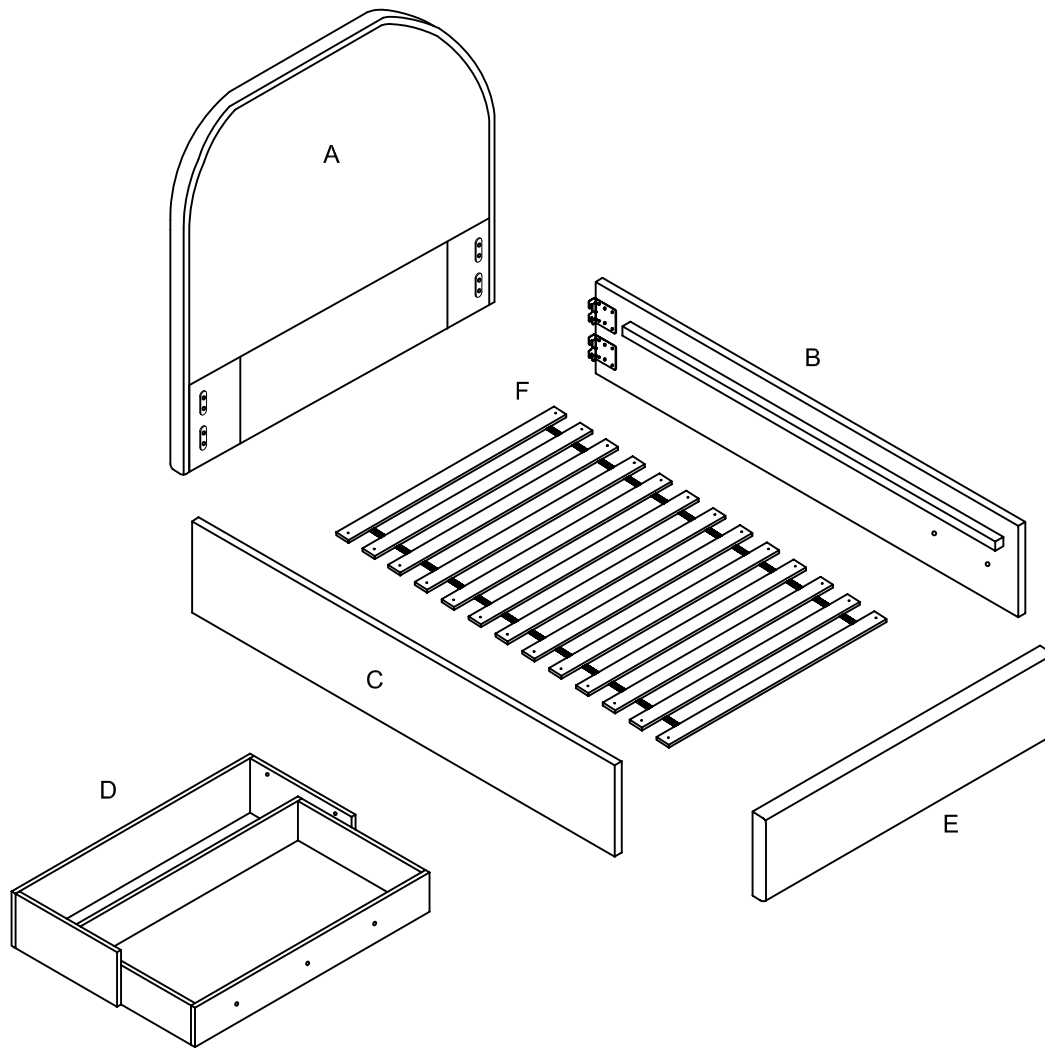


MAXIMUM WEIGHT LOAD: 396 LBS/ 180 KGS.

FOR ASSEMBLY

- First, check the content to make sure that nothing is missing.
- Sort out the parts and fittings as shown.
- Assemble the product step by step.
- It is preferable to rest the product on a soft surface to avoid damage during assembly.
- Do not overtighten screws and fittings.
- Re-tighten all screws and fittings periodically.


Adairs Retail Group Pty Ltd
Level 9, One Middle Road,
Chadstone, VIC, 3148
T 61 3 8888 4500
www.adairs.com.au www.adairs.co.nz

Step 1

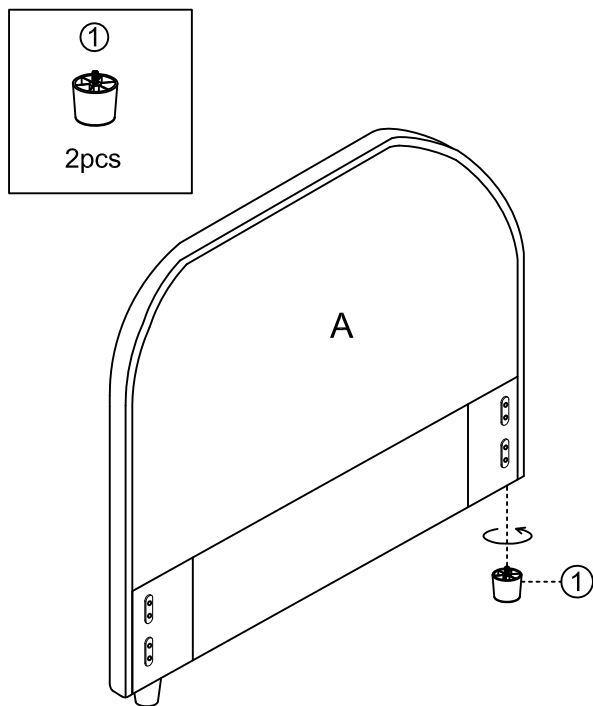




Install 2 x Feet ① on the bottom of Headboard (A), rotate the feet until they are fully tightened.

Step 2

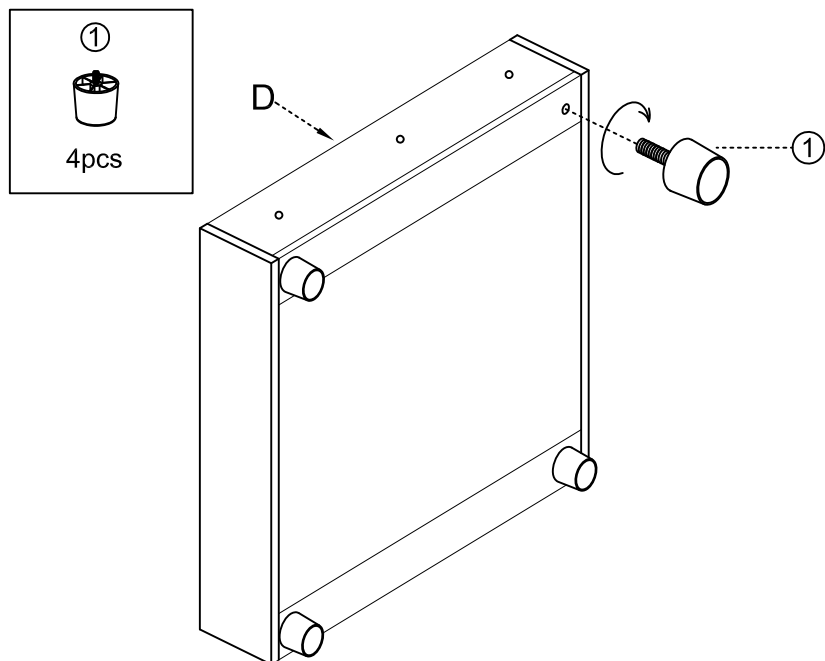



Install 4 x Feet ① on the bottom of Footboard Drawer (D) as shown, please make sure you tighten all of them.

Step 3

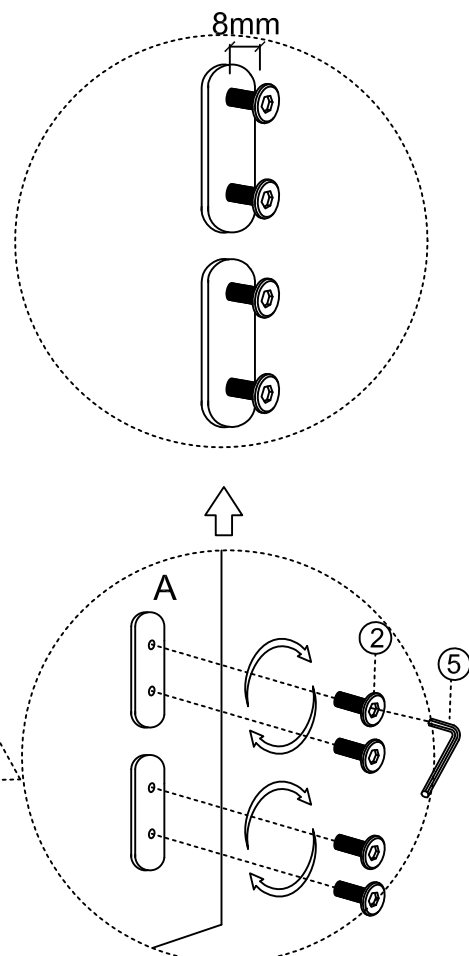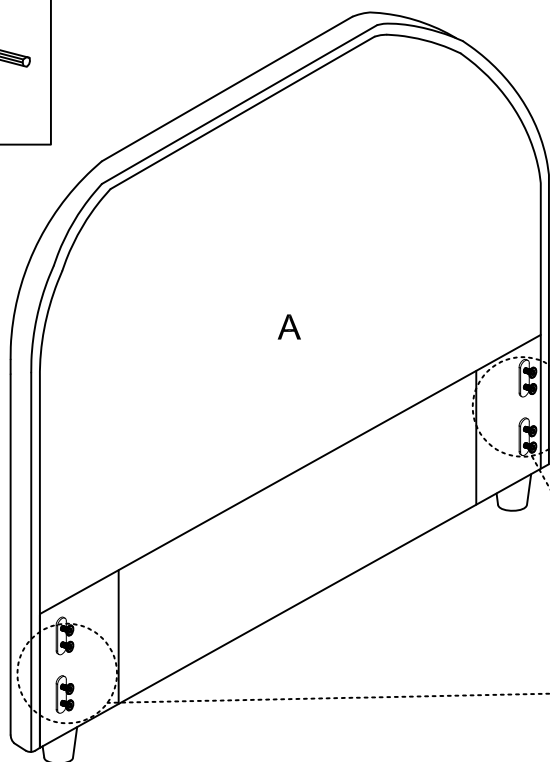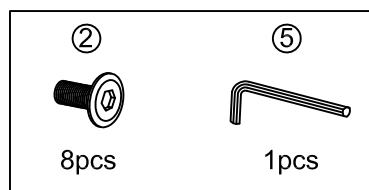



Insert 8 x Big Head Bolts ② into the brackets on the Headboard (A) and tighten two thirds of the way with Allen key ⑤ as shown.

Step 4

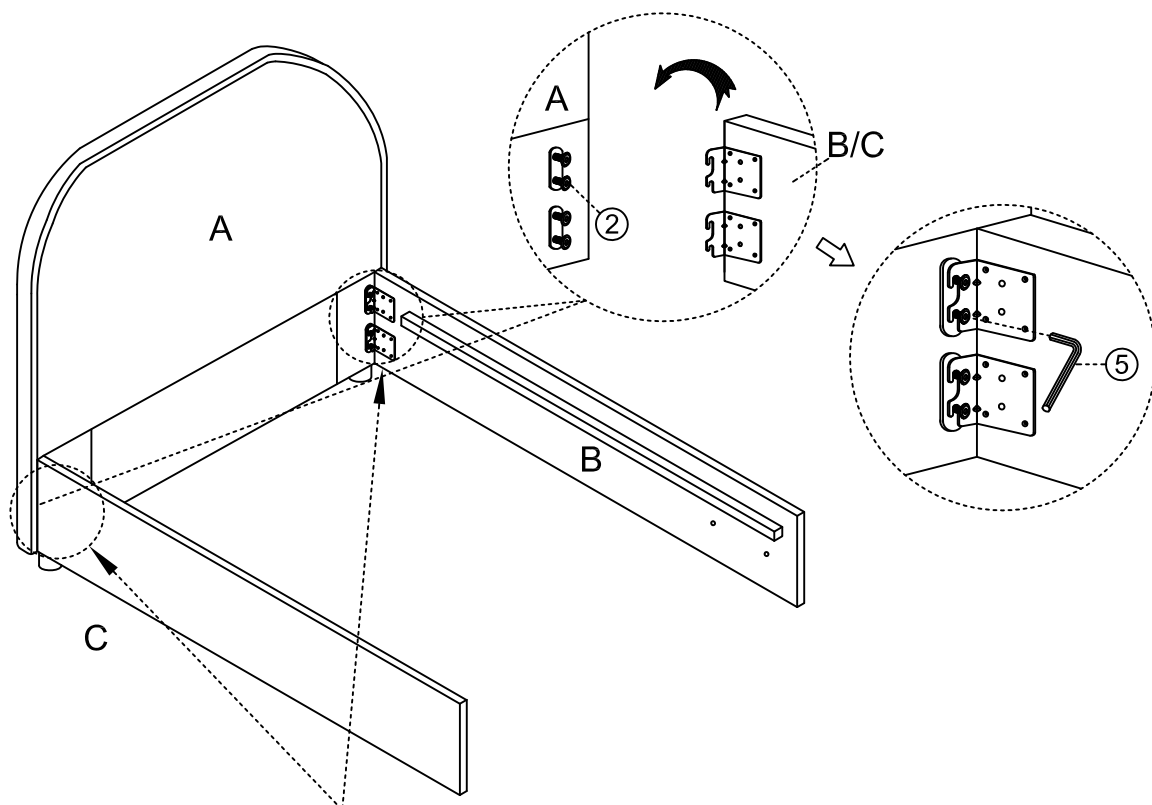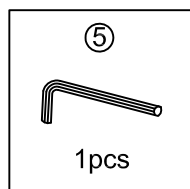

Attach 2 x Side rails (B/C) to the Headboard (A) by slotting the brackets on the Side rails (B/C) over the Big Head Bolts ② as shown. Do not fully tighten Big Head Bolts ② until Step 7.


Step 5

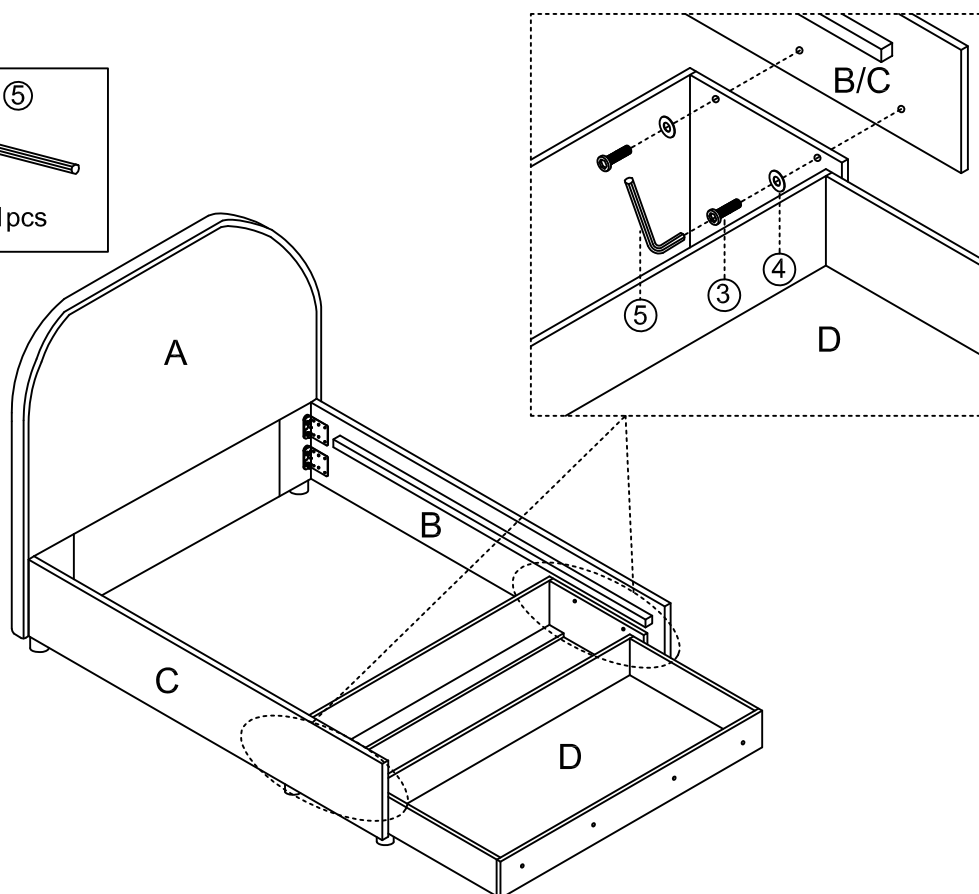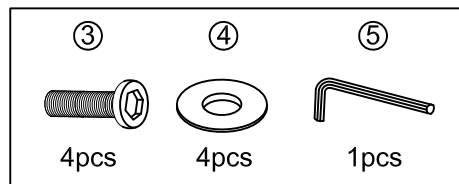

Please place Footboard Drawer (D) into the inner space as shown.



Please pull out the drawer, then attach the Footboard Drawer (D) to Side Rails (B/C) with 4 x Medium Bolts ③ and 4 x Washers ④ by using Allen key ⑤. Fully tighten all the Medium Bolts ③.

Step 6

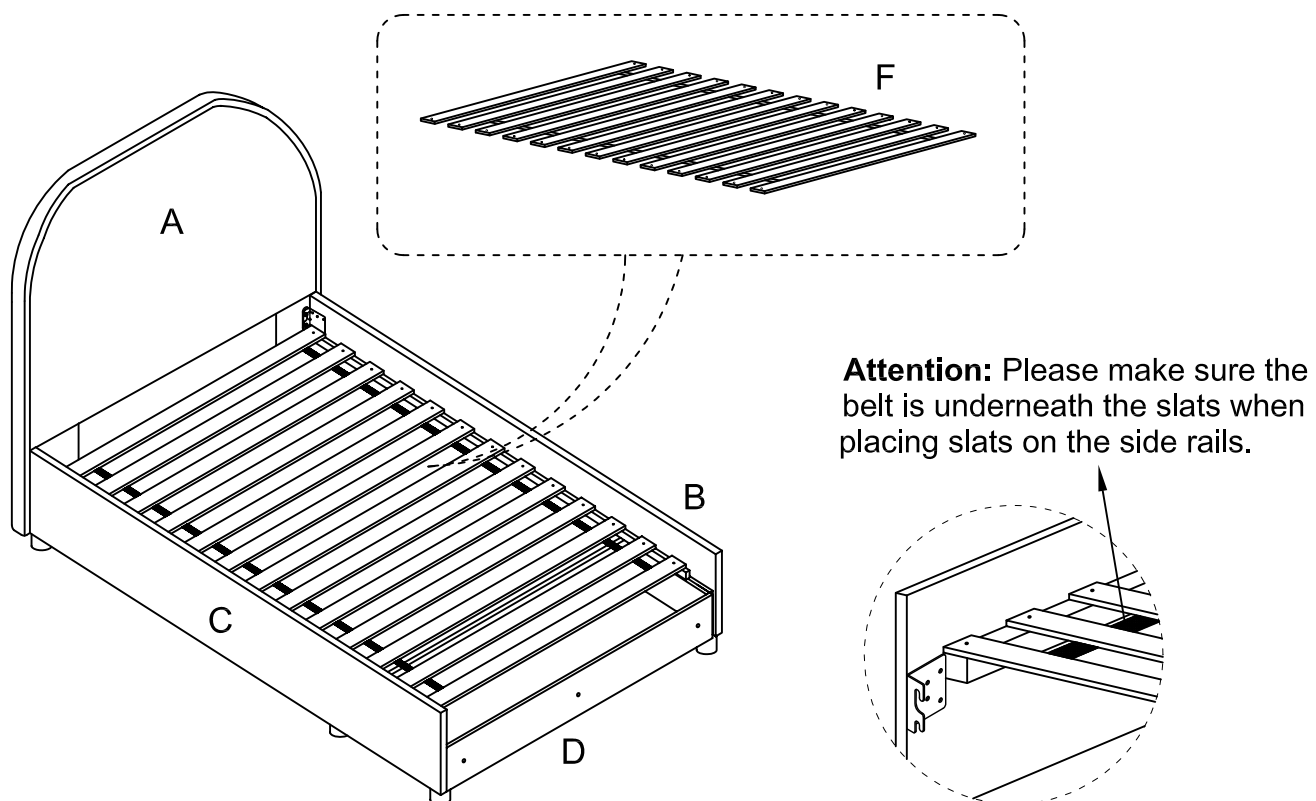



Ensure the bed inner space is square and even as shown above.
Place the Slats (F) onto the assembled bed frame as shown.

Step 7

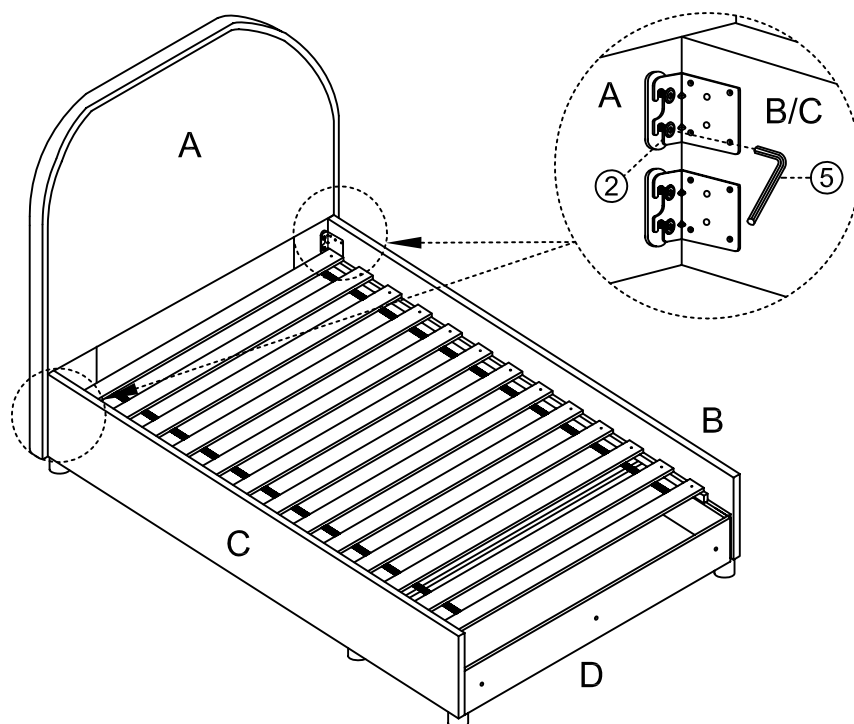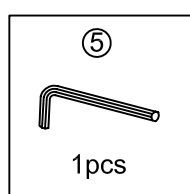



Fully tighten all the Big Head Bolts ② on the Headboard (A).

Step 8

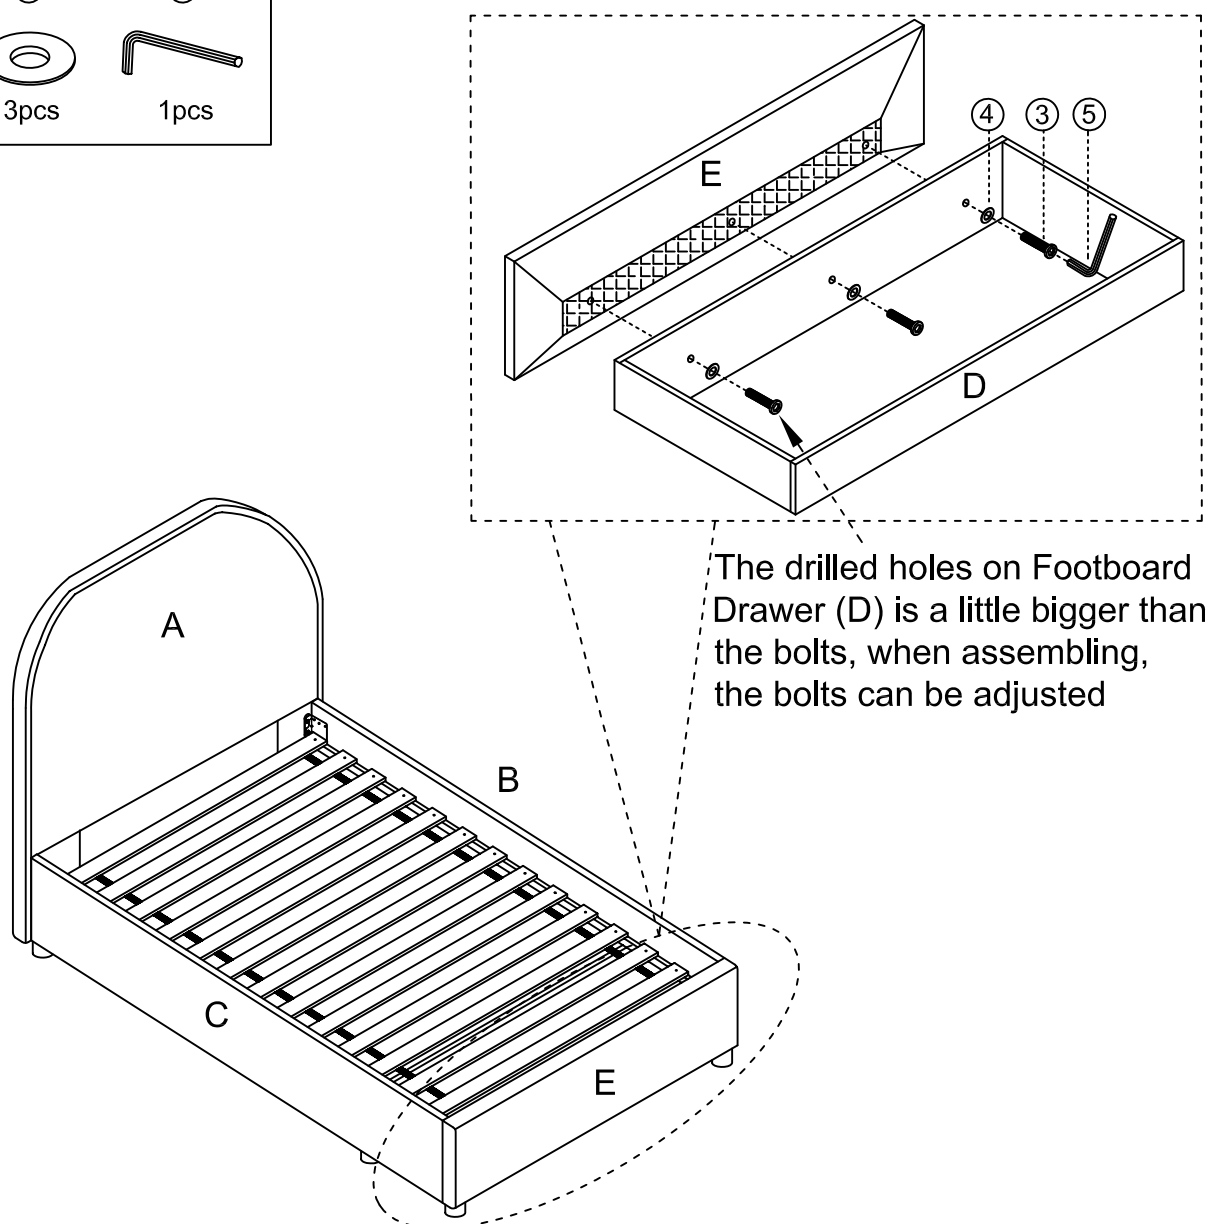
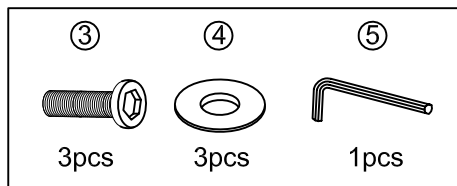


Attach Drawer Board (E) to Footboard Drawer (D) with 3 x Medium Bolts ③ and 3 x Washers ④. Fully tighten Medium Bolts ③.

Step 9

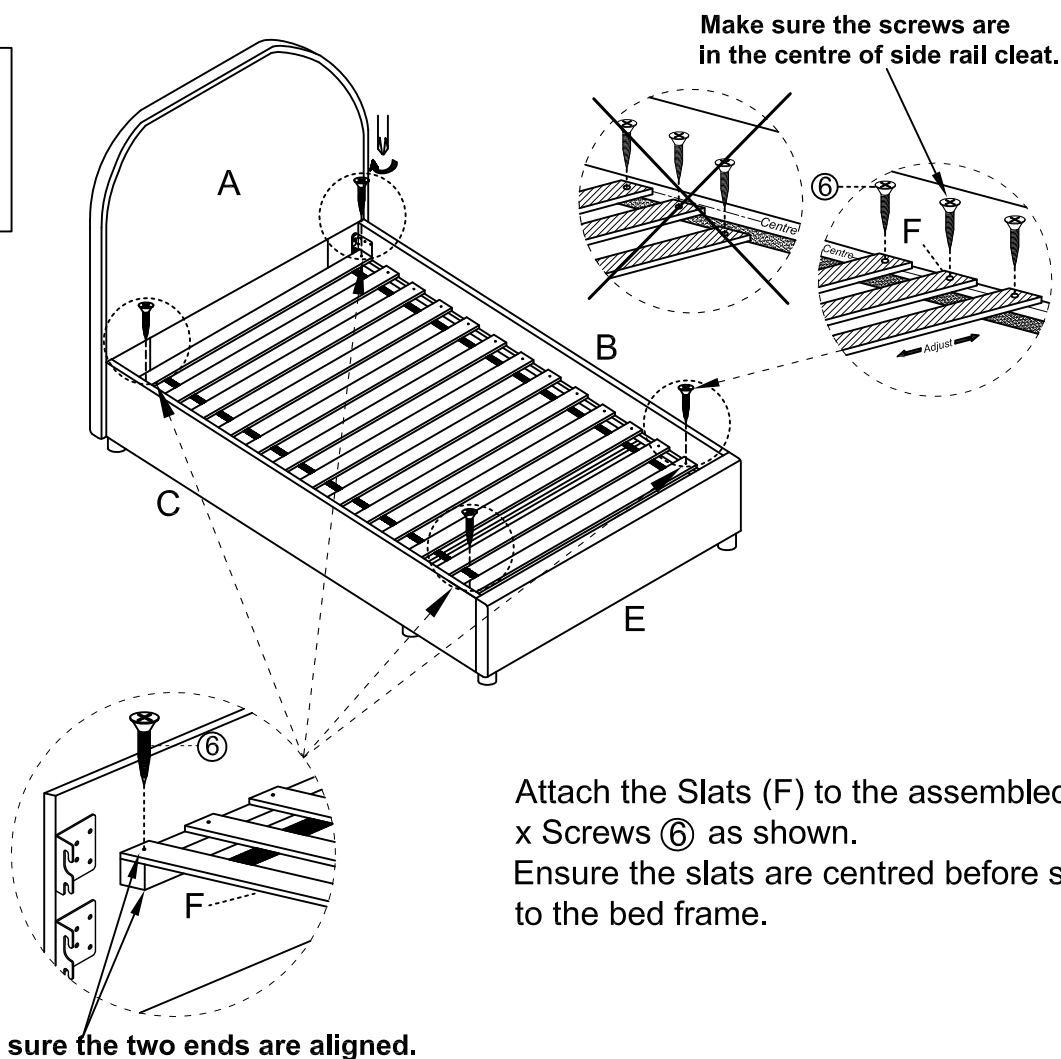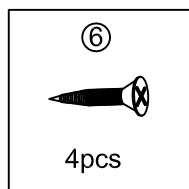

Step 10

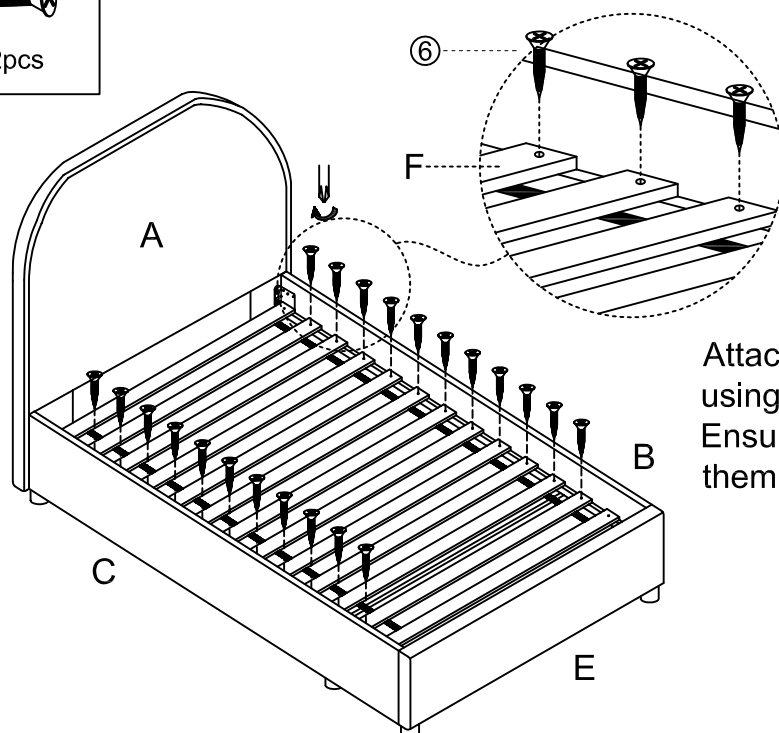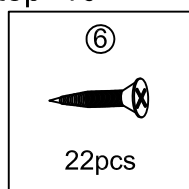

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO SLATS UNLESS MATTRESS IS IN PLACE.