

SMITH NURSERY FURNITURE

COT NATURAL

INSTRUCTIONS

PRODUCT CODE: 60999

COUNTRY OF ORIGIN: Vietnam

COMPOSITION: EU Ash, Plywood & China Raffia.

IMPORTANT: PLEASE READ THE INSTRUCTIONS CAREFULLY
AND KEEP FOR FUTURE REFERENCE.

FOR ASSEMBLY:


Adairs Cots are designed and tested to ensure they comply with Australian & New Zealand safety standards. Your cot features an important warning label with advice regarding safe sleeping. This is a permanent label and a mandatory requirement of the safety standard. It is important your cot is assembled and positioned in your Nursery so the label is always visible during everyday use.

ADAIRS RETAIL GROUP

Adairs Corporate Office, Level 9, 1 Middle Road, Chadstone, VIC 3148



adairs kids

WARNING: 
INFANT SHOULD BE
PLACED TO SLEEP ON A
FIRM, FLAT SURFACE.
PLACE INFANT ON THEIR
BACK WHEN USING THIS
PRODUCT.
DO NOT PUT OBJECTS OR
ACCESSORIES IN AN
INFANT'S SLEEP
ENVIRONMENT.
DO NOT PLACE THIS
PRODUCT NEAR A BLIND,
CORD, STRAP OR SIMILAR
ITEM THAT COULD
BECOME WRAPPED
AROUND AN INFANT'S
NECK.

WARNING: TO ENSURE
THE SAFETY OF YOUR
COT, REGULARLY
CHECK ALL THE
CONNECTING BOLTS
MAKING SURE THEY
ARE TIGHT.

WARNING: TO PREVENT
FALLS OR SUFFOCATION
THE MAXIMUM
MATTRESS THICKNESS
SHOULD NOT EXCEED
130MM.

WARNING: TO PREVENT
FALLS, THE MATTRESS
BASE OF THIS COT
SHOULD BE ADJUSTED
TO THE LOWEST
POSITION BEFORE THE
CHILD CAN SIT UP.

adairs kids

SMITH NURSERY FURNITURE

COT NATURAL

AUSTRALIA AND NEW ZEALAND (AS/NZS 2172:2013)
RECOMMENDED MATTRESS SIZE 1300mm x 690mm x 130mm

This cot has been manufactured for use with a mattress which measures 690mm wide by 1300mm long and 130mm in thickness. The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40mm when the mattress is pushed to one side or end, and 20mm when the mattress is centred in the cot. This is to minimise the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimise the risk of a child climbing or falling out of the cot.

- Follow the manufacturer's assembly instructions in detail to ensure the safety features of the cot are not compromised.
- Ensure the cot is placed at a reasonable distance from curtains, blinds, heaters and power points. *Keep cot free of any toys, cushions etc that could be used as a foothold or present a danger of suffocation or strangulation.
- Keep medication, String, elastic or small items such as money out of reach from any position in the cot.




CARE INSTRUCTIONS:

- Clean furniture by lightly wiping the surface with a soft dampened cloth.
- Do not use strong house hold cleaners and avoid using hot liquids.
- Avoid contact with sharp edges or objects.
- Do not expose furniture to strong sunlight, direct heat sources, extreme changes in temperature or moisture.
- When moving the furniture, lift into piece do not drag.

WARNING:

- Check this product regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage.
- Do not substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed.

*If you are experiencing a problem with this product please contact the Adairs Retail Group via the following available methods.

 1300 783 005
 info@adairs.com.au
 adairs.com.au/adairs.co.nz



ASSEMBLY INSTRUCTIONS


60999 - SMITH NURSERY FURNITURE COT NATURAL

adairs kids

Please read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on a clean and flat soft surface, such as carpet or rug to prevent from being scratched.

PARTS INCLUDED

- 1. Side Frame : 2pcs
- 2. End Frame : 2pcs
- 3. Mattress Base : 1pc

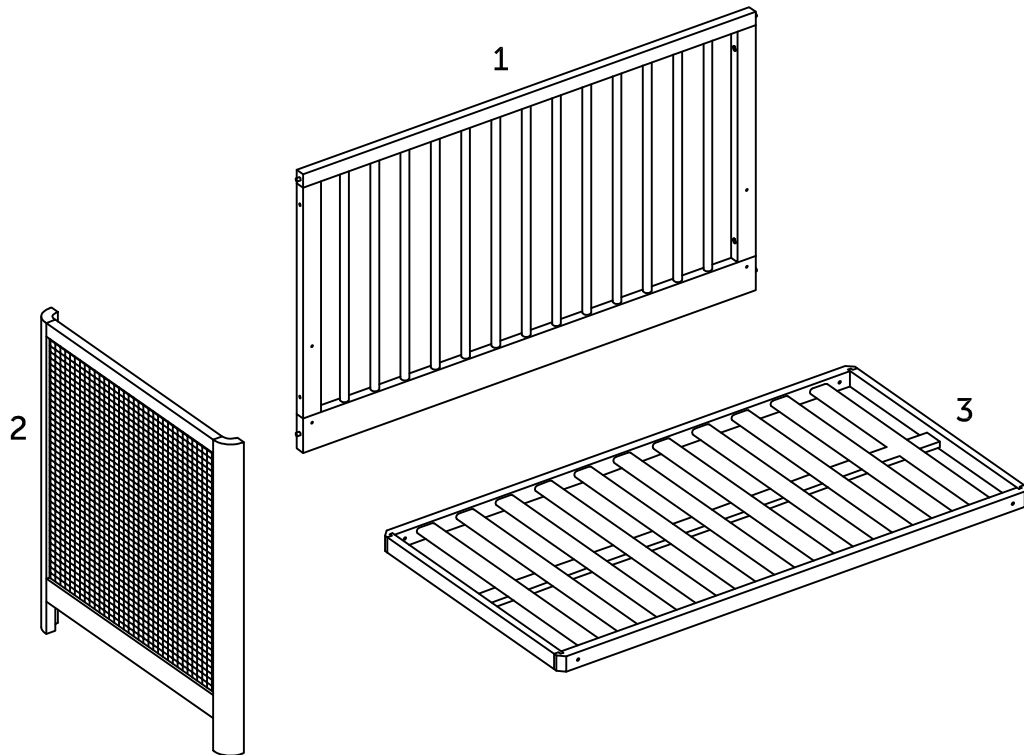


HARDWARE LIST



WARNING:

This package contains small parts.
Keep away from children until assembled.

- A. Long Bolt : 8pcs
- B. Medium Bolt : 4pcs
- C. Short Bolt : 4pcs
- D. Washer : 12pcs
- E. Allen Key : 1pc


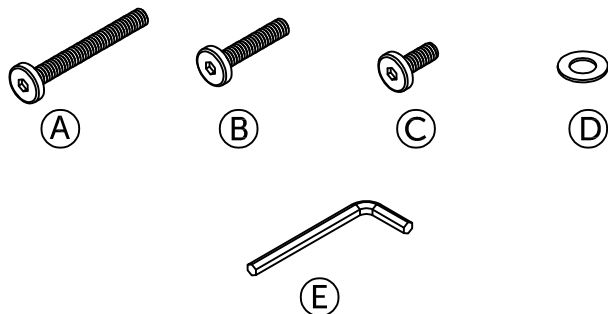


Upper Position

STEP 1

Lay down one of the side frames (1), connect to the two end frame (2) with 4 connecting long bolts (A) and washers (D) to barrel holes.




Note : Do not tighten bolts at this stage.

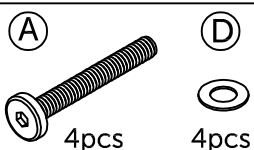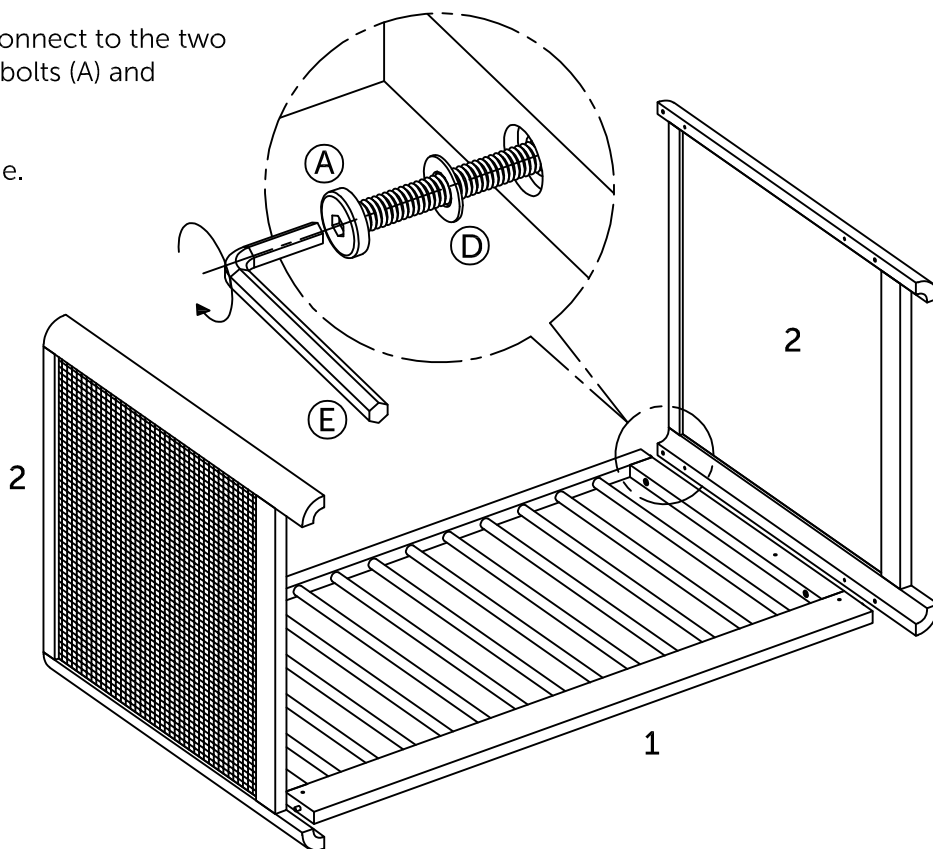

STEP 2

Connect the mattress base (3) in correct orientation as "This side up" indicated on frame to the side frame with 2 connecting bolts (B) and washers (D) at upper position.

Note : Do not tighten bolts at this stage.

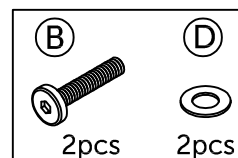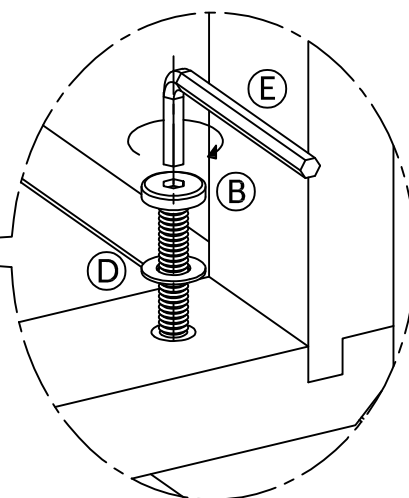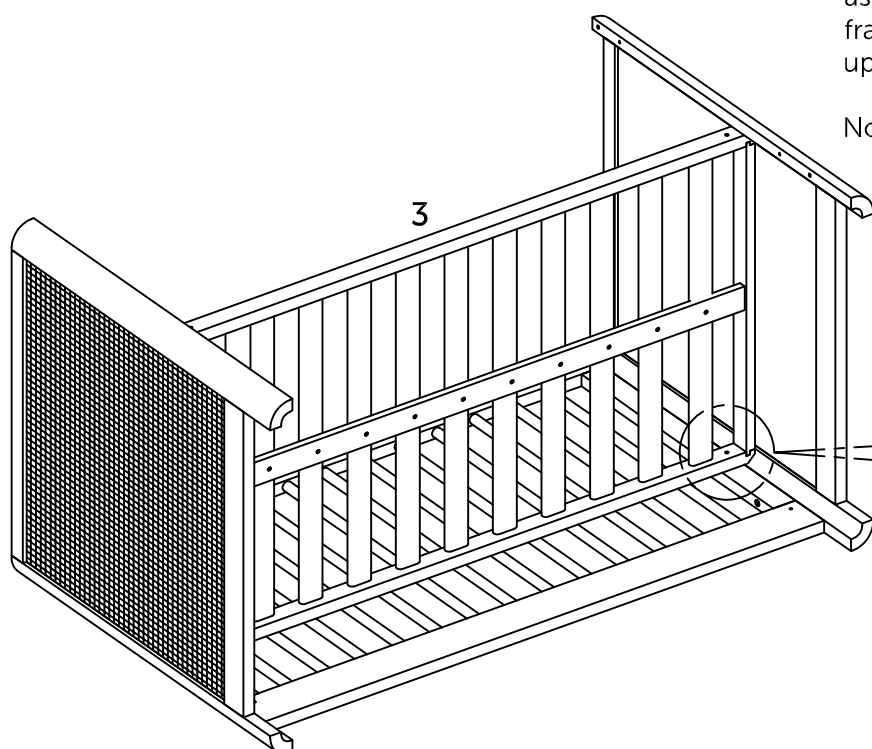


Upper Position

STEP 3

Connect the other side frame (1) to the two end frame with 4 connecting bolts (A) and washers (D) to barrel holes.


Connect the mattress base (3) to the side frame (1) with 2 connecting bolts (B) and washers (D) to barrel holes.

Note : Tighten all the bolts at this stage.

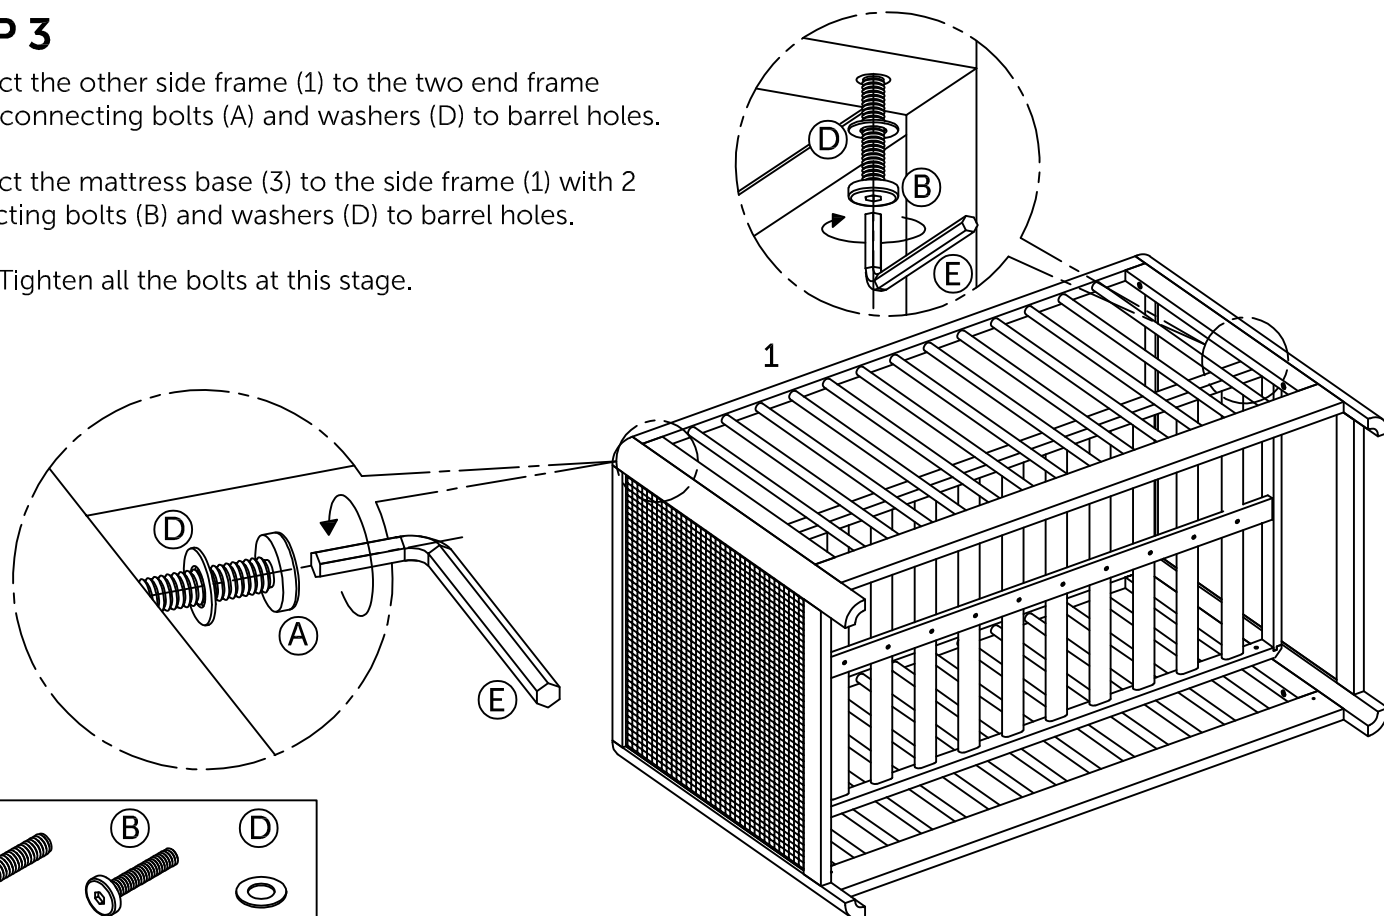

STEP 4


Fill in used position holes on the side frames with 4 connecting bolts (C).

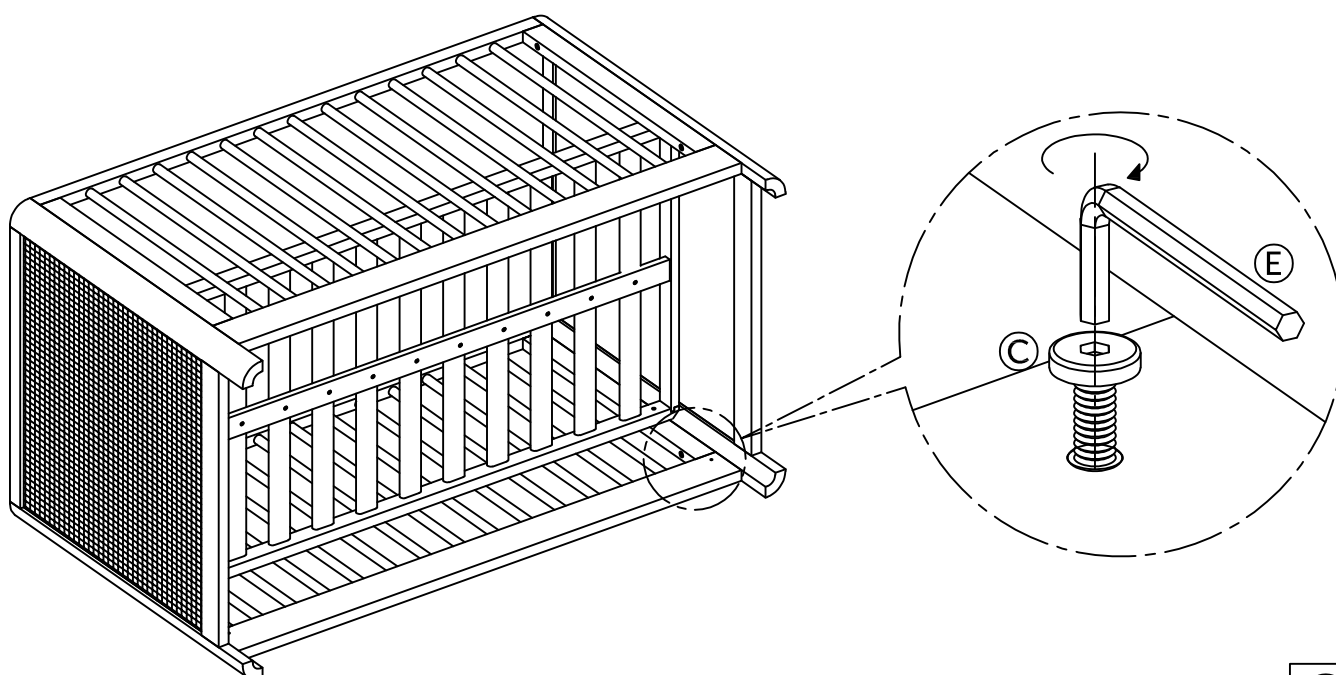

Lower Position


STEP 1

Lay down the cot. Remove 4 connecting bolts (C) from bottom holes.

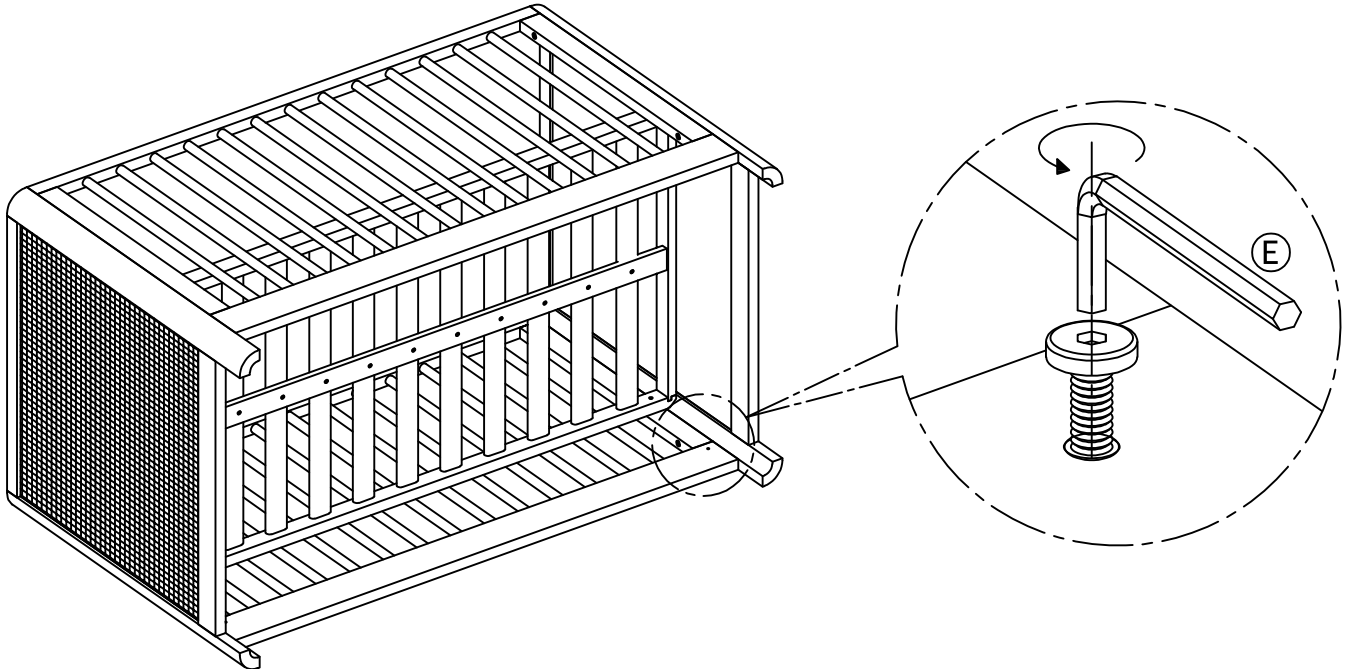

STEP 2

Unscrew 4 connecting bolts (B) and washers (D) to remove mattress base (3) to lower position.



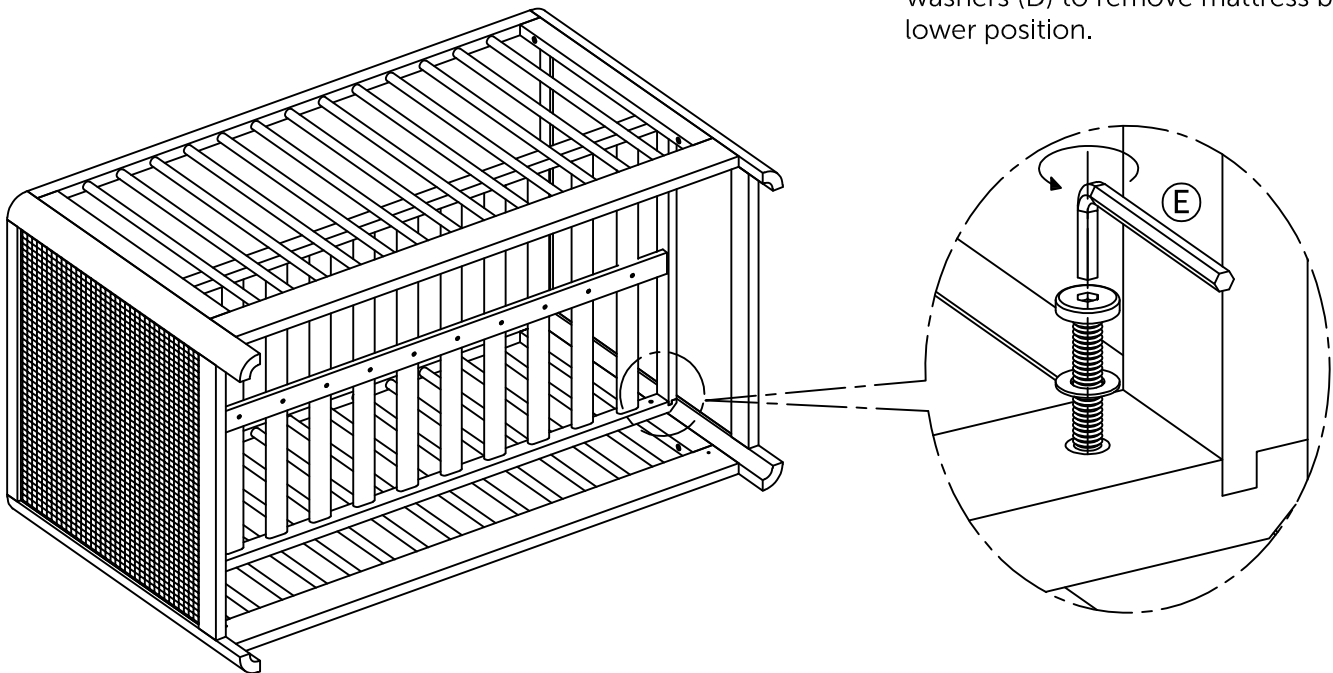


Lower Position

STEP 3

Adjust the mattress base (3) position and connect to two side frame (2) with 4 connecting bolts (B) and washers (D) to bottom holes.

Note : Tighten all the bolts at this stage.

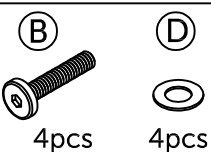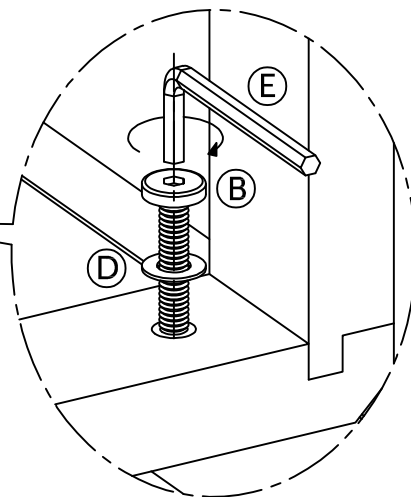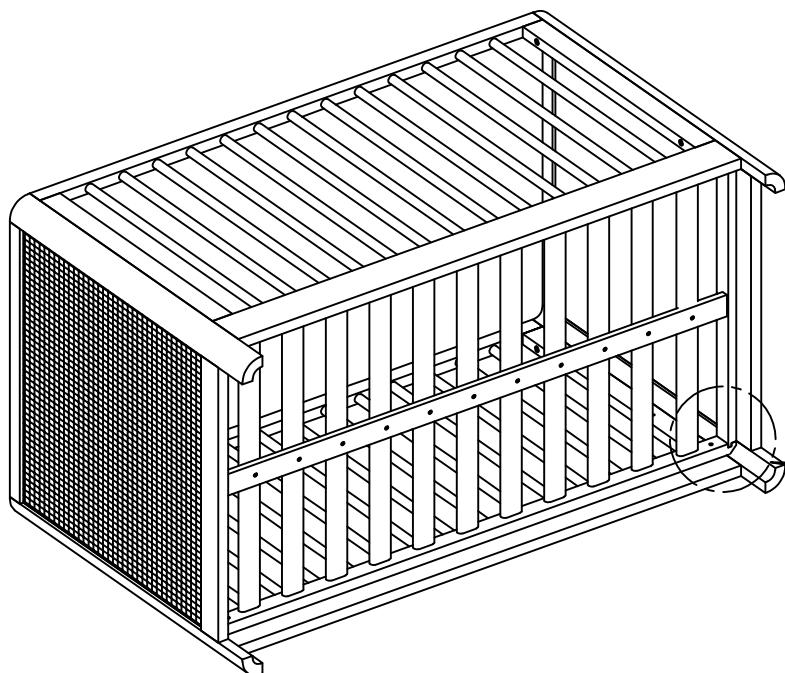

STEP 4

Block the unused position holes on the side frame with 4 connecting bolts (C).

